


KNIFE SLIDE OILER INSTALLATION INSTRUCTIONS 607C1-29

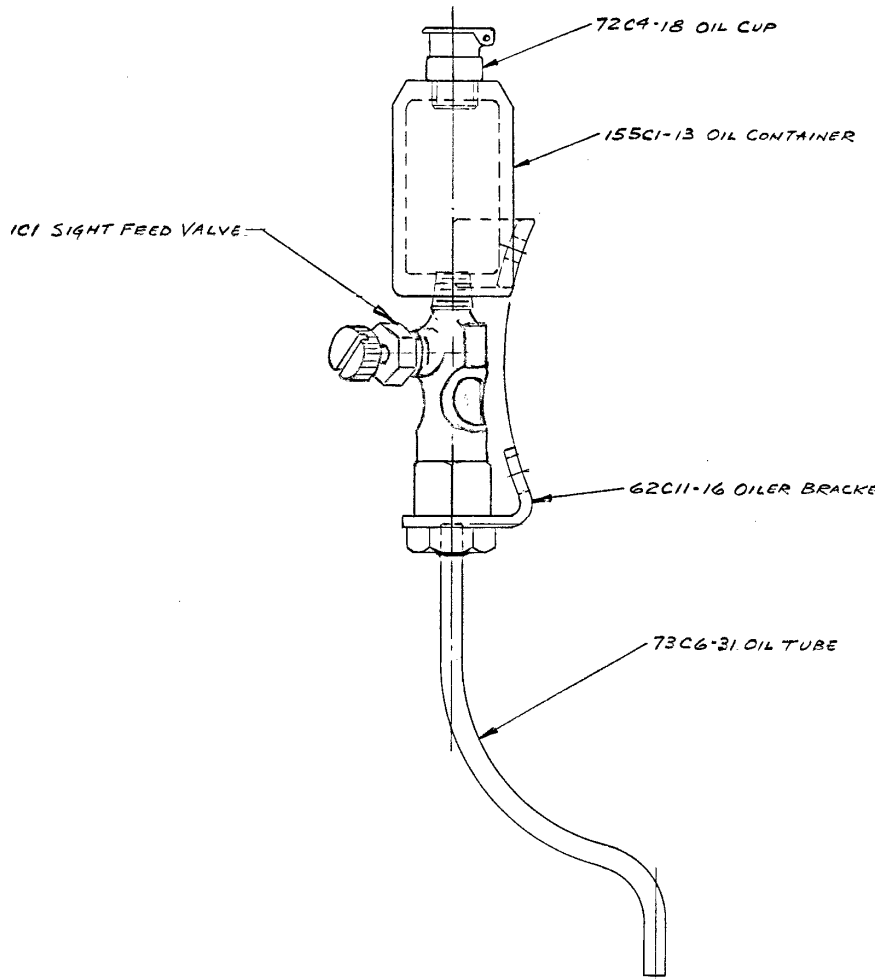

- 1) REMOVE 2 SCREWS FROM THE MOTOR NAME PLATE ON THE MOTOR.
- 2) MOUNT THE PLATE OIL DEVICE (79C12-231) AND THE MOTOR NAME PLATE USING THE #10-32 SCREWS PROVIDED.
NOTE: THE #10-32 SCREWS ARE DIFFERENT LENGTHS:
THE 3/16" LG SCREW GOES TO THE FRONT OF THE MOTOR
THE 1/4" LG SCREW GOES TO THE REAR OF THE MOTOR
- 3) REMOVE THE FRONT HOUSING PLUG SCREW (20C12-62), LOCATED BELOW THE CAPACITOR COVER (53C11-92), FROM THE FRONT HOUSING (90C2-162).
- 4) FIT THE ELBOW OIL DEVICE (146C1-10) TO THE END OF THE OIL TUBE (73C6-31) AND THREAD INTO THE FRONT HOUSING (90C2-162)
- 5) CAREFULLY BEND THE TUBE TO MOUNT THE KNIFE SLIDE OILING DEVICE (607C1-30) TO THE PLATE OIL DEVICE USING THE #4-36 X 5/16" ROUND HEAD SCREWS (300C7-4).
- 6) CLOSE SIGHT VALVE (671C1) AND FILL OIL CONTAINER WITH EASTMAN OIL (242C1)
- 7) SLOWLY OPEN SIGHT VALVE (671C1) TO ALLOW OIL TO FLOW TO KNIFE SLIDE AND ADJUST AS REQUIRED BY APPLICATION.

Eastmanmachine
COMPANY

779 Washington St., Buffalo, N.Y. 14203-1396 U.S.A. • (716)856-2200 • Cable EMCO BUF • Fax (716)856-1140
Manufacturers of Eastman Cloth Cutting and Cloth Spreading Machines