

Raptor


Quick Start Guide

1) Turn Air Pressure "ON"

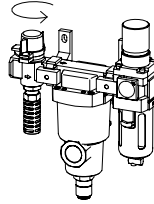


2) Turn Main Power "ON"

3) Turn Blower Power "ON"

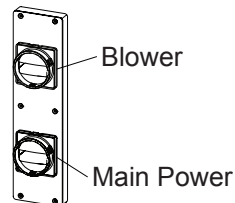


4) Turn Computer "ON"

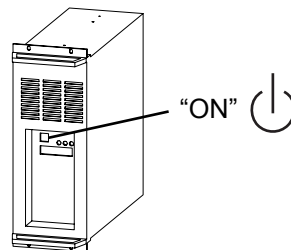

5) Turn Monitor "ON"

NOTE: Allow a short delay to allow the Computer to fully boot.

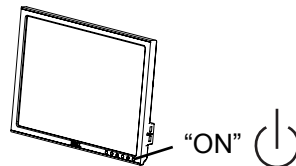

6) Start EASTMANPRO Software



7) Look for Home Position "YES"

8) Look for Table Limits "NO"

NOTE: Checking for Table Limits is only required for the first time the machine is powered up or if any changes to the computer/ position of the limits are changed.

Raptor is READY

Eastman®

Over a Century of Cutting Expertise

Raptor

Quick Start Cutting Guide

1) Open Cut File **FILE** , **OPEN** , Select File , **OPEN**

2) Select proper Units used in the cut file, then select **OK**

3) Adjust Cut File as Required

Example: Turn Off Text Layer
No Check Mark ☐ TEXT LAYER
☐ ABC

4) Send Cut File to Cutter




Select Plotter

5) Move Gantry to Start Position using the Joy Stick.

*Align "Red" Laser Pointer to Edge of First Cut Pattern

6) Press "ZERO" to Lock Start Position

7) Press "NEXT" to Begin Cutting

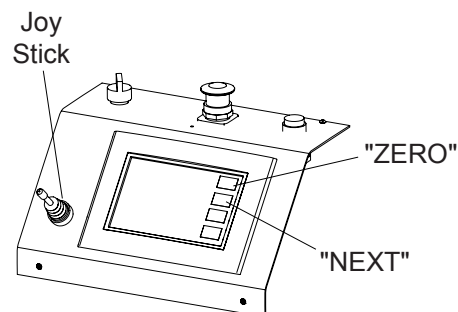

DEFINITION:

Pause "Yellow" " OR " : ",

Press Pause Button or Push Pause to Stop Cutting. This is only Temporary. Press "NEXT" to resume.

E-Stop "Red" "

Press E-Stop to Halt all Machine Functions. Go to Computer to reset E-Stop.

NOTE: E-Stop must be reset to resume cutting. Reset by pressing "NEXT" by resetting the dialog box on the computer.

Press To Reset E-Stop

