


**THE EASTMAN®
Multi-Ply Cutter**

Illustrated Parts List

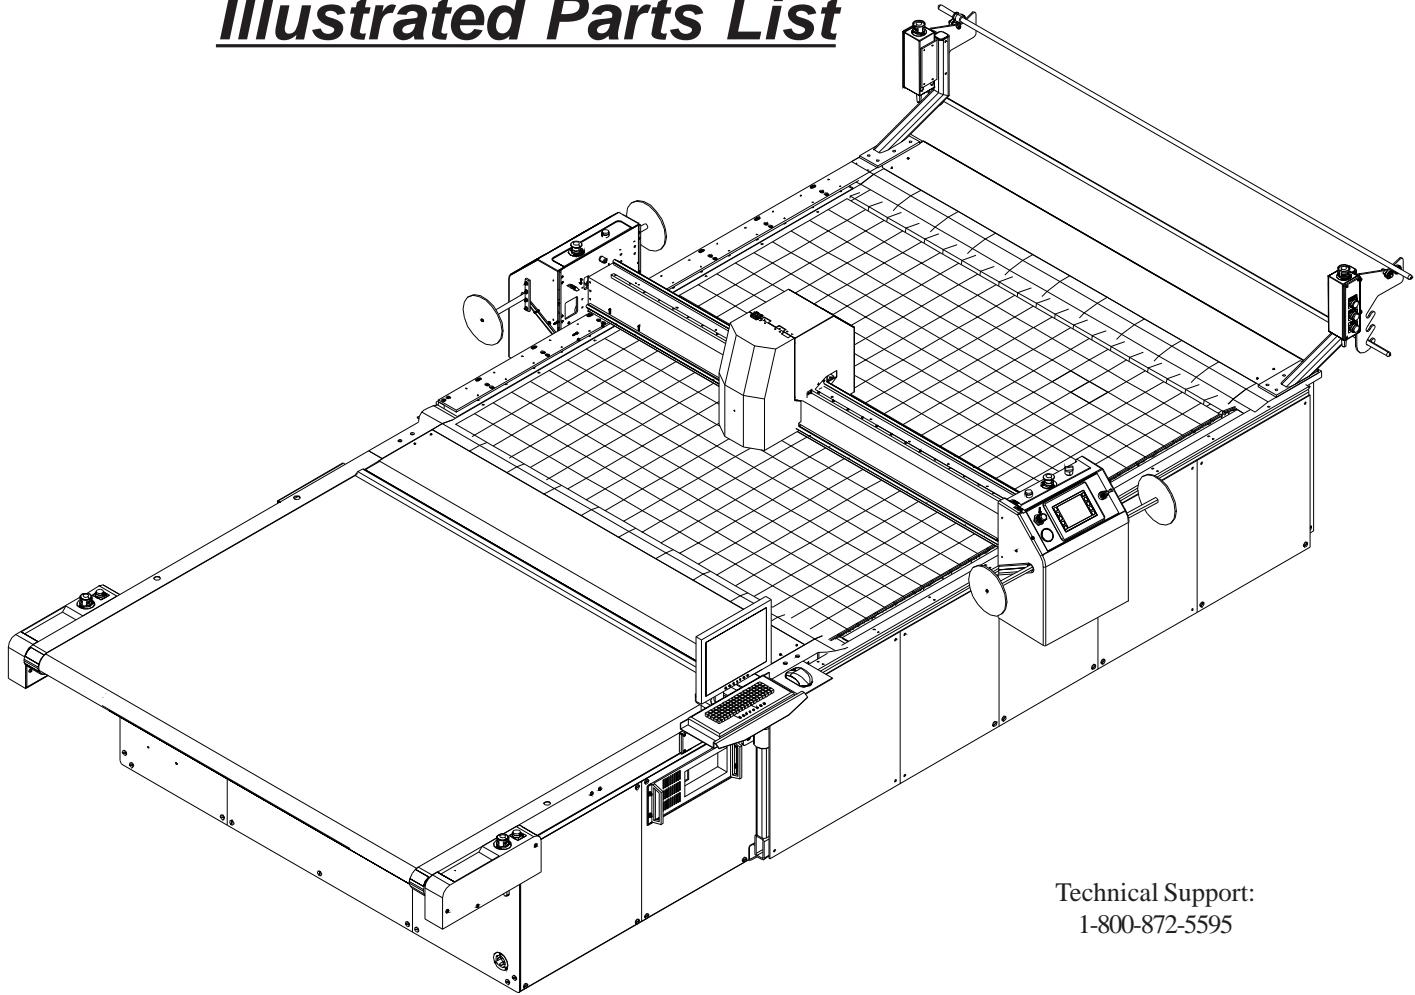

Technical Support:
1-800-872-5595

WARNING

This machine is equipped with a very sharp knife. Keep hands, arms, and hair away from the knife area at all times.

Misuse of this machine or failure to follow all safety instructions on this machine and in the instruction manual may result in serious personal injuries.

Eastman®

Over a Century of Cutting Expertise

779 Washington St., Buffalo, N.Y. 14203-1396 U.S.A. • (716)856-2200 • Fax (716)856-1140 or (716)856-2068
Manufacturers of Eastman Cloth Cutting and Cloth Spreading Machines
Website: www.EastmanCuts.com

Table of Contents

General Safety Precautions	3	78" Conveyor Frame Assembly, MPC	44
Safety Information	3	Bearing Bed Assembly	45
Safety Zones and Stop Devices	4	78" Take-On Finger Assembly, MPC	46
Multi-Ply Cutter	5	78" Take-Off Finger Assembly, MPC	47
Familiarization	5	Slat Assembly, MPC	48
Gantry Assembly, Multi-Ply	6	Rack And Rail Assembly, MPC	49
Operator Side Stop Disc & Cover Assembly	7	Plastic Overlay ASM	50
Non Operator Stop Disc & Side Cover Assembly	8	Gear Assembly Front, MPC	52
Control Panel Assembly	9	Gear Assembly Rear, MPC	53
Operator Side Frame Assembly	10	Gear Assembly Middle, MPC	54
Non Operator Side Frame Assembly	12	Rotating Tool Head Assembly	55
Main Tube ASM	14	Upper Knife Guide Assembly	56
Gantry Electronics Assembly	16	Slide Guide Assembly	57
Y-Car ASM, Multi-Ply	17	Pressure Foot Ring Assembly	57
Y-Car Electronics ASM	19	Lower Knife Guide Assembly	58
Pulley & Gear Assembly	20	Sharpening Assembly	59
Take Off Conveyor, 78 x 72	21	Pulley Sharpener Assembly	61
Side Support Assembly LHS	22	Rotating Tool Assembly Intellicut	62
Roller Assembly	23	Rotating Tool Assembly, Intellicut	63
Side Support Assembly, RHS	24	Lower Knife Guide Assembly, Intellicut	64
Vertical Exhaust System, Multi-Ply	26	Upper Knife Guide Assembly, Multi-Ply	65
Cold Air Gun - Assembly, Right	27	Notes	66
Multi-Ply Cutter Tool Head	28	Service Record	67
Right Stand Assembly	29	Technical Data	68
Left Stand Assembly	30		
Reciprocating Mechanism	31		
Coupler Assembly	33		
Horizontal Plate Assembly	34		
Y-Car Interface Plate Assembly	35		
Brake Assembly	36		
Blower Frame Assembly	37		
Electronic Tray Assembly	39		
Drill, Left, Pneumatic Assembly	40		
Drill, Right, Pneumatic Assembly	41		
Overlay Resealer, Multi-Ply	42		
Resealer Tube Assembly, Multi-Ply	43		

IMPORTANT

The purchaser must instruct all operators on the proper use of this equipment. All standard industrial safety measures and equipment should be provided to protect the operator. Operators must be cautioned that improper or careless use of this equipment may cause personal injury. If you do not have qualified operators to instruct new persons, contact your EASTMAN sales representative or EASTMAN factory direct.

Electrical connections and servicing to this equipment should be made by a qualified electrician who is familiar with applicable codes and regulations. Disconnect this equipment from electrical power source before proceeding with any disassembly for adjustment or repair.

Your Eastman **Multi-Ply Cutter** is designed to operate at a high rate speed. All personnel should be instructed to wear safety glasses and stand well clear of the **Multi-Ply Cutter** when in operation.

Safety Information

Throughout this manual, safety information is presented by the use of the terms **WARNING**, **CAUTION**, **ELECTRICAL HAZARD**, and **NOTE**. These terms have the following meanings:

WARNING

A warning contains critical information regarding potential safety hazards that can occur during proper use or misuse of the machine. Failure to follow these procedures may result in serious personal injury to the user.

CAUTION

A caution contains instructions for the use or maintenance of the machine. Failure to follow these procedures may result in damage to the machine.

ELECTRICAL HAZARD

An electrical hazard calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond an Electrical Hazard.

Supplementary information may be given in a Note.

General Safety Precautions

WARNING

- This machine is equipped with very sharp and dangerous tools. Keep hands, arms, and hair away from the cutting area and drive system at all times. Safety gloves, glasses, and appropriate clothing may prevent serious personal injuries.
- Disconnect the power supply to the machine when it is not in use or during routine maintenance, including cleaning and lubrication.
- The purchaser must instruct all operators in the proper use of the machine according to the instructions in this manual. This training must include instruction on the potential safety hazards arising from the use or misuse of the machine. In addition to such training, the purchaser should provide written work instructions as necessary to ensure correct use of the machine for specific cutting and spreading applications.

Safety and Indemnification

During the life of the machine, the purchaser agrees to provide to all machine users (including its own employees and independent contractors) all relevant safety information, including warning labels and instruction manuals. The purchaser also agrees to maintain the safety features and working condition of the machine, and to adequately train all users in the safe use and maintenance of the machine. The purchaser agrees to defend, protect, indemnify, and hold Eastman Machine Company and its subsidiaries harmless from and against all claims, losses, expenses, damages, and liabilities to the extent that they have been caused by the purchaser's failure to comply with the terms and instructions of this manual.

- Do not modify this machine or disable safety features. Unauthorized modification may result in serious personal injuries to the user. Electrical connections to this machine must be made by a qualified electrician familiar with applicable codes and regulations.
- Safety labels must be kept clean and legible at all times. Call the Eastman Machine factory to order replacement labels.

Eastman®

Over a Century of Cutting Expertise


Safety Zones and Stop Devices

Pause Buttons/ Stop Discs



The yellow buttons above the control panel and on the non-operator side of the gantry as well as the stop discs on each side of the gantry will pause the machine. Activating either the button or the stop discs will execute a controlled stop of the plotter, with the machine remaining fully powered. After releasing the pause button or resetting the stop discs and pressing NEXT on the UIT keypad, the cutter will resume cutting the work in progress. Pressing ABORT will cancel the job.

Emergency Stop Buttons

There are red Emergency Stop buttons located on each side of the gantry as well as on the operator side right and left ends of the table. Pressing any of the Emergency Stop buttons will execute a controlled stop of the gantry before cutting all power to the motors and e-box. To release an Emergency Stop condition, pull out the Stop button hit the ABORT key on the UIT keypad. The table must be re-homed by pressing the ZERO TABLE button before restarting the cutter. Emergency stop mats are also available as an option.

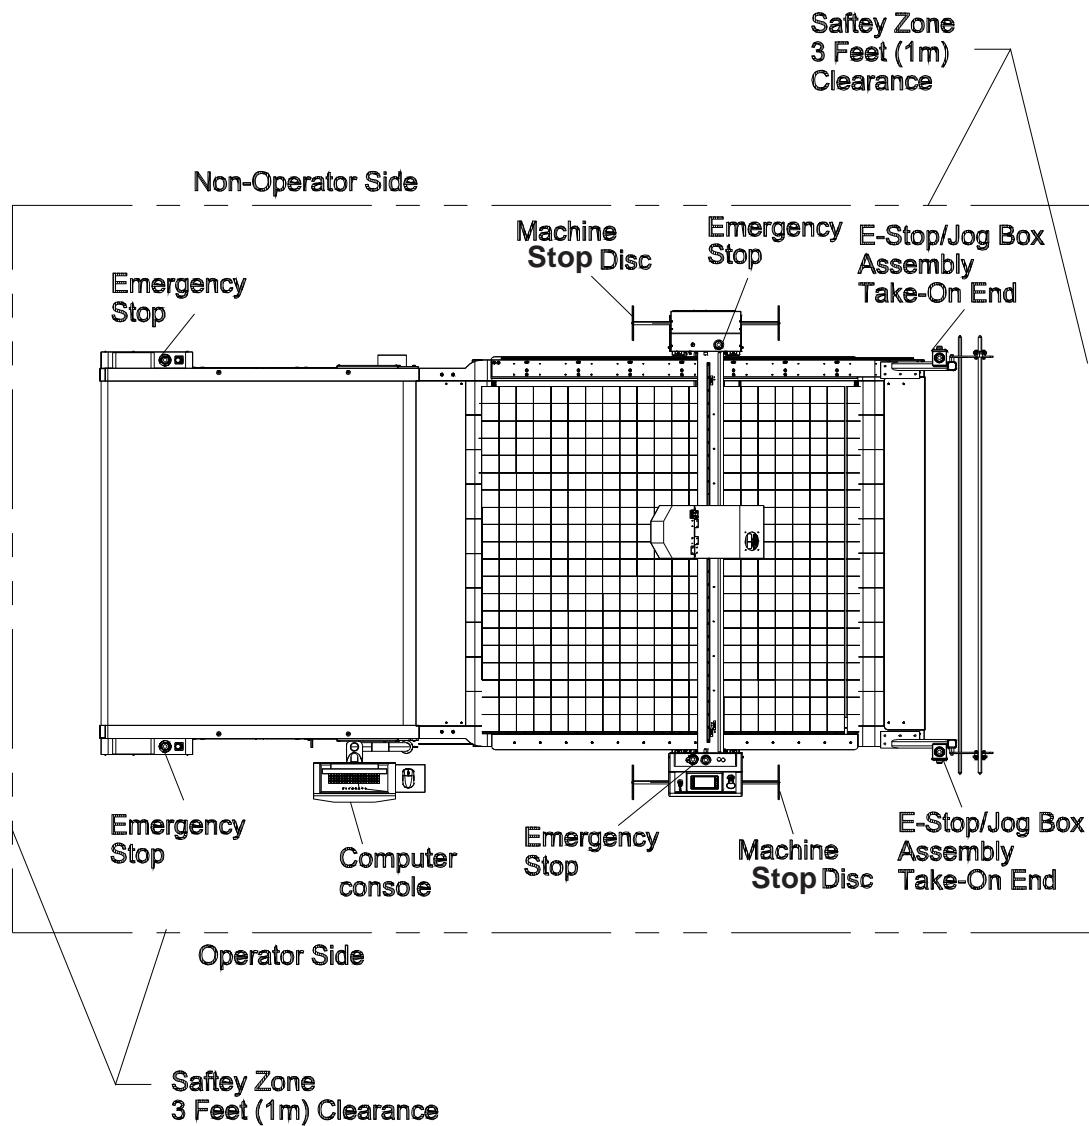


Multi-Ply Cutter Familiarization

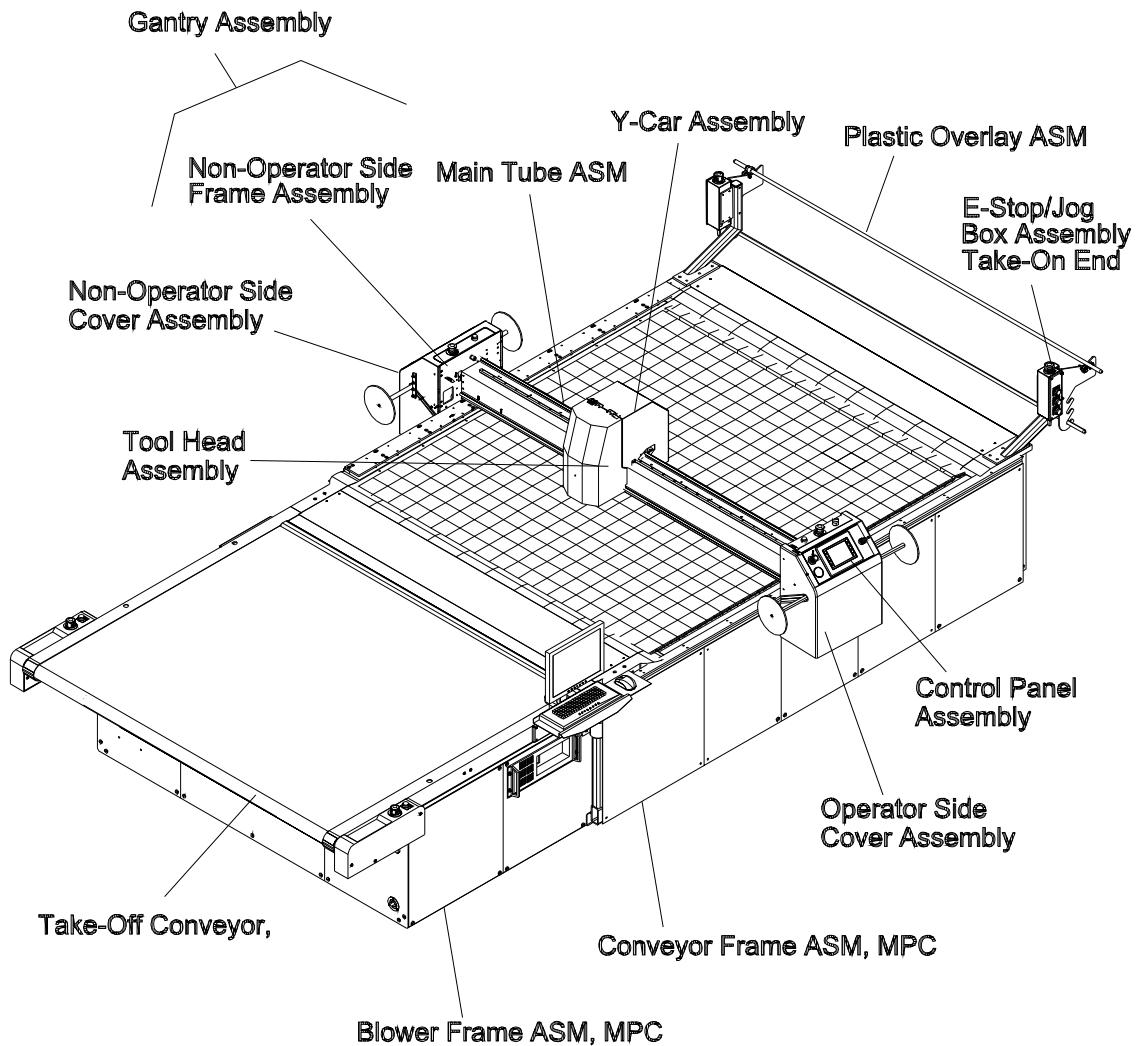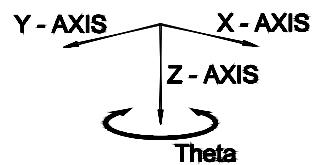

Eastman®


Over a Century of Cutting Expertise

Gantry Assembly, Multi-Ply
68-26264-MS

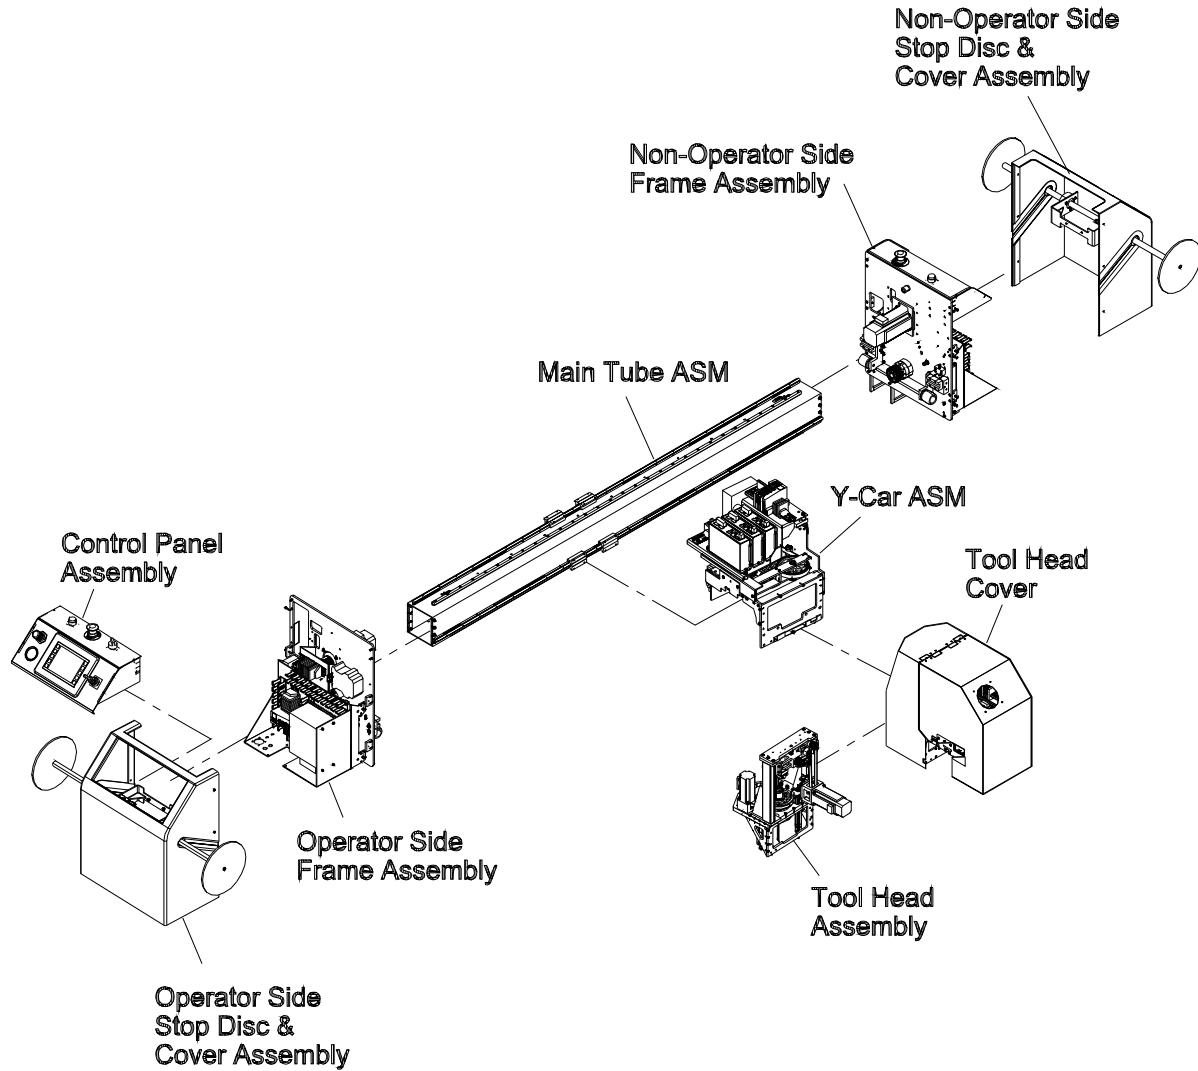

Operator Side Stop Disc & Cover Assembly

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	67-26311	Self-Align Bearing	2	9	333-93-6	#8-32 x 3/8" Button Hd. Cap S	12
2	54-26421	Bearing Mount	1	10	54-26422	Bearing & Switch Mount,Stop D	1
3	333-102-8	Scr. Hex. Skt.Btn. #10-32 x 1/2 6		11	206-38	Nut, Jam Hex 3/8-16	1
4	54-27241	Stop Disc Bracket	1	12	9078-003	Plunger, Spring	1
5	333-81-10	#4-40 UNC x 1/2 Lg. B.H.C.S.	4	13	54-26419	Disc, Stop Disc Assembly	2
6	404-040	Washer, Ext Tooth, #4,.123 I.D 4		14	333-34-12	Scr. Hex. Skt. Btn.1/4-20 x 3/4 2	
7	11-1193	Switch, Limit	2	15	67-26593	Gantry End Cover, Eagle	
8	54-27447	Secondary Pause Switch Bracket	1	16	54-27249	Synqnet	1
				17	54-27240	Gantry Cover Gasket	2
						Stop Disc Rod	1

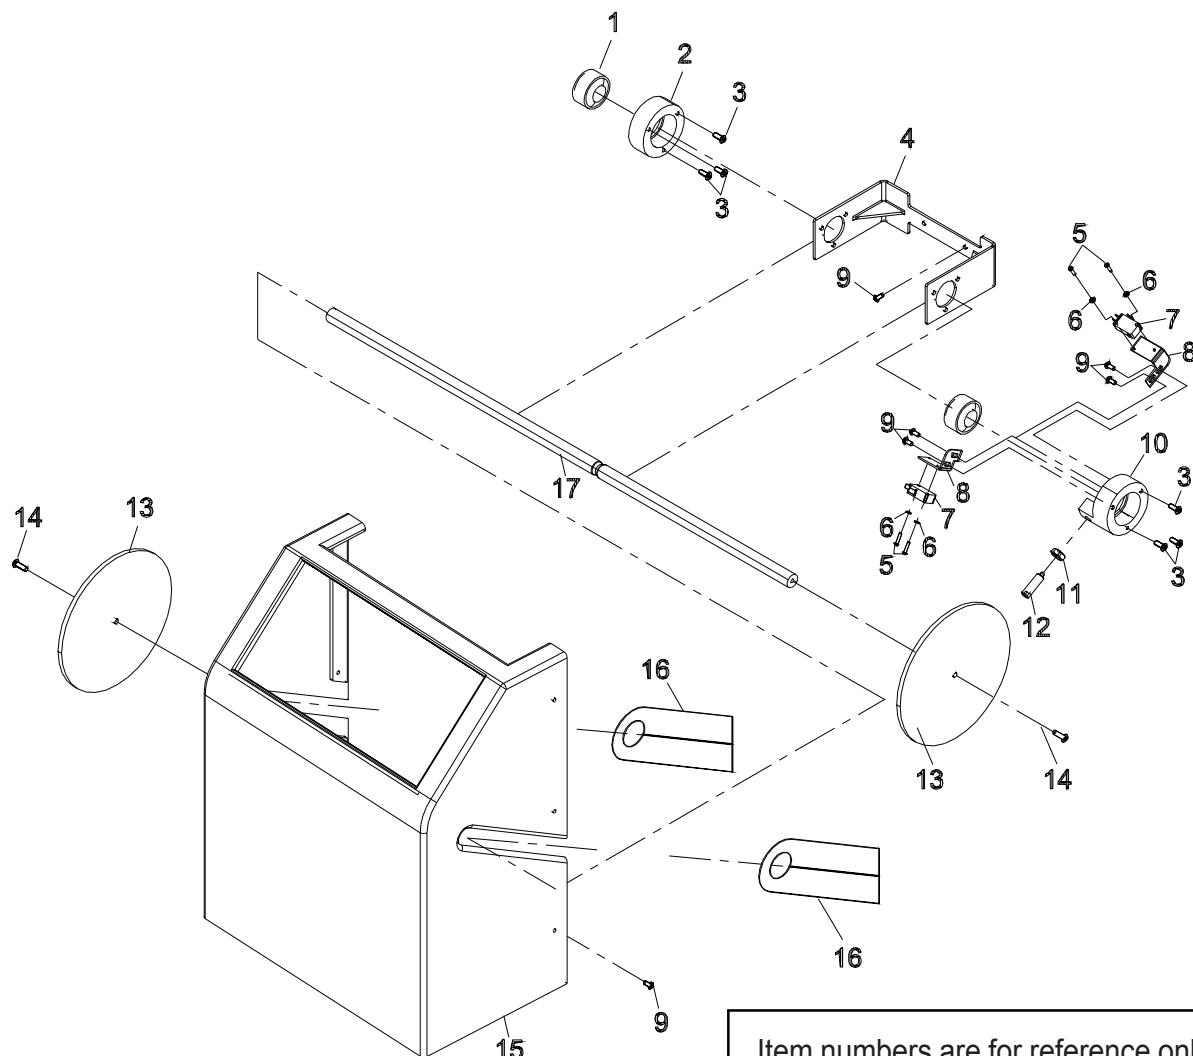

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®


Over a Century of Cutting Expertise

Non Operator Stop Disc & Side Cover Assembly

ITEM	PART No.	DESCRIPTION	QTY
1	333-34-12	Scr.Hex.Skt.Btn. 1/4-20 x 3/4	2
2	54-26419	Disc, Stop Disc Assembly	2
3	54-27240	Pause Paddle Rod	1
4	54-27249	Gantry Cover Gasket	2
5	67-26593	Gantry End Cover	1

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


ITEM	PART No.	DESCRIPTION	QTY
6	67-26311	Self-Align Bearing	2
7	54-26421	Bearing Mount, Stop Disk Assm1	1
8	333-102-8	Scr. Hex. Skt.Btn. #10-32 x 1/214	1
9	54-27241	Stop Disc Bracket	1
10	333-81-10	#4-40 UNC x 1/2 Lg. B.H.C.S.	4
11	404-040	Washer, Ext Tooth, #4, .123 I.D 4	1
12	11-1193	Switch, Limit	2
13	333-93-6	#8-32 x 3/8" Button Hd. Cap S	4
14	54-26426	Switch Bracket,Stop Disc Assy	1
15	54-27447	Secondary Pause Switch	1
16	206-38	Nut, Jam Hex 3/8-16	1
17	9078-003	Plunger, Spring	1
18	54-26422	Bearing & Switch Mount,Stop D 1	1

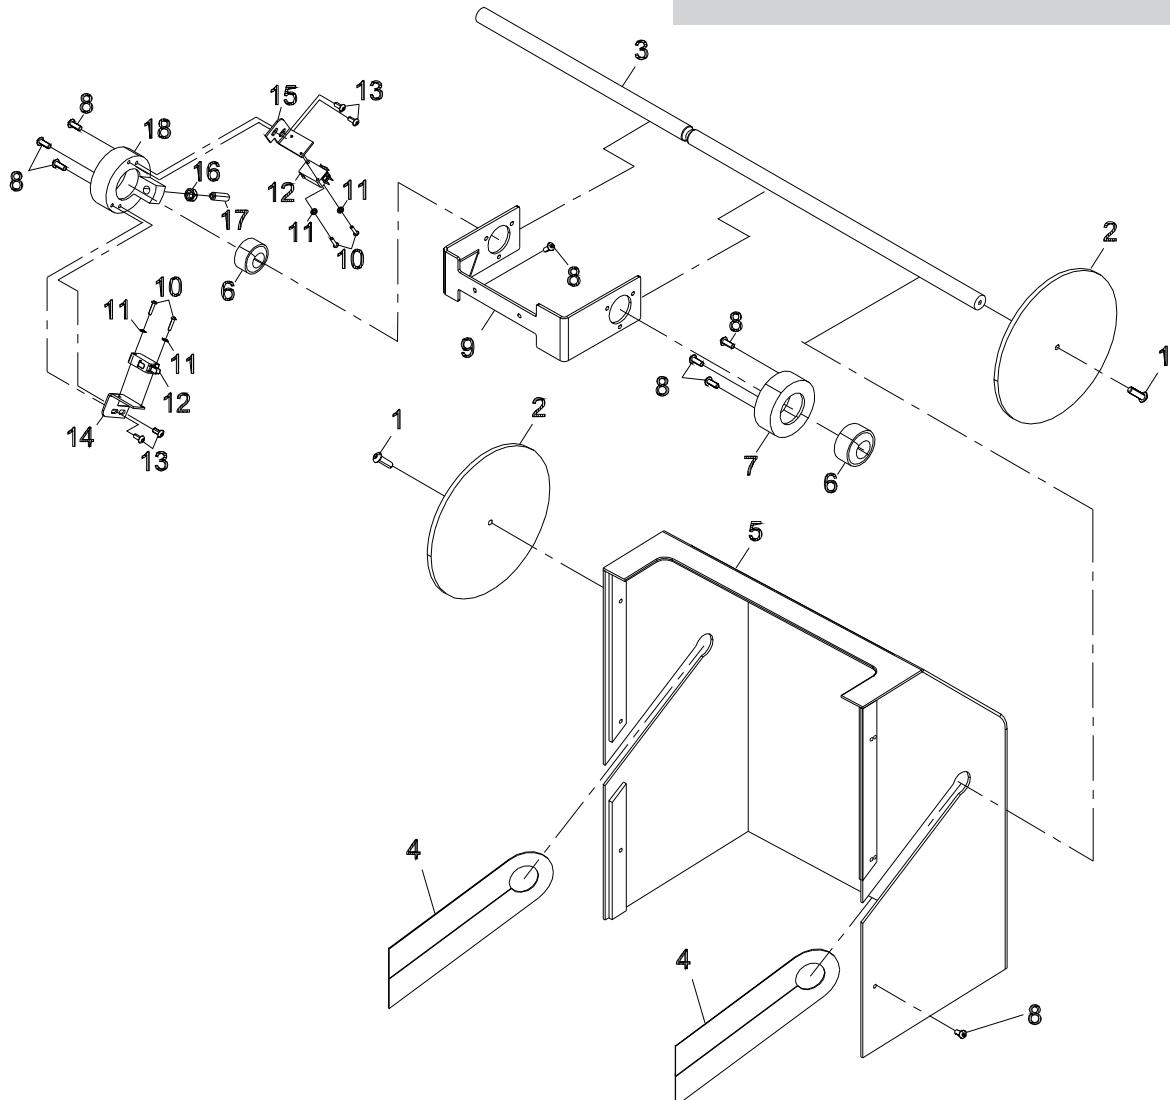

Control Panel Assembly

ITEM	PART No.	DESCRIPTION	QTY
1	31-26012-3	Red Push/Pull Switch	1
2	91-26011	Decal,"Emergency Stop"	1
3	31-26307	Yellow Push Button	1
4	333-86-6	Scr. Hex. Skt. Btn., #6-32 x 3/8 6	
5	54-27239	Uit Brace	2
6	54-27375	Uit Control Panel, Multiply	1
7	27-26053	Pressure Gauge, 0-100 psi	1


ITEM	PART No.	DESCRIPTION	QTY
8	27-26052	Air Regulator, 0-100 psi	1
9	27-26054	Panel Nut For Pressure Guage	1
10	31-12947	Joy Stick, 4 Position, 4 N.O.Co.1	
11	31-26441	Touch Screen, Programmed	1
12	31-26331	Green Selector Switch	1

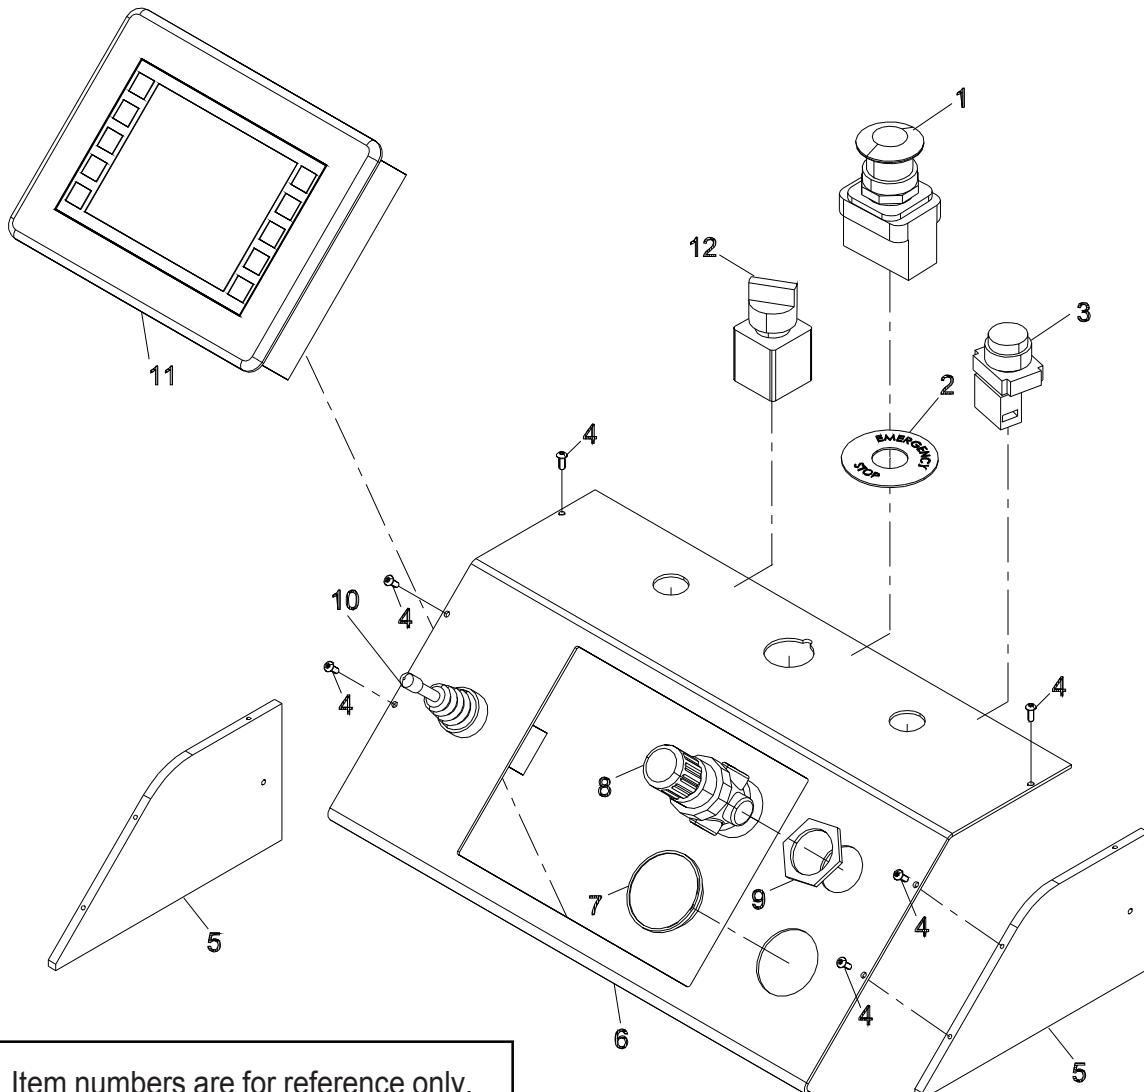

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

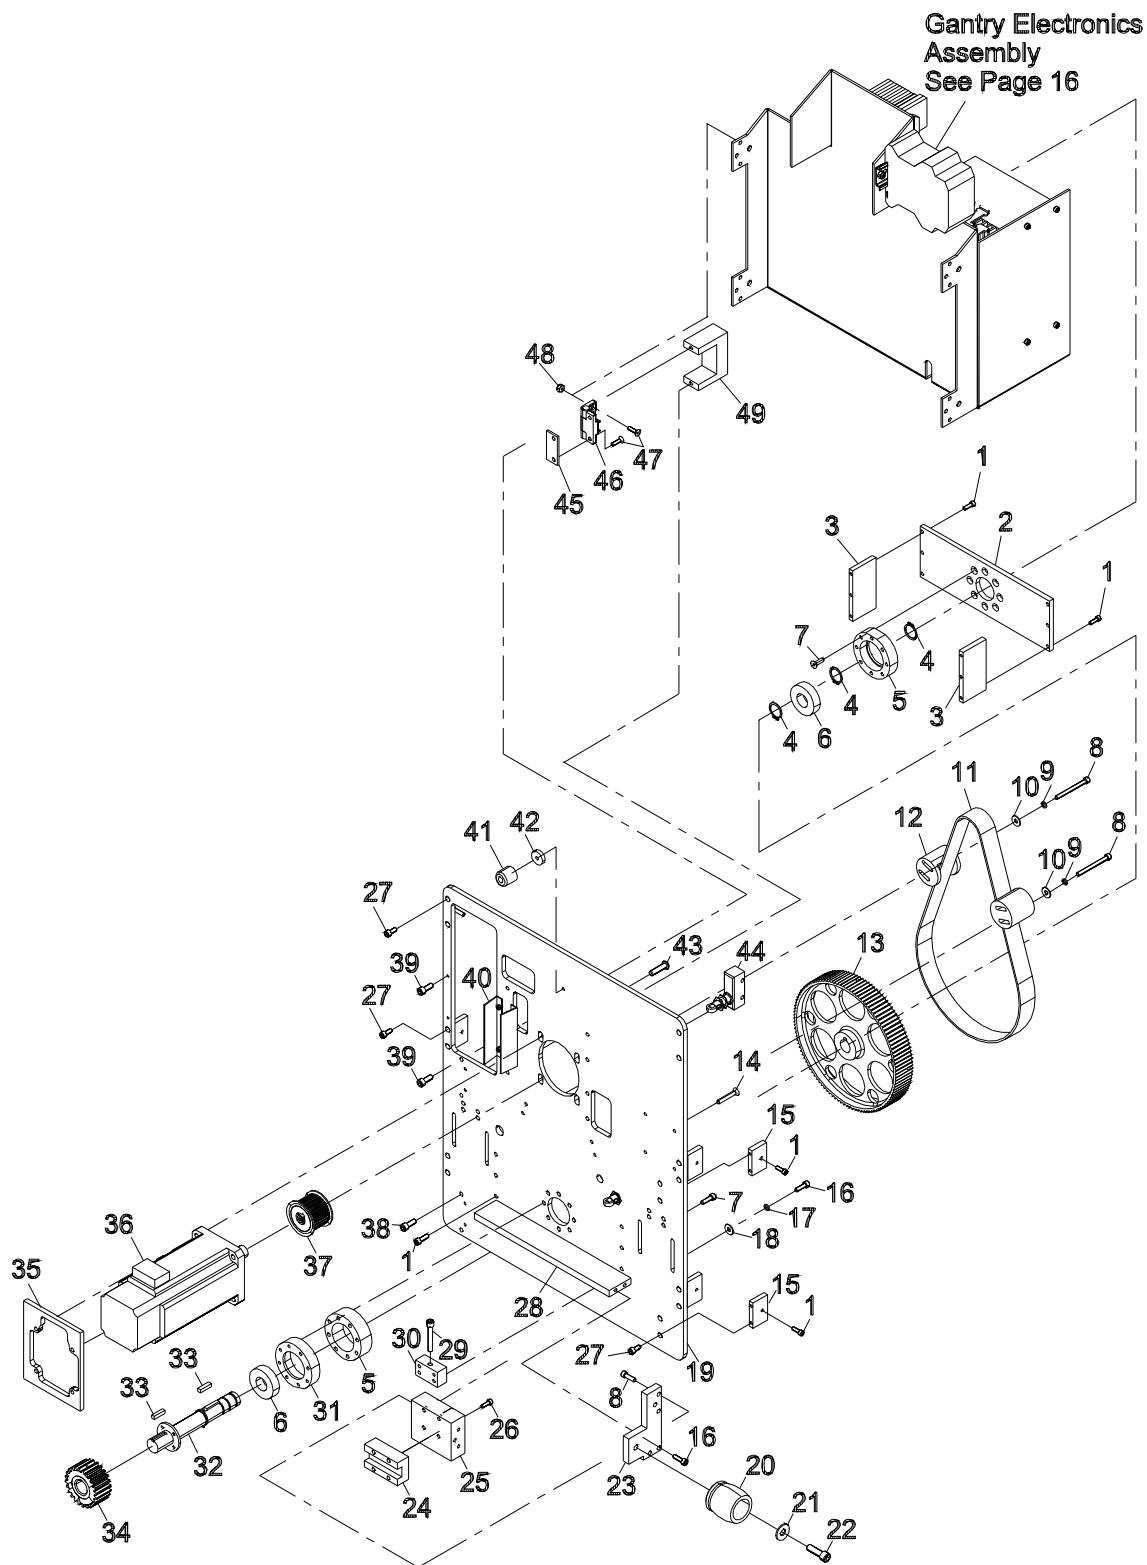
Operator Side Frame Assembly

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	335-93-8	Scr. Skt. Hd. Cap #8-32 x 1/2	14	27	335-93-6	Scr. Skt. Hd. Cap #8-32 x 3/8	16
2	54-D0022-2	X Shaft Support	1	28	54-27208	Bumper Connector Block	1
3	54-D0485	X Drive Stand Off	2	29	335-34-24	Shcs 1/4-28 x 1-1/2	2
4	67-D0216-5	Snap Ring 3/4	4	30	54-27113	Backlash Adjuster	2
5	54-D0019	Bearing Housing	2	31	54-D0019	Bearing Housing	2
6	67-12984	Bearing	2	32	54-D0276	Shaft, Driven	1
7	332-102-10	Scr. Skt. Flt. Hd. Cp #10-32 x 5/8	8	33	9063-010	Key 3/16 x 3/16 x 0.734	1
8		Scr.Socket #10-32 x 2	4	34	54-26295	Spur Gear X Axis	1
9	402-34	Washer, Lock 1/4	4	35	54-26019	Motor Plate	1
10	410-34	Washer, Flat 1/4	4	36	31-26436	X-Axis Motor	5
11	67-02963-2	Belt, Htd 800-5M-25	1	37	67-26712	Motor Pulley	1
12	54-27612	Belt Guide, X- Axis	2	38	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	2
13	54-D0065	Pulley 112 Tooth	1	39	335-86-6	Scr. Skt. Hd. Cap #6-32 x 3/8	4
14	332-102-20	#10-32 x 1-1/4 Flat Soc Hd Cap 8		40	54-26224	E-Chain Funneling Bar	2
15	54-C0306	Cover Clips	6	41	67-26402	Rubber Bumper	1
16	335-102-10	Scr. Skt. Hd. Cap #10-32 x 5/8	26	42	54-26598	Mount, Shock Absorber	1
17	410-010	Washer Flat #10	8	43	333-34-16	Scr.Hex.Skt.Btn. 1/4-20 x 1	4
18	402-010	Lock Washer #10	8	44	31-00922	Switch, Roller, 90-Deg, Spdt	2
19	54-26019-1	Motor Plate	1	45	54-27104	Hinge Spacer Plate	2
20	AD-12619	Bumper Stop	2	46	67-26571	Hinge, Adjustable Friction	2
21	410-36	Washer, Ft 5/16"	2	47	332-93-10	Scr, Cap Fltd. Skt #8-32 x 5/8	8
22	335-36-16	Scr.Skt.Hd.Cap. 5/16-18 x 1	2	48	211-93	Nut, ElasticHex Light #8-32	4
23	54-27207	Bumper Block	2	49	54-27105	Hinge, Secure Plate	2
24	67-26656	Caged Bearing Block Thk Shs 15V	2				
25	54-27110	Support, Op-side Bearing	2				
26	335-M4-12	Scr. Skt.Hd.Metric M4 x 12mm	8				

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

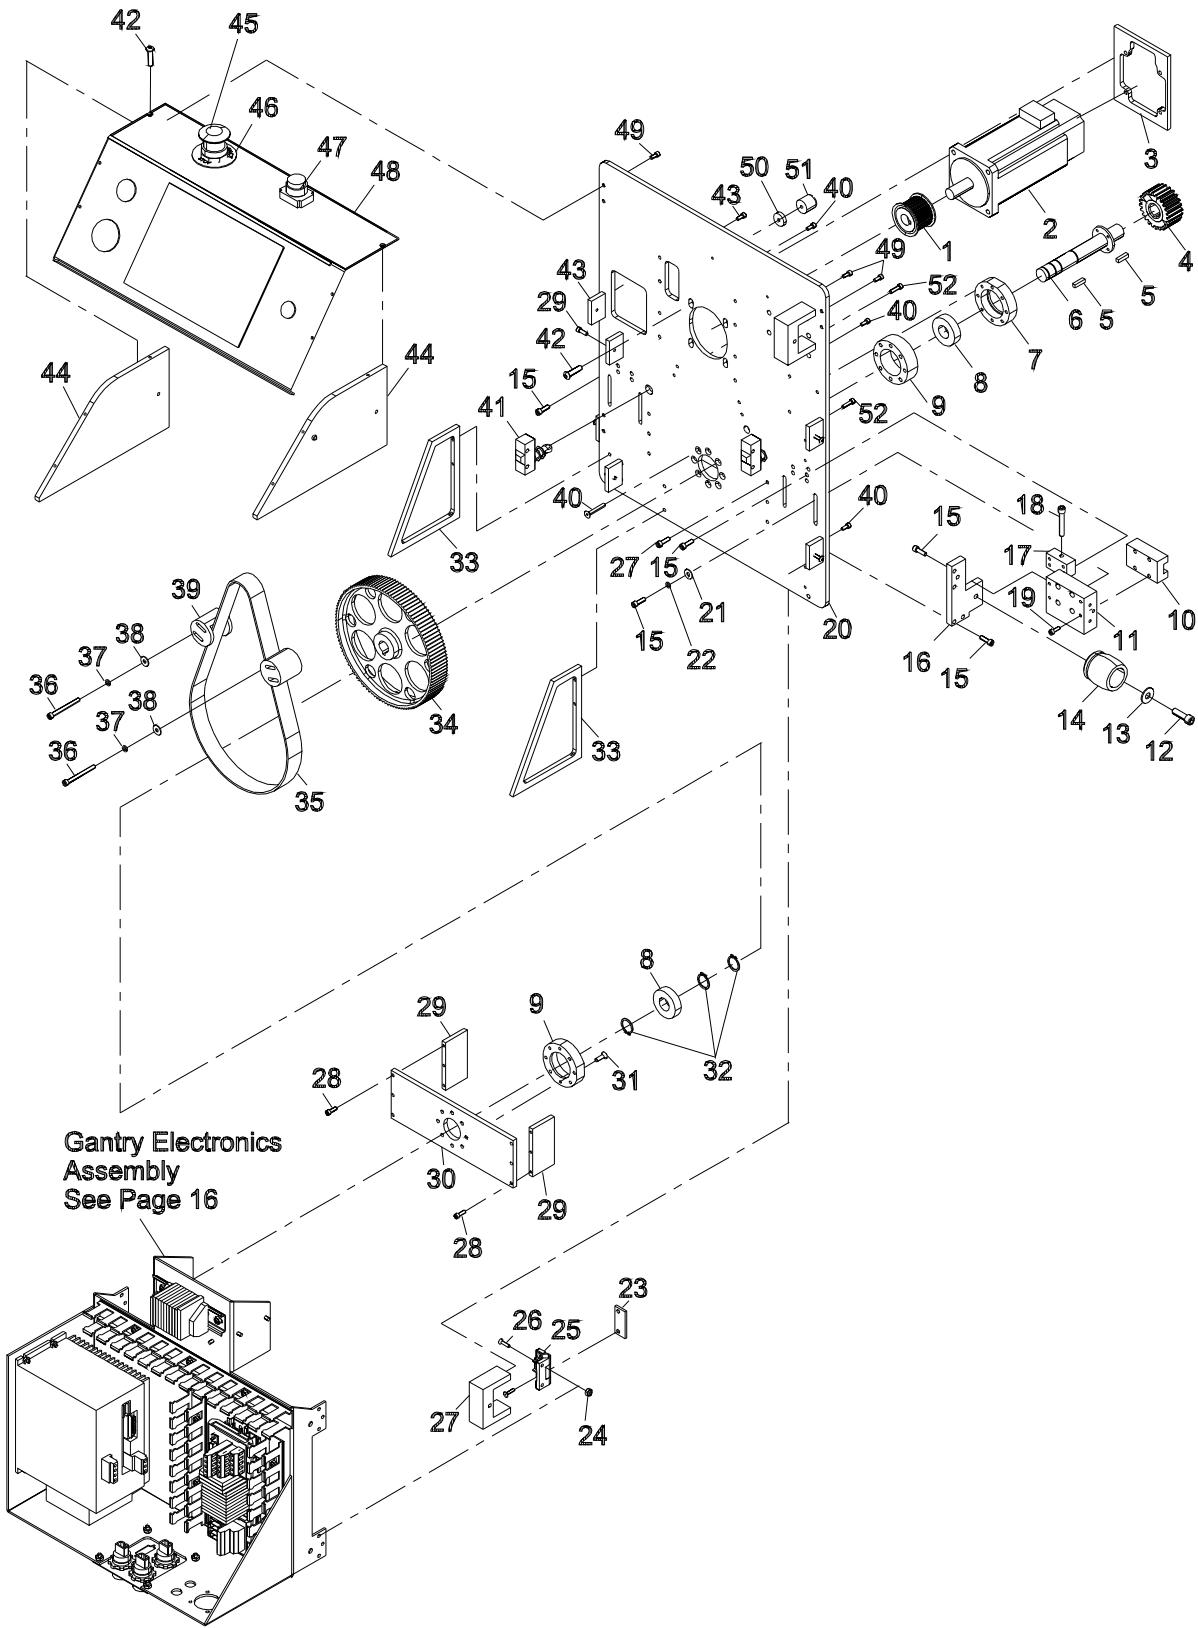Non Operator Side Frame Assembly


ITEM	PART No.	DESCRIPTION	QTY
1	67-26712	Motor Pulley	1
2	31-26436	X-Axis Motor	1
3	54-26019-1	Motor Plate	1
4	54-26295	Spur Gear X-Axis	1
5	9063-010	Key 3/16 x 3/16 x 0.734	1
6	54-D0276	Shaft,Driven	1
7	54-D0019	Bearing Housing	2
8	67-12984	Bearing	1
9	54-LC095	Shim Bearing Housing	1
10	67-26656	Caged Bearing Block	
		Thk shs15V	2
11	54-27110	Spacer, Op-Side Bearing	2
12	335-36-16	Scr.Skt.Hd.Cap. 5/16-18 x 1	2
13	410-36	Washer, Flt 5/16	2
14	AD-12619	Bumper Stop	2
15	335-102-10	Scr.Skt.Hd.Cap. #10-32 x 5/8	26
16	54-27207	Bumper Block	2
17	54-27113	Backlash Adjuster	2
18	335-35-24	1/4-28 x 1-1/2 Socket Head Cap2	
19	335-M4-12	Scr.Skt.Hd.Metric M4 x 12	8
20	54-26019	Motor Plate	1
21	410-010	Washer, Flt #10	8
22	402-010	Washer, Lock #10	8
23	54-27104	Hinge Spacer Plate	2
24	211-93	Nut, Elastic Hex Light #8-32	4
25	67-26571	Hinge, Adjustable Friction	2
26	332-86-10	Scr. Skt. Flt. Hd. #6 -32 x 5/8	8
27	54-27105	Hinge, Secure Plate	2

ITEM	PART No.	DESCRIPTION	QTY
28	335-93-8	Scr.Skt.Hd.Cap. #8-32 x 1/2	8
29	54-D0485	X Drive Stand Off	2
30	54-D022-2	Shaft Support	1
31	332-102-10	Scr.Skt.Flt. Hd.Cap #10-32 x 5/8	8
32	67-D0216-5	Snap Ring 3/4	4
33	54-26694	E-Chain Mounting Bracket.	2
34	54-D0065	Pulley 112 Tooth	1
35	67-02963-2	Belt, Htd 800-5M-25	1
36		Scr.Skt.Hd.Cap. #10-32 x 2	4
37	402-34	Washer, Lock 1/4	4
38	410-34	Washer Flt 1/4	4
39	54-27612	Belt Guide, X- Axis	2
40	332-102-20	#10-32 x 1-1/4 Flat soc Hd Cap	8
41	31-00922	Roller Switch	2
42	333-34-16	Shcs 1/4-20 x 1	4
43	54-C0306	Cover Clips	6
44	54-27239	Uit Brace	2
45	31-26012-3	Red Push/Pull Switch	1
46	91-26011	Decal "Emergency Stop"	1
47	31-26307	Yellow Push Button	1
48	54-27242	Cover Panel	1
49	335-93-6	Scr.Skt.Hd.Cap. #8-32 x 3/8	16
50	67-26402	Rubber Bumper	1
51	54-26598	Mount, Shock Absorber	1
52	335-93-8	Shcs #8-32 x 1/2	4

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®


Over a Century of Cutting Expertise

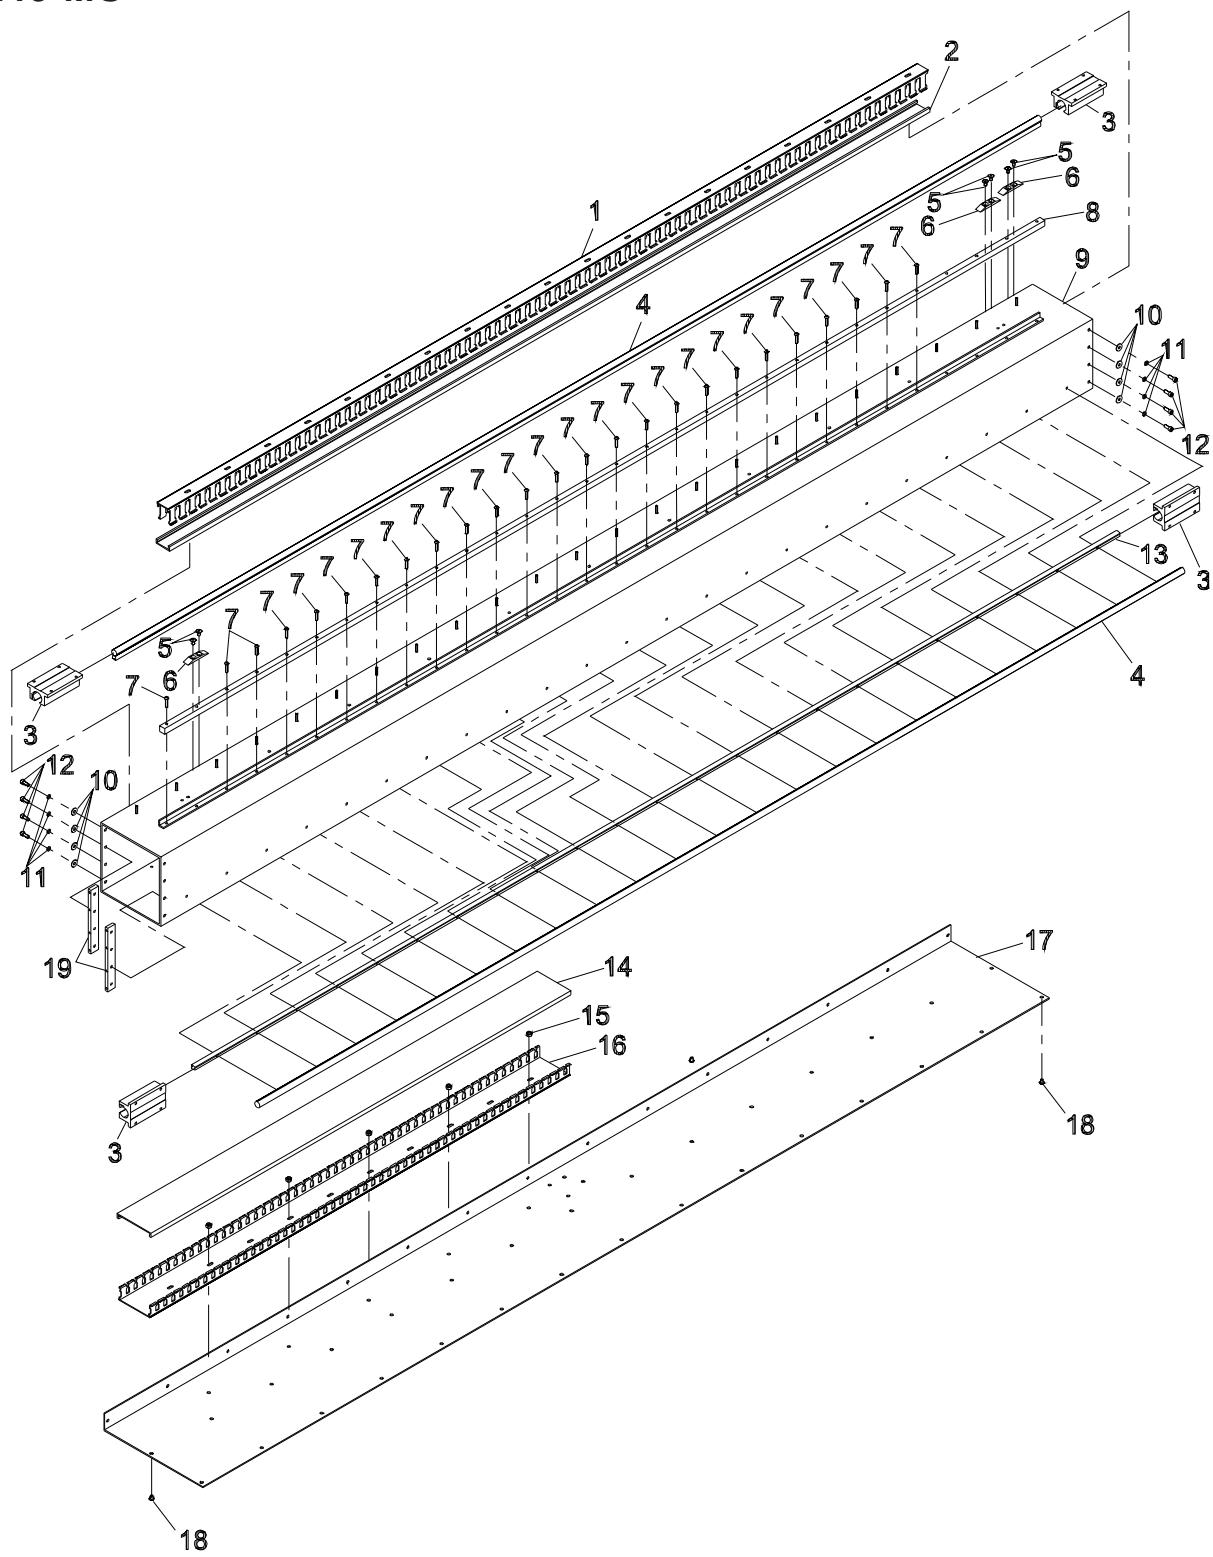Main Tube ASM
68-26245-MS

ITEM	PART No.	DESCRIPTION	QTY
1	70-26001	Duct, Wiring, 1" x 1.5"	A/R
2	67-02634	Conduit Top 1"	A/R
3	67-26655	Twin Pillow Block (Open), Super 4	
4	67-26386-78	78" MS Pre-Drilled 1/2" Dia. Rail 2	
5	332-102-6	Scr.Skt.Flt.Hd.Cp. #10-32 x 3/8	6
6	54-26807	Cam	3
7	333-93-12	S.S.BHS #8-32 x 3/4" LG	30
8	54-C0411-78	Y Rack Support, 78"	1
9	54-27365-78	Gantry Tube, Multi-Ply	1
10	410-010	Washer, Flt. #10	16
11	402-010	Washer, Lock #10	16
12	335-102-8	Scr.Skt.Hd.Cap #10-32 x 1/2	16
13	67-C0220-	Low Support, 1/2" Rail	2
14	67-26112	Cover, Duct Plastic White 3.0 W 1	
15	211-102	Nut, Elastic Hex, Std. Hgt. #10-32	5
16	67-26389	Duct, Wiring, 3" x 1"	1
17	54-27376-78	Belly Pan, 78" Multi-Ply	1
18	333-102-4	Scr, Cap Rd.Hd.Skt10-32X.250	30
19	54-C0305-4	Main Tube Mtg. Insert	4
20	335-86-12	#6-32 x 3/4" Socket Head Cap Screw	46
21	402-060	Washer, Lock #6	46
22	67-26567-78	Steel Rack 20 DP, 20 PA	1

MS- Machine Size

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

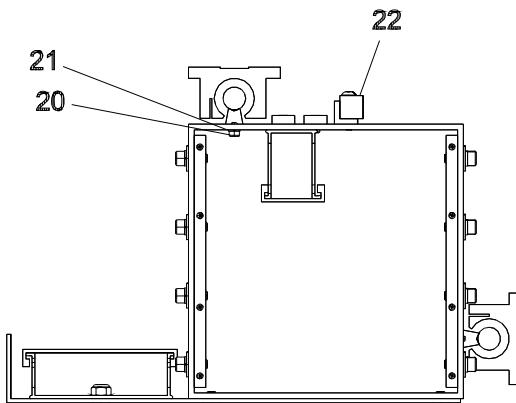


Eastman®

Over a Century of Cutting Expertise

Gantry Electronics Assembly


ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	211-93	Nut, Elastic Hex Light #8-32	13	7	31-26377	X Axis Standalone Amp-220Vac	1
2	31-26376	Phoenix 24Vdc 2Amp DinPwr Sup	1	8	31-26361	36 Screw Terminal Block	1
3	31-26414	Terminal end Clamps, Din Mount	4	9	31-26366	Slice I/O Network Adaptor	1
4	31-00739	7" Terminal Mount	3	10	31-26367	Slice 8 Digital Input	2
5	54-27107	Electronic Tray	1	11	31-26384	Terminal Blocks	20
6	70-26001	Duct, Wiring, 1" Wide x 1.5" High	3	12	31-26405	Ground Terminal Block	4

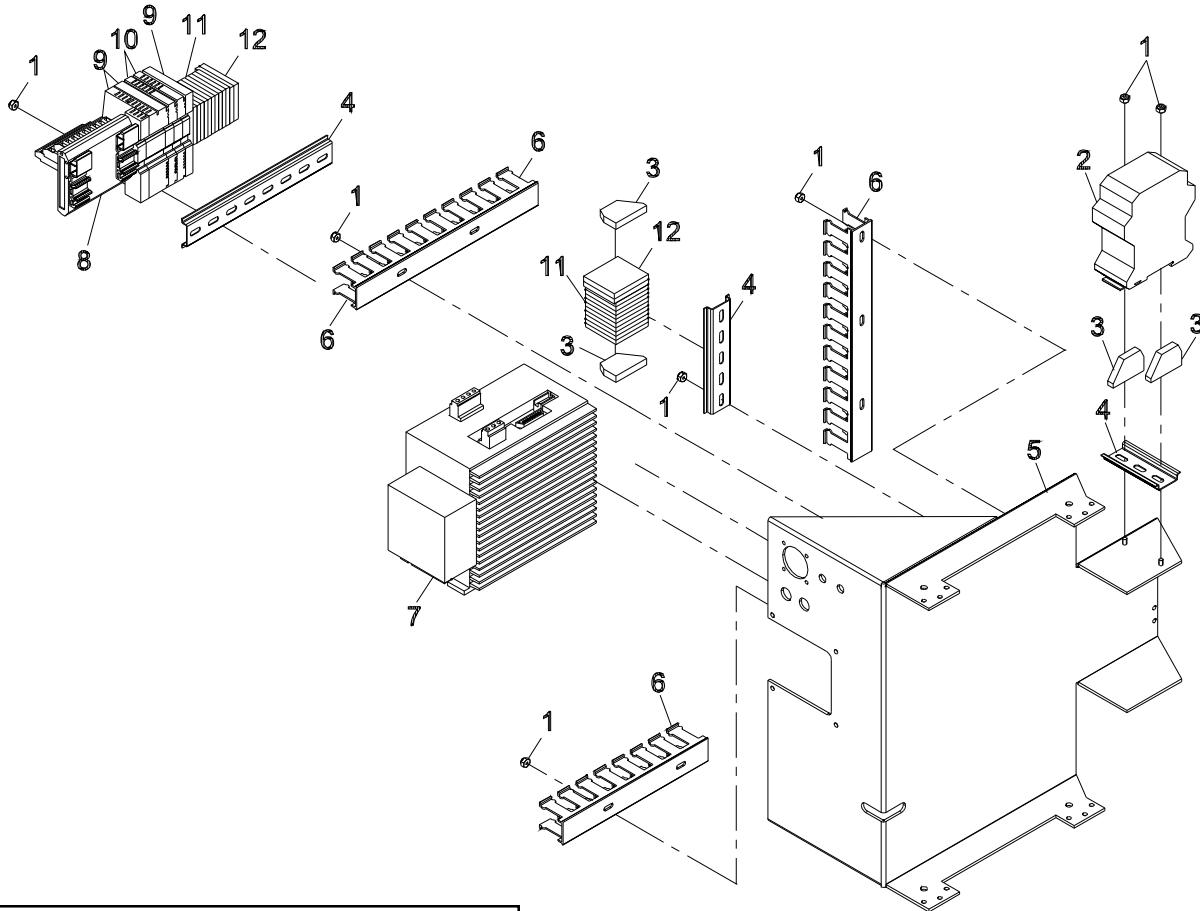

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Y-Car ASM, Multi-Ply

68-26266

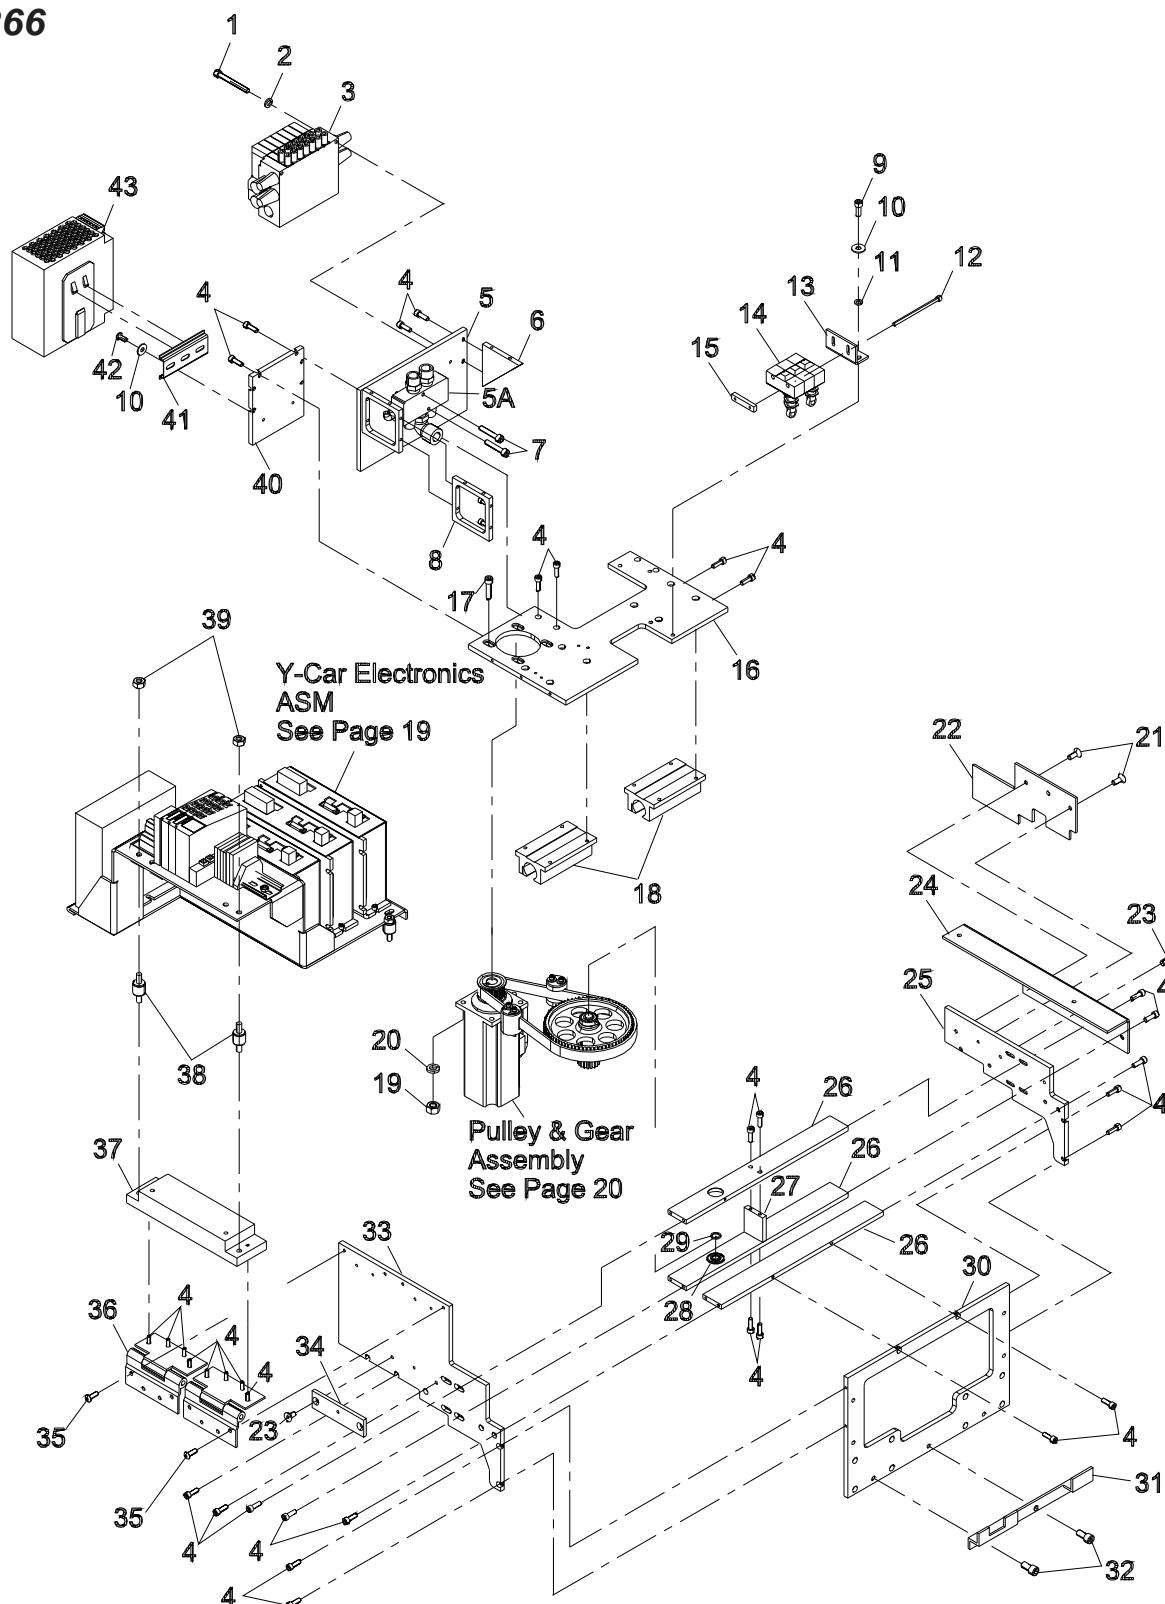

Eastman®

Over a Century of Cutting Expertise

ITEM	PART No.	DESCRIPTION	QTY
1	335-86-24	#6-32 x 1 1/2" Socket Head Cap	4
2	402-060	Washer, Lock #6	4
3	27-26059	Y-Car Electronics Tray ASM	1
4	335-93-8	Scr. Skt. Hd.Cap #8-32 x 1/2	45
5	54-27405	Air Valve Support Plate	1
5A	27-26056	Mac Valve 4-Way Open-Center	1
6	54-27098	Corner Brace	1
7	335-102-16	Scr. Skt. Hd.Cap #10-32 x 1	2
8	54-27134	Power Supply Bracket	2
9	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	2
10	402-010	Washer, Lock #10	4
11	410-010	Washer Flt #10	2
12	335-86-40	#6-32 UNC x 2.50" LG. SHCS	2
13	54-27095	Limit Switch Bracket	1
14	31-00922	Switch, Roller, 90-Deg,SPDT	3
15	CH-72	Plate, Nut For Micro Switch	1
16	54-27094	Y-Car Main Plate	1
17	335-M5-20	Scr. Skt. Hd.Metric, M5-0.8 X 20	4
18	67-26655	Twin Pillow Block (Open)	2
19	203-M5	Nut, Fin Hex M5-0.8	4
20	402-M5	Washer, Lock M5	4
21	332-102-8	Scr.Skt.Flt.Hd.Cp. #10-32 x 1/2	2
22	54-27460	Right Cover Mounting Plate	1
23	332-102-6	Scr.Skt.Flt.Hd.Cp. #10-32 x 3/8	3
24	54-27103	Shock Support Bracket	1

ITEM	PART No.	DESCRIPTION	QTY
25	54-27091	Legt Gusset	1
26	54-27090	Bearing Plate	2
27	54-26562	Backlash Adjustment Connector	1
28	67-00520	Bearing, .375 ID x .875 OD	2
29	411-38-1	Washer, Fiber 3/8 x 1/2 x 3/64	3
30	54-27092	Tool Head Interface Plate	1
31	54-27100	Tool Head Vertical Support	1
32	335-34-8	Scr. Skt. Hd. Cap 1/4-20 x 1/2	2
33	54-27093	Right Gusset	1
34	54-27459	Left Cover Mount Plate	1
35	333-93-8	Scr. Hex. Skt. Btn. #8-32 x 1/2	8
36	67-26570	Friction Hinge	2
37	54-27406	Hinge Block	1
38	67-26569	Vibration Isolator, Male-Male	4
39	211-93	Nut, Elastic Hex Light #8-32	2
40	54-27135	Power Supply Mount Plate	1
41	31-00739-3	3" Terminal Mount NS-35 2 Mtr	1
42	333-93-6	#8-32 x 3/8" Button Head Cap S	2
43	31-26370	Phoenix 24Vdc 5A DinMount Pwr1	

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


Y-Car Electronics ASM

68-26263

ITEM	PART No.	DESCRIPTION	QTY
1	335-93-8	Scr. Skt. Hd.Cap #8-32 x 1/2	8
2	31-26359-320	Y-CAR Amp Module - 320Vdc	3
3	31-26414	Terminal End Clamps; DIN Mt.	3
4	31-26405	Ground Terminal Block; DIN	4
5	31-26384	Terminal Blocks DIN Rail Mount	9
6	211-93	Nut, Elastic Hex Light #8-32	2
7	31-00739-5	5" Terminal Mount NS-35 2 Mtr	1


ITEM	PART No.	DESCRIPTION	QTY
8	31-26366	Slice I/O Network Adapter Synq	1
9	31-26368	Slice 8 Digital Output (Sinkin)	1
10	31-26367	Slice 8 Digital Input (Sourcin)	1
11	31-26476	Custom Control I/O Block - Syn	1
12	335-102-10	Scr. Skt. Hd. Cap #10-32 x 5/8	1
13	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	1
14	31-26378-220	Synq 4 Axis Pwr Supply 220vac	1
15	54-27097	Electronics Tray,Multi-Ply Y-Car	1
16	410-080	Washer, Flat #8	2
17	402-080	Washer, Lock #8	2
18	31-00739	8" Terminal Mount	1

Item numbers are for reference only.
Please Specify PART NUMBER when

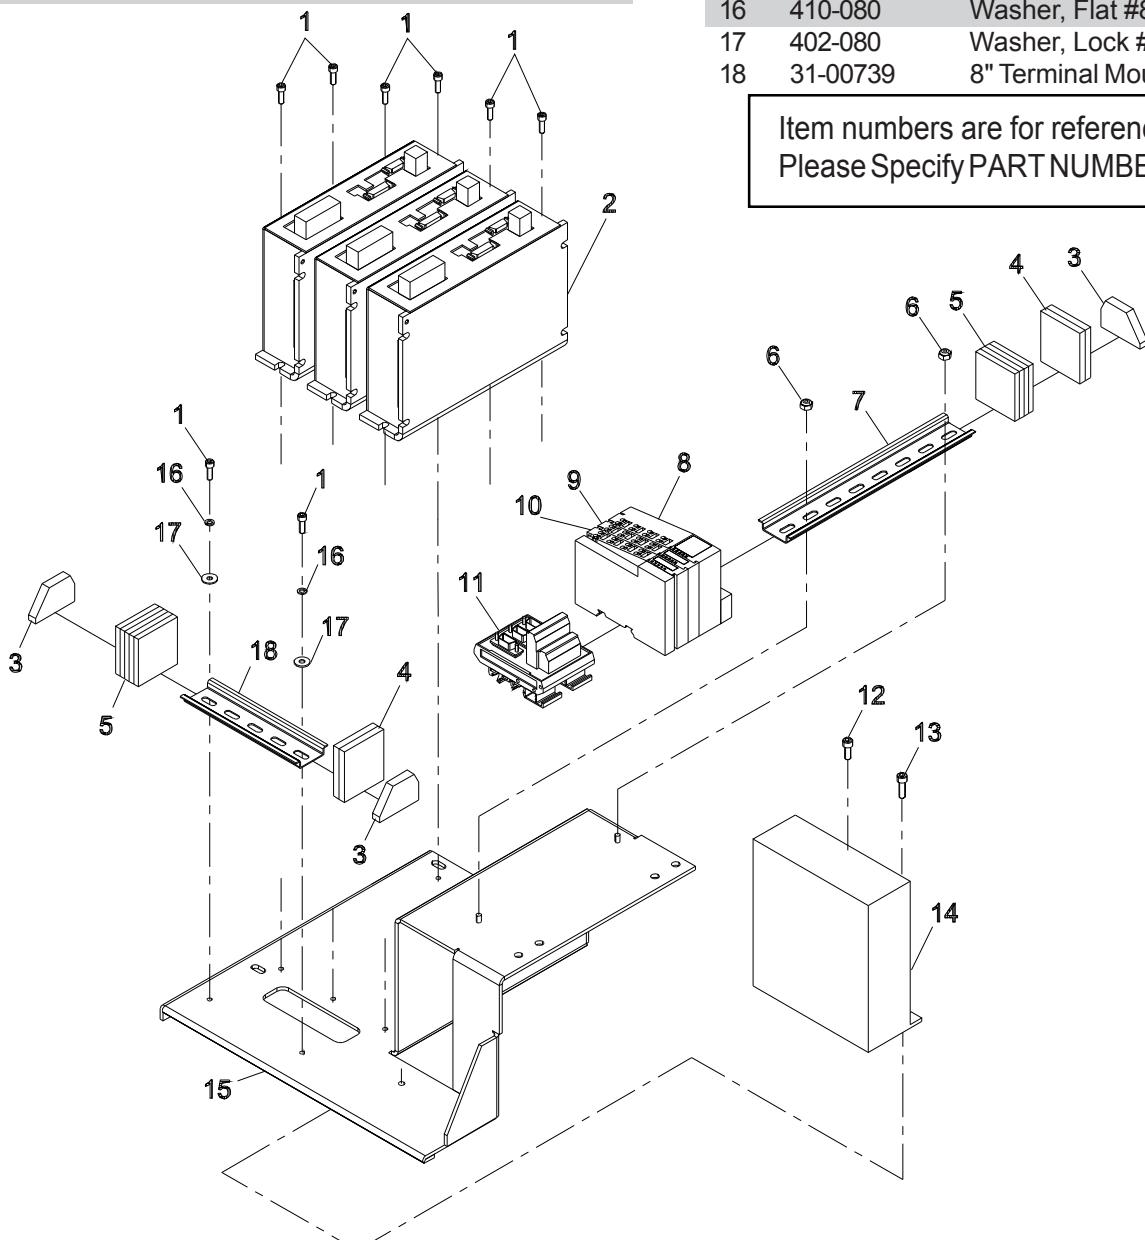

Eastman®

Over a Century of Cutting Expertise

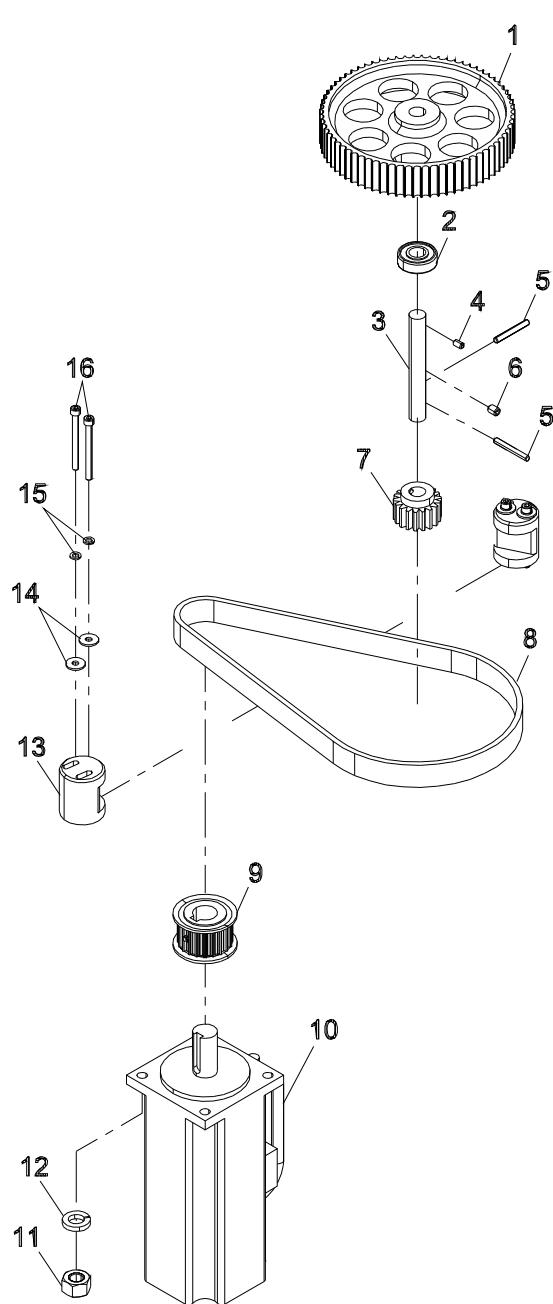Pulley & Gear Assembly

ITEM	PART NO.	DESCRIPTION	QTY
1	54-26560	72 Groove Pulley	1
2	67-00520	Bearing, .375 ID x .875 OD	2
3	54-26563	Drive Shaft	1
4	342-86-4	Scr.Hex.Skt.Set 6-32 x 1/4	2
5	532-4-12	Pin, Dowel 1/8 x 3/4	2
6	342-102-4	Scr. Hex. Skt. Set, #10-32 x 1/4" LG	1
7	54-26566	18 Tooth Spur Gear	1
8	67-26746	Timing Belt, 107 Teeth	1
9	67-26602	Drive Pulley, 20 Teeth	1
10	31-26435	Y/Z Motor w/ Pigtail, 11.25"	1
11	203-M5	Nut, Fin Hex M5-0.8	4
12	402-M5	Washer, Lock M5	4
13	54-27619	Belt Guide, Y-Axis	2
14	410-060	Washer, Flat #6	4
15	402-060	Washer, Lock #6	4
16	335-102-16	Scr. Skt. Hd. Cap #10-32 x 1	2

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


Take Off Conveyor, 78 x 72

68-26340

ITEM	PART No.	DESCRIPTION	QTY
1	67-76640	Conveyor Belt, With Dual V-Guide	1
2	54-27345-61	Uhmw Guide	17
3	54-27344-61	Aluminium Guide Rail	17
4	54-27342-86	Extrusion, Minitec 45mm x 90mm	3
5	65-26035	M8 Square Nut Fixed-M8	50
6	65-26036-16	Shcs M8 x 1.25 x 16mm	34

ITEM	PART No.	DESCRIPTION	QTY
7	335-M6-16	Scr. Skt. Hd. Metric M6 x 16mm	2
8	54-27533	Tension Guide	3

Item numbers are for reference only.
Please Specify PART NUMBER when ordering replacement parts.

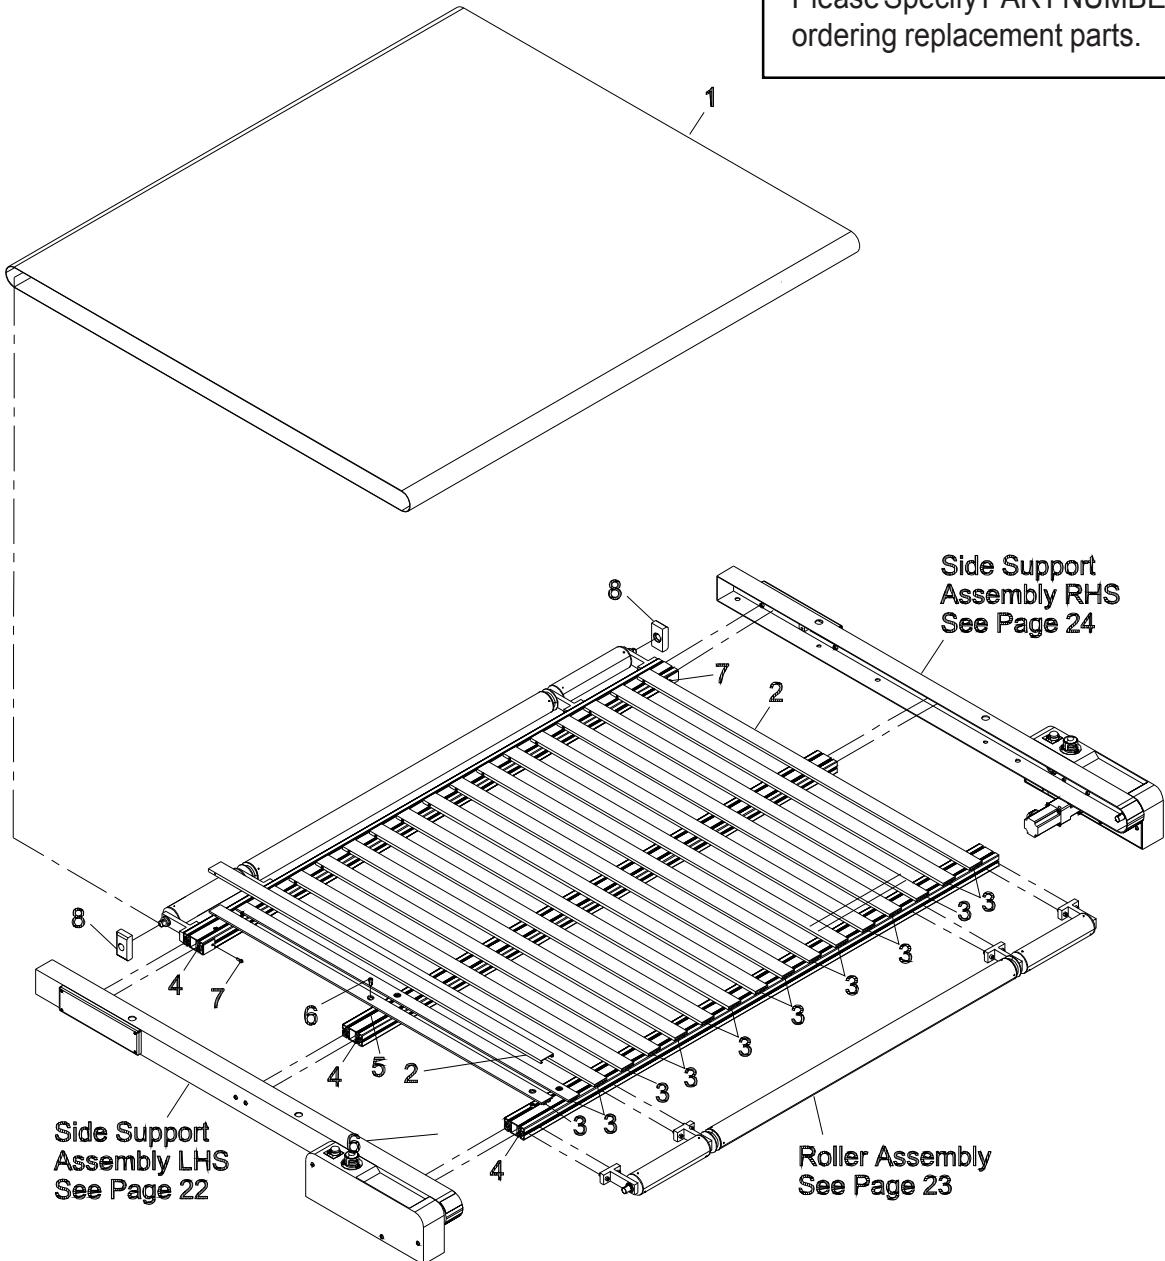

Eastman®


Over a Century of Cutting Expertise

Side Support Assembly LHS

68-26340

ITEM	PART No.	DESCRIPTION	QTY
1	67-76641	Side Support	1
2	333-37-8	5/16-24 x 1/2 Sbhcs	12
3	54-27355	Plate, Motor Mount	2
4	65-26041-56	Hex Spacer	6
5	410-080	Washer, Flt #8	14
6	335-93-8	Scr. Skt. Hd. Cap #8-32 x 1/2	10
7	54-27363-M	Cover,Take -Off Conveyor	1

ITEM	PART No.	DESCRIPTION	QTY
8	79-00011	Name Plate, Jog Metal	2
9	31-26012-2	Switch, Black	2
10	31-26012-3	Red Push/Pull Switch	2
11	31-26357	E-Stop Guard, Protective Ring	2
12	91-26011-1	Decal, "Emergency Stop"	2
13	333-36-12	Screw, Button Hd.	
14	333-102-16	5/16-18 x 0.75	16
15	54-27529	Scr. Hex. Skt. Btn #10-32 x 1	8
16	410-36	Cover Take-Off, Tension Adjust	1
17	54-27317	Washer Flt. 5/16"	4
18	335-43-72	Tensioning Block	2
		Shchs 1/2-13 x 4.5	2

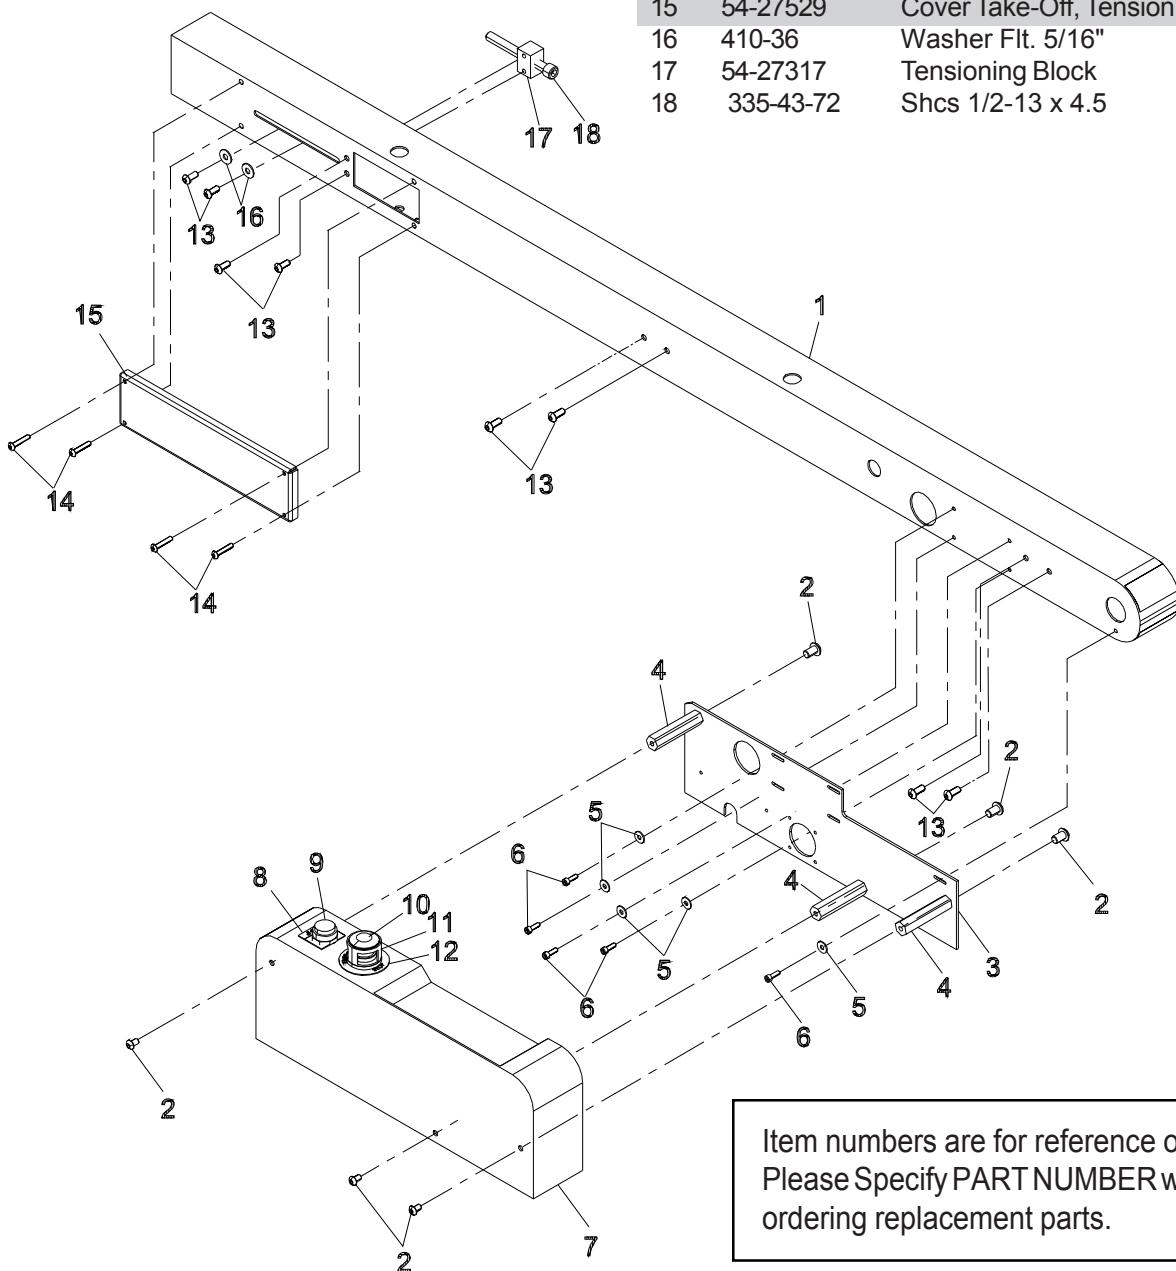


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Roller Assembly

68-26340

ITEM	PART No.	DESCRIPTION	QTY
1	67-76643	Pulley, Drive 8P, 18Teeth	1
2	67-26640	Key, 6mm Wide x 6mmDeep x 15mm	13
3	54-27341	Drive Shaft, 20mm With Key	1
4	68-26363-12	3" Roller Assembly	4
5	67-26741	Retaining Ring, External	
6	68-26364-54	C-Type 3" Roller Assembly, W/Belt Groove	16
7	54-27338	Bearing Support, 30mm Dual	8
8	65-26036-30	M8 x 1.25 x 30mm Shcs	16
9	67-26645	Bearing	18

Item numbers are for reference only.
Please Specify PART NUMBER when ordering replacement parts.

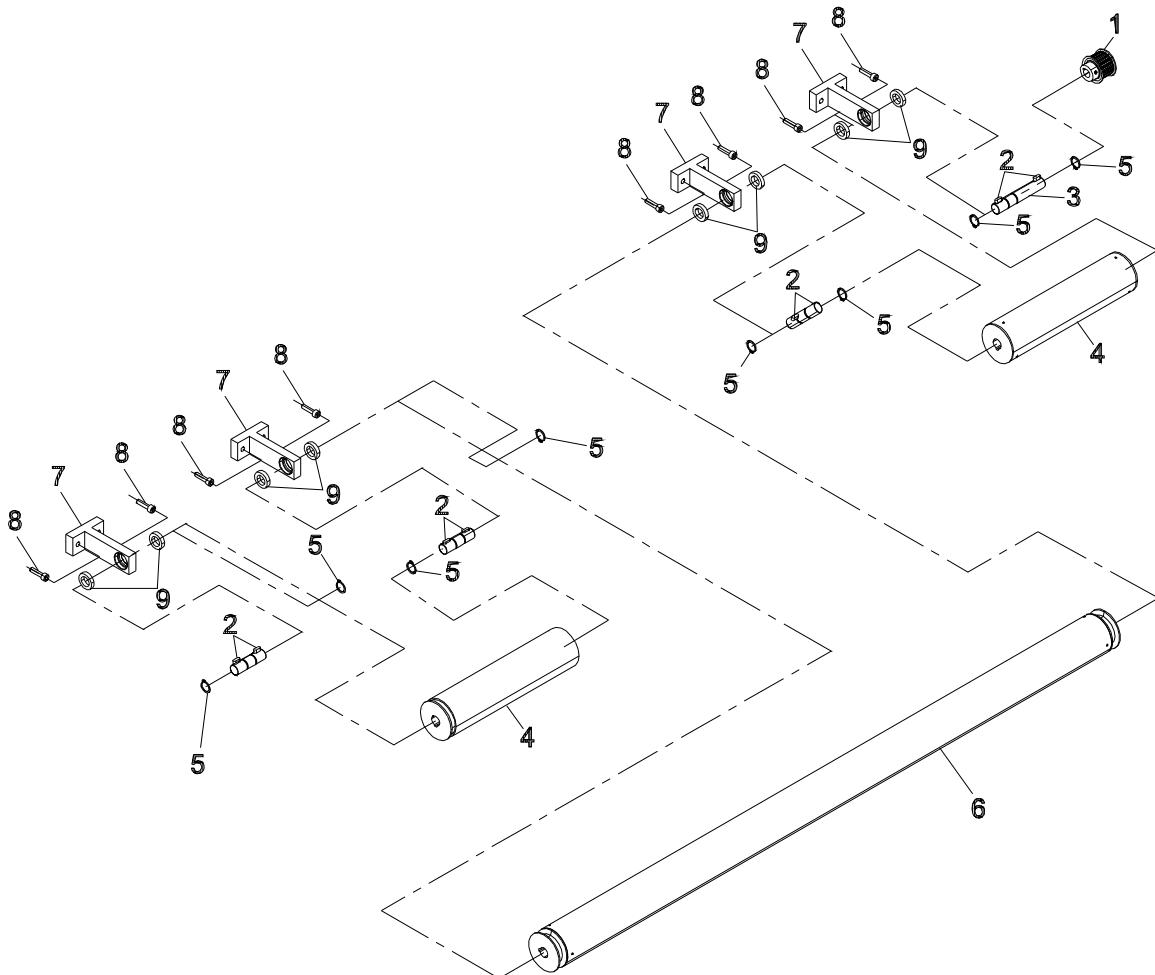


Eastman®

Over a Century of Cutting Expertise

Side Support Assembly, RHS
68-26340

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

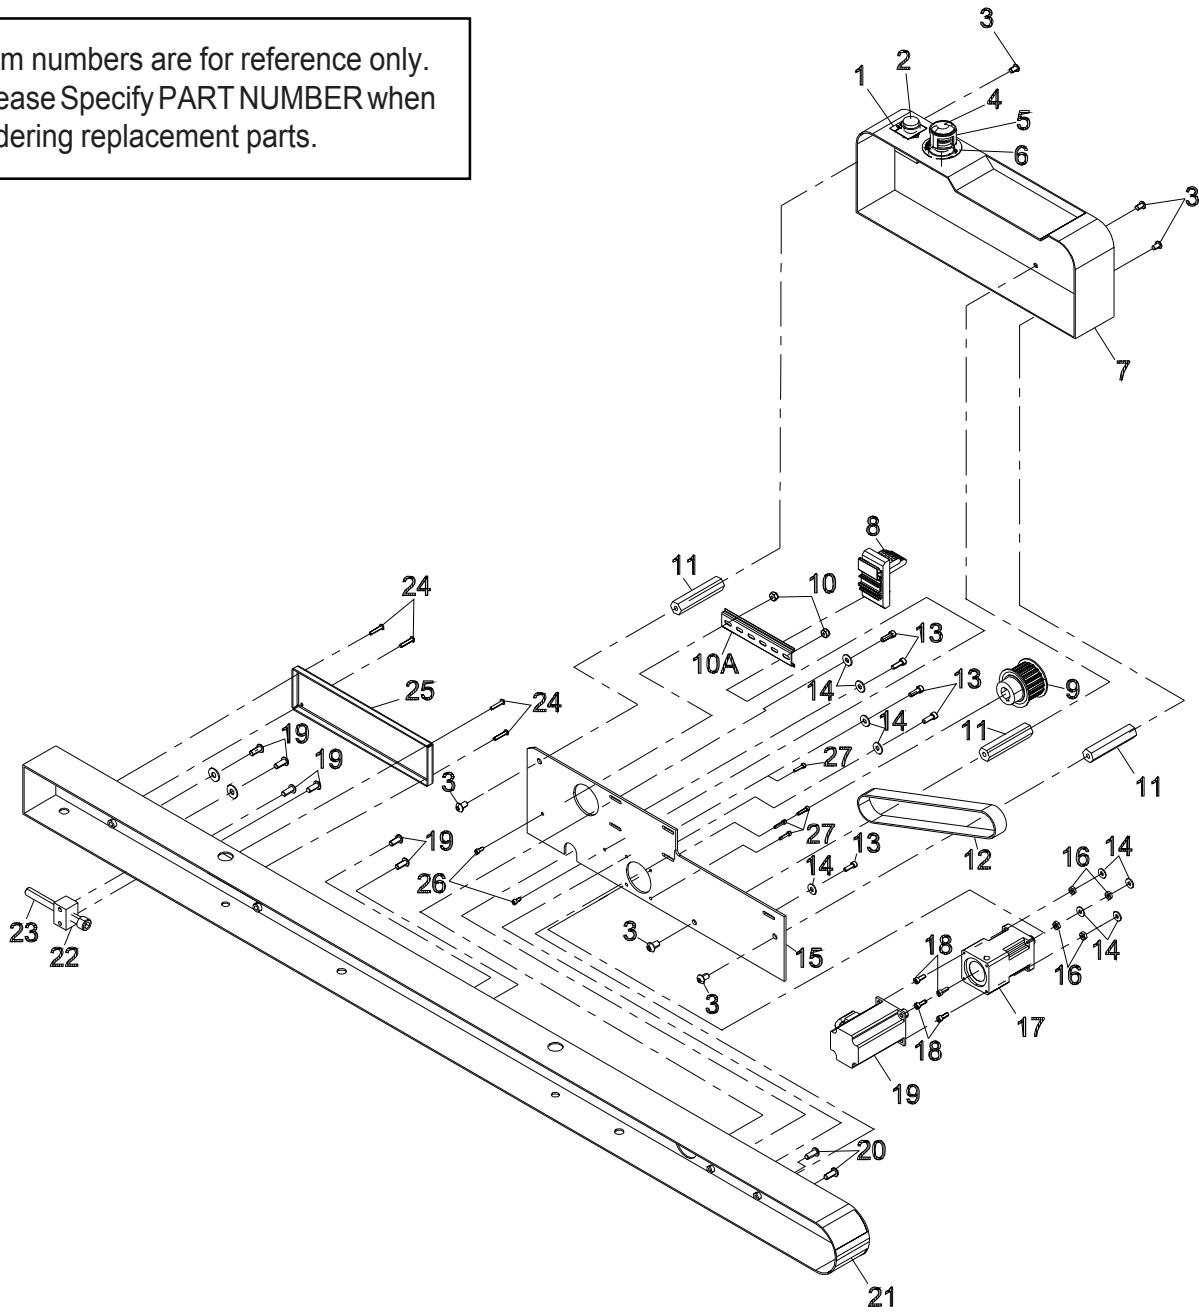

ITEM	PART No.	DESCRIPTION	QTY
1	79-00011	Name Plate, Jog, Metal	2
2	31-26012-2	Switch, Black	2
3	333-37-8	5/16-24 x 1/2 sbhcs	12
4	31-26012-3	Red Push/Pull Switch	2
5	31-26357	E-Stop Guard, Protective Ring	2
6	91-26011-1	Decal, Emergency Stop	2
7	54-27363	Cover, Take -Off Conveyor	1
8	31-26506	Db9-Male Interface Block-D	1
9	67-26618	Pulley, 18 Groove, 8mm Pitch	1
10	211-93	Nut, Elastic Stop Light #8-32	2
10A	31-00739	8" Terminal Mount Ns-35 2Mtr	2
11	65-26041-56	Hex Spacer	6
12	67-76639	Timing Belt, 8p x 25mm Wide	1
13	335-93-8	Scr, Skt. Hd. Cap #8-32 x 1/2	10
14	410-080	Washer Flat #8	14

ITEM	PART No.	DESCRIPTION	QTY
15	54-27355	Plate, Motor Mount	2
16	202-93	Nut, Mach.Scr.Hex #8-32	4
17	31-26499	Planetary Gear Head	1
18	335-M4-12	Scr, Skt. Hd. Metric M4 x 12mm	4
19	31-26498	Motor	1
20	333-36-12	Screw, Button Hd. 5/16-18 x 0.75	16
21	67-76642	Side Support, Mirror	1
22	54-27317	Tension Block	2
23	335-43-72	Shcs 1/2-13 x 4.5 full Thread	2
24	333-102-16	Scr. Hex. Skt. Btn 10-32 x 1	8
25	54-27529	Cover, Take -Off Tension Adjust	2
26	335-93-6	Scr. Skt. Hd. Cap #8-32 x 3/8	2
27	335-93-12	Scr. Skt. Hd. Cap #8-32 x 3/4	4


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise



Vertical Exhaust System, Multi-Ply 68-26367

ITEM	PART No.	DESCRIPTION	QTY
1	42-26022 x 72	Pipe, 6" Sewer & Drain x 72" Long	1
2	42-26038	6" x 90 Degree Swept Angle	1
3	42-26028	Coupler, 6" Rubber	1
4	331-38-20	Scr. Hex Hd. Cap 3/8-16 x 1 & 1/4	2
5	402-38	Washer Lock 3/8	2
6	410-38	Washer Flt. 3/8	2
7	54-27534	Exhaust Support	1
8	203-34	Nut, Fin. Hex 1/4 - 20	4
9	410-34	Washer Flt. 1/4"	4
10	54-27536-5	1/4-20 Threaded Rod x 5" Long	2
11	54-27535	Exhaust Pipe Clamp	2
*12	9066-001	Polyurethane Foam	3'

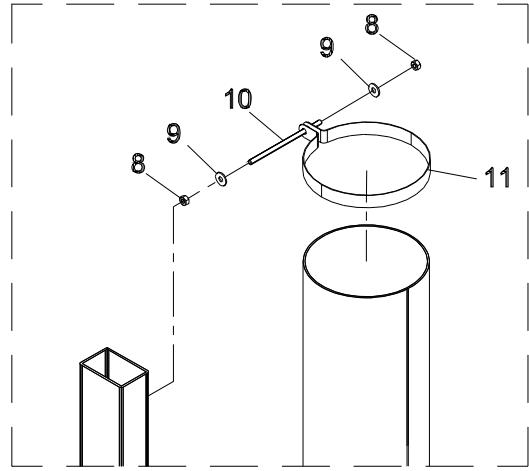

* Not Included In Assembly


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

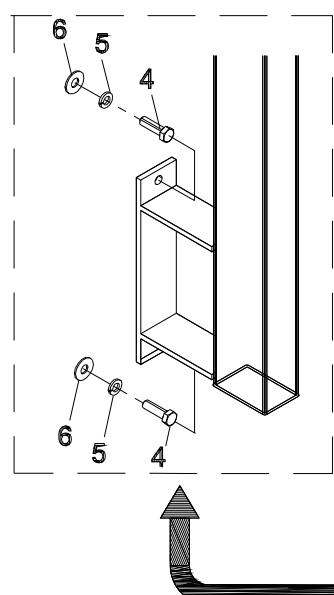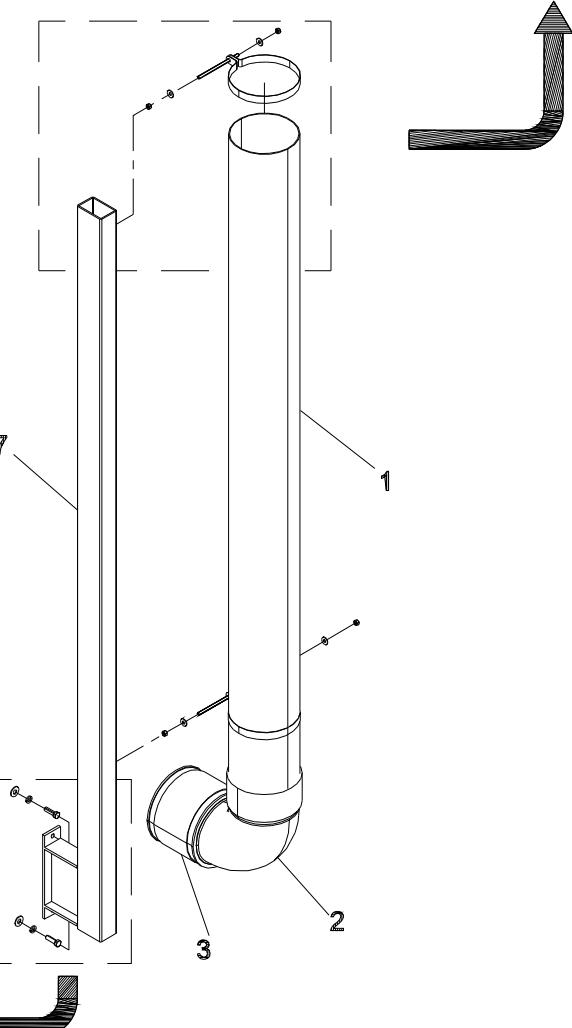

Cold Air Gun - Assembly, Right

68-26374


ITEM	PART No.	DESCRIPTION	QTY
1	67-26763	Cold Air Gun	1
2	54-27566	Cold Air Gun Sleeve	1
3	100-11-12	Male Conn 3/8" Tube 1/2"Npt	1
4	335-35-10	Screw, Socket 1/4-28 x 5/8	1
5	402-34	Washer Lock 1/4	4
6	100-11-8	Male Conn 3/8" Tube 1/4"Npt	1
7	54-27561	Right Drill Bracket	1
8	410-34	Washer Flt. 1/4	3
9	335-34-16	Scr. Skt. Hd. Cap 1/4-20 x 1	3
10	100-13-6	Male Elbow Swivel 3/8 Tube 1/4	1

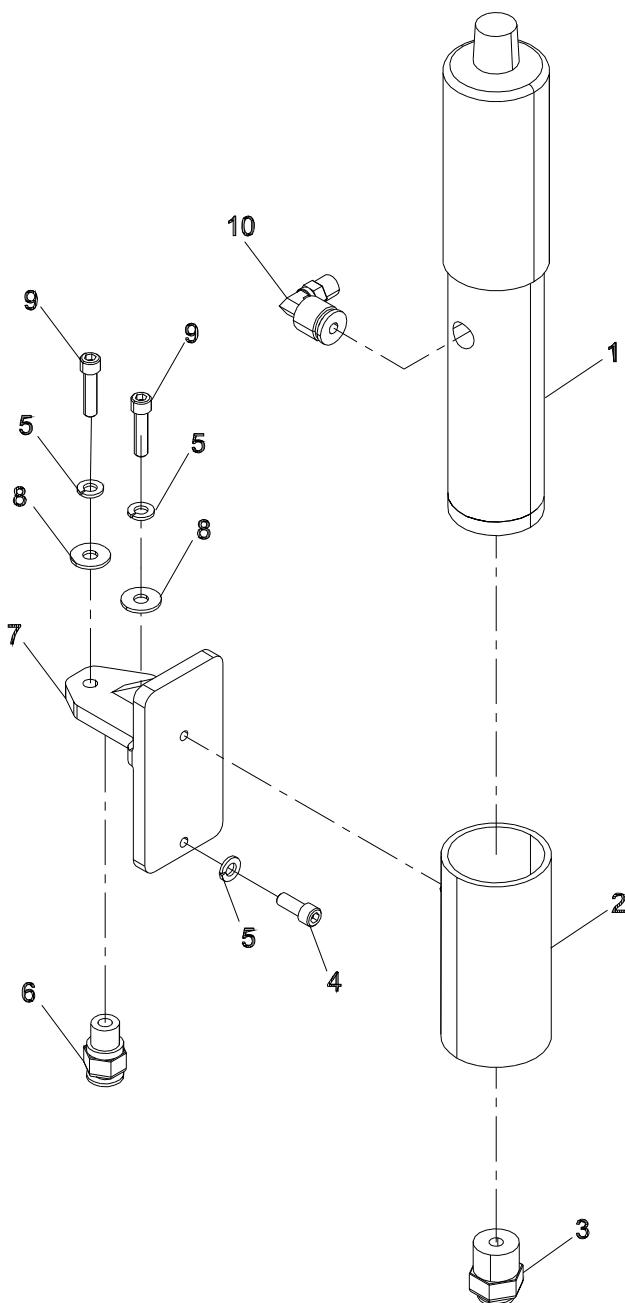

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Multi-Ply Cutter Tool Head


68-26337

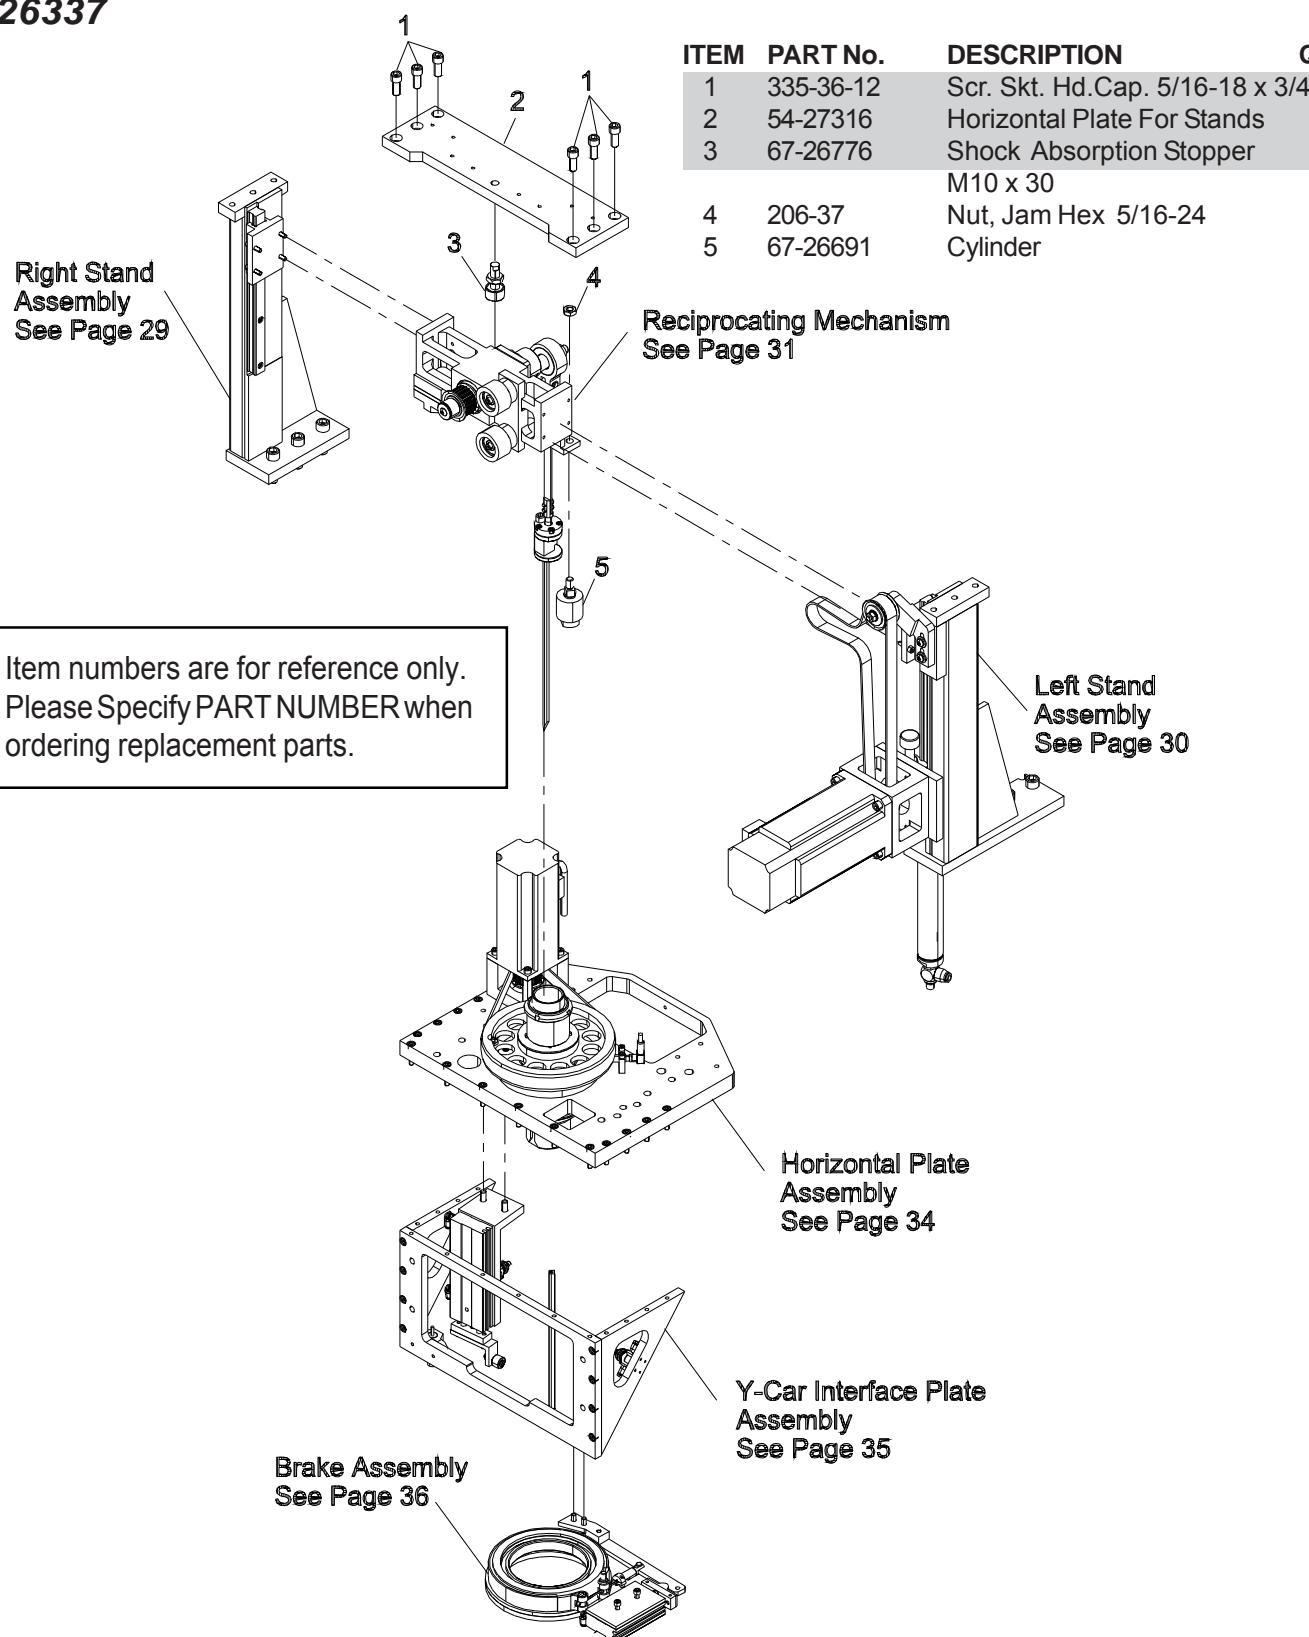

Right Stand Assembly

ITEM	PART No.	DESCRIPTION	QTY
1	54-27310	Right Stand	1
2	335-M4-16	Scr. Skt. Hd. Metric M4 x 16mm	16
3	67-26669	Thk M Guide Rail & Slide	2
4	335-38-20	Scr. Skt. Hd.Cap 3/8-16 x 1-1/4	7

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

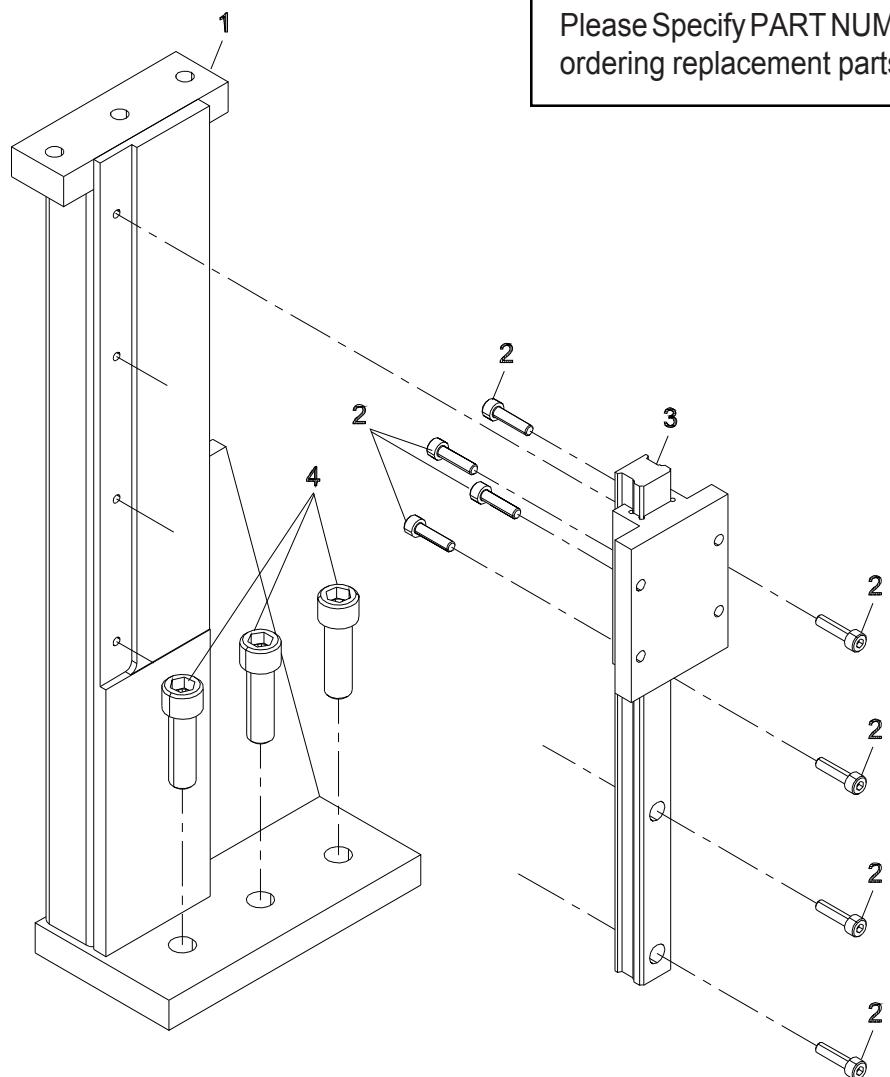


Eastman®

Over a Century of Cutting Expertise

Left Stand Assembly

ITEM	PART No.	DESCRIPTION	QTY
1	54-26152	5/8-18 Nut, .200 Thick	1
2	67-26617	Bracket	1
3	67-26684	Cylinder	1
4	100-18-36	Flow Control Valve 1/8" Port, 1/4" Tube, Knob	1
5	100-18-37	Flow Control Valve 1/8" Port, 1/4" Tube, Reseeced	1
6	335-M4-16	Scr. Skt. Hd. Metric	
		M4 x 16mm	16
7	67-26669	Thk M Guide Rail & Slide	2
8	54-27309	Left Stand	1


ITEM	PART No.	DESCRIPTION	QTY
9	335-38-20	Scr. Skt. Hd. Cap 3/8-16 x 1-1/47	
10	206-M10 x 1.5	Nut Hex Jam M10 x 1.5	1
11	67-26652	Pulley	1
12	54-27321	Motor Plate	1
12A	31-26505	Knife Motor Med Ply-5000 Rpm	1
13	335-34-12	Scr. Skt. Hd. Cap 1/4-20 x 3/4	4
14	333-102-10	Scr.Hex.Skt.Btn. #10-32 x 5/8	2
15	402-010	Washer, Lock #10	2
16	410-010	Washer Flt #10	2
17	67-26658	Timing Belt	1
18	67-26622	Bearing Spacer	1
20	67-26624	Washer	1
21	67-26623	Bearing Spacer	1
22	67-26650	Precision Pivot Pin	1
23	54-27315	Drive Belt Tension Bracket	1
24	UNST10-40	Shock Absorption Stopper	1
25	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	16

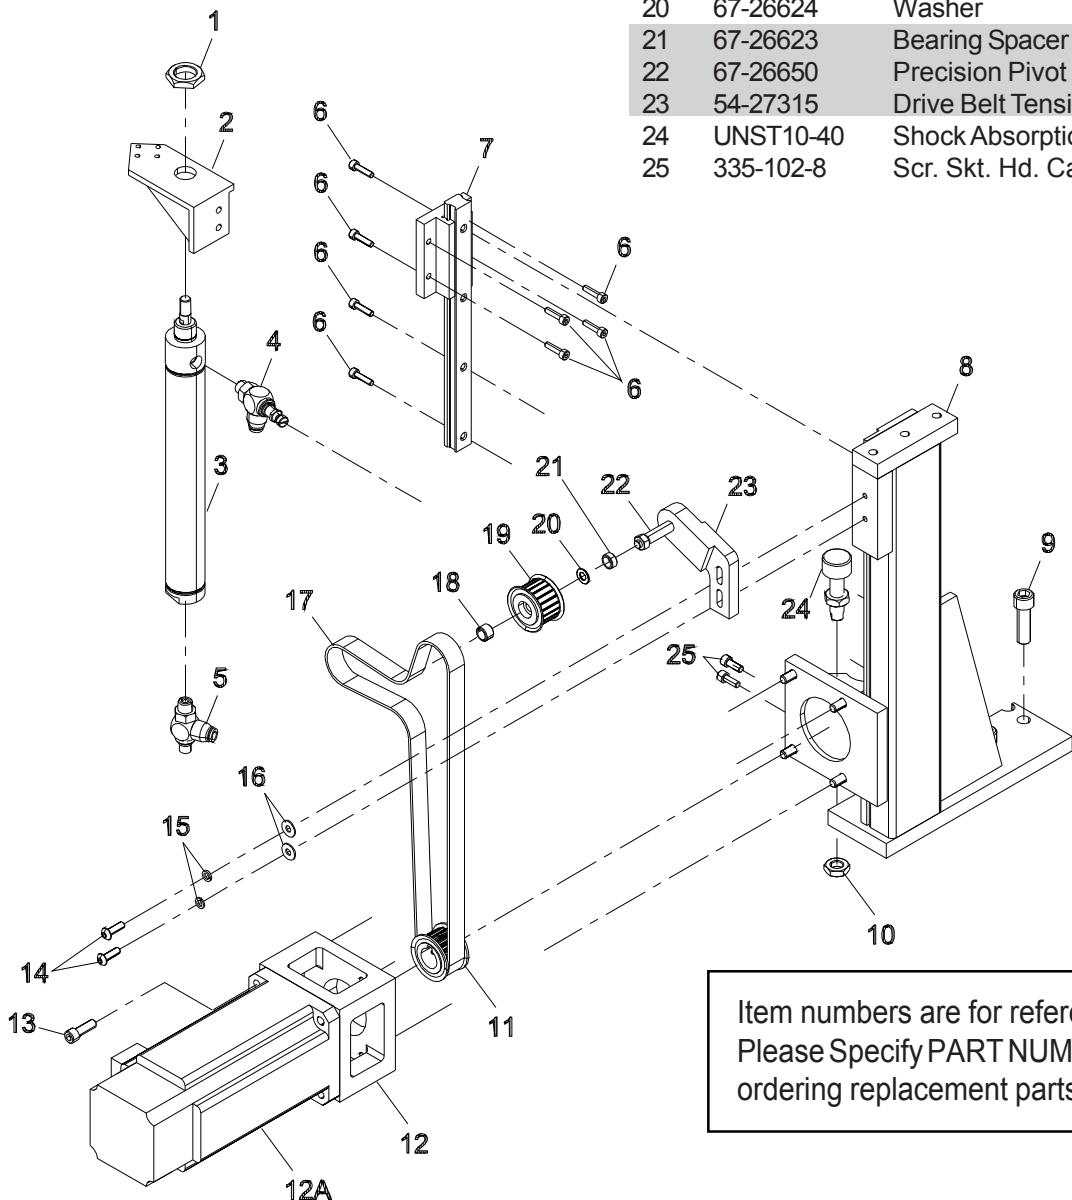

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Reciprocating Mechanism

68-26339

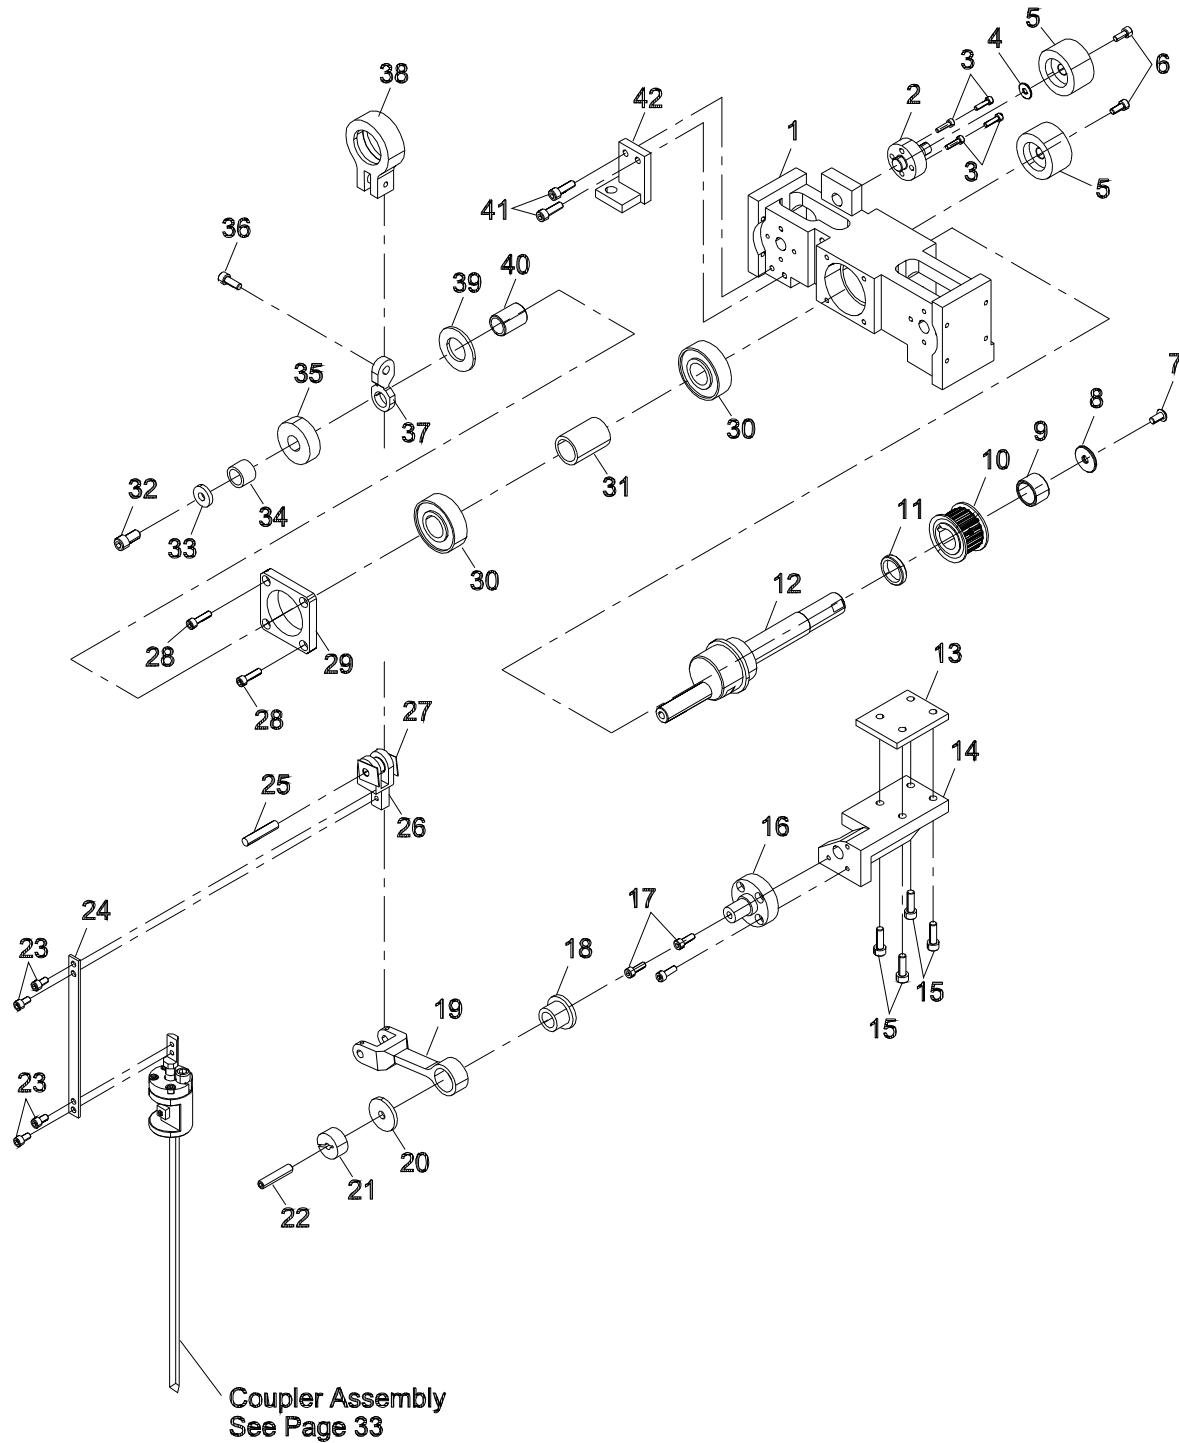

Eastman®

Over a Century of Cutting Expertise

ITEM	PART No.	DESCRIPTION	QTY
1	54-27313	Reciprocating Housing	1
2	67-26670	Cantilever Shafts	2
3	335-M3-12	Scr. Skt. Hd. Metric M3 x 12	8
4	67-26621	Washer	2
5	67-26668	Idler Pulley	2
6	335-M4-10	Scr. Skt. Hd. Metric M4 x 10mm	2
7	333-102-6	Scr. Hex. Skt. Btn. #10-3/2 x 3/8	1
8	67-26626	Washer	1
9	67-26755	Collar Dia 16-20 x 13	1
10	67-26652	Pulley	1
11	67-26625	Washer	1
12	54-27322	Crank Shaft 0.75	1
13	54-27408	Spacer	1
14	67-26672	Angle Plate	1
15	335-M5-16	Scr. Skt. Hd. Metric M5-0.8 x 16	4
16	67-26673	Cantilever Shaft	1
17	335-M4-12	Scr. Skt. Hd. Metric M4 x 12mm	3
18	67-26674	Oil Free Bushing	1
19	54-27354	Supporting Arm	1
20	67-26675	Oil Free Bushing	1
21	67-26667	Shaft Collar	1
22	342-M6-30-6S	Skr, Hex, Skt, Set, M6, 30 mm Lg, cup	1
23	335-94-5	Scr. Skt. Hd. Cap #8-36 x 5/16	4
24	54-27425	Blade Link	1
25	67-26682	Shaft	1
26	54-27409	Lower Arm	1
27	67-26681	Square Shim	2
28	335-93-10	Scr. Skt. Hd. Cap #18-3/2 x 5/8	4
29	54-27403	Bearing Clamp A	1
30	90C6-38	Bearing Ball 625	2


ITEM	PART No.	DESCRIPTION	QTY
31	67-26676	Bearing Spacer	1
32	335-34-8	Scr. Skt. Hd. Cap 1/4-20 x 1/2	1
33	67-26666	Washer	1
34	67-26660	Bearing Spacer	1
35	90C6-46	Bearing Ball	1
36	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	1
37	54-27407	Link	1
38	54-27353	Crank Bearing Housing	1
39	4C1-132	Lock Nut Crank Brng	1
40	67-26659	Bearing Spacer	1
41	335-102-10	Scr. Skt. Hd. Cap #10-32 x 5/8	2
42	54-27410	Lifting Cylinder Bracket	1

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Coupler Assembly

68-26362

ITEM	PART No.	DESCRIPTION	QTY
1	67-26766	Ball Plunger	1
2	54-27436-1	Coupler Guide, Aluminium	1
3	54-27362	Mpc knife Blade, 8 x 2.35 x 257mm	1
4	54-27449	Wedge	1
5	54-27579	Clamp	1
6	54-27578	Ball Bearing Spacer	1
7	54-27439	Shaft For Spherical Bearung	1
8	67-26703	Spherical Bearing	1
9	54-27575	Bearing Housing	1
10	67-26704	Bearing spacer, 4-7-4.9	1
11	54-27435	Coupler Connector	1
12	54-27576	Adjusting Bolt	1
13	335-86-6	Scr. Skt. Hd. cap #6-32 x 3/8	4

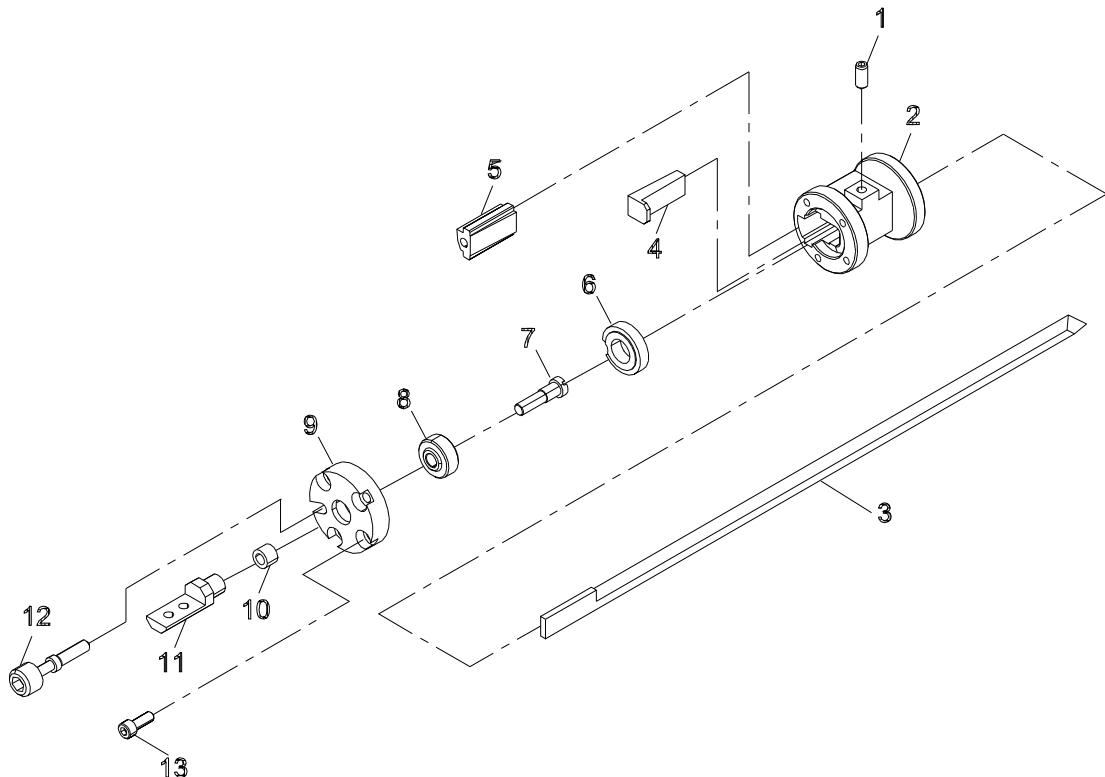


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

Horizontal Plate Assembly

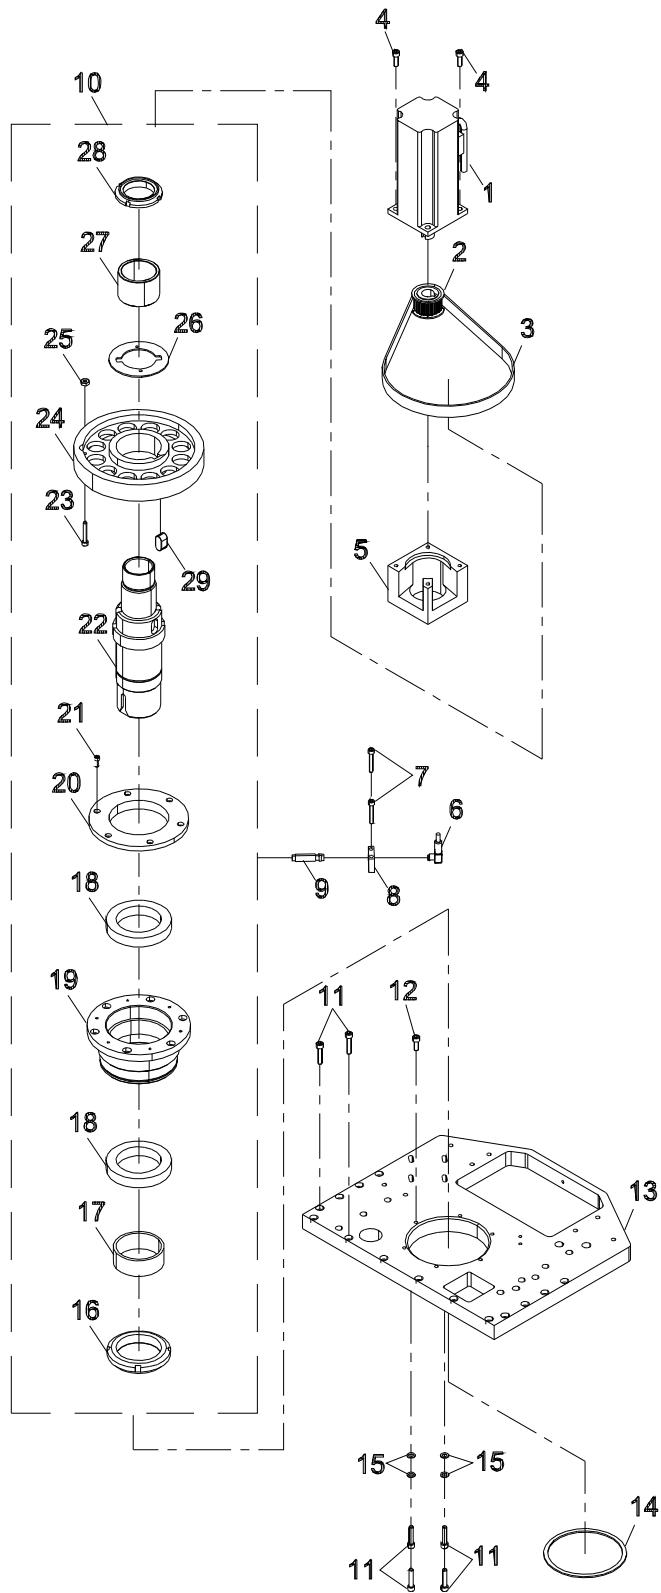


ITEM	PART NO.	DESCRIPTION	QTY
1	31-26435	Y/Z Motor W/ PigTail, 11.25"	1
2	67-26602	Drive Pulley, 20 Teeth	1
3	67-26644	Timing Belt	1
4	335-102-9	Shcs #10-32 x 0.5625	4
5	54-27404	Motor Support	1
6	31-03008-1	Cable For Prox Switch	1
7	335-93-16	Scr. Skt. Hd. Cap #8-32 x 1.00	2
8	54-27370	Sensor Bracket	1
9	31-26183	Proxy Switch	1
10	68-26338	Knife Rotating Guide	1
11	335-102-14	Scr. Skt. Hd. Cap #10-32 x 0.875	18
12	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	16
13	54-27312	Horizontal Plate	1
14	67-26714	85mm External Retaining Ring	1
15	413-010	Washer, Flat	4
16	67-26695	Locking Bearing Nut	1
17	67-26740	Collar	1
18	67-26697	Bearing	2
19	54-27305	Bearing Housing	1
20	54-27420	Bearing Cover	1
21	335-86-6	Scr. Skt. Hd. Cap #6-32 x 3/8	6
22	54-27348	Shaft	1
23	335-93-16	Scr. Skt. Hd. Cap #8-32 x 1.00	1
24	54-27306	Timing Pulley	1
25	202-93	Nut, Mach. Scr. Hex #8-32	1
26	54-27568	Disk	1
27	67-26775	SS Collar, 38.5 Dia/46 Dia x 32.5mm	1
28	67-26764	Bearing Nut M35 x 1.5	1
29	602-12-12-12	Key, Flt. Rounded, 0.375 x 0.375 x 0.375	1

Item numbers are for reference only.
Please Specify PART NUMBER when ordering replacement parts.

Y-Car Interface Plate Assembly

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	54-27528	Support Gusset Right	1	11	31-26509	Bimba Sensor	2
2	335-34-10	Scr. Skt. Hd. Cap 1/4-20 x 5/8"	2	12	54-27371	Tool Head Support Gusset	1
3	54-27364	Angle Plate	1	13	335-102-8	Scr.Skt.Hd.Cap #10-32 x 1/2	16
4	335-93-12	Scr. Skt. Hd. Cap #8-32 x 3/4	2	14	67-26646	Cam Follower	1
5	100-18-38	Flow Valve, In Line, 5/32 Tube	3	15	335-34-12	Scr.Skt.Hd.Cap 1/4-20 x 3/4	4
6		B18.3.1M-2 x 0.4 x 20		16	54-27366	Bracket For Cam Follower	1
		Hex Shcs-16Nhx	13	17	67-26692	Cylinder	1
7	54-27411	Y-Car Interface Plate	1	18	100-13-13	Elbow Swivel, Tube 5/32, Pipe 10-32	2
8	54-H0403	Mount Laser Pointer	1				
9	81-00002	Laser Diode Pointer	1				
10	335-93-10	Scr.Skt.Hd.Cap 8-32 x 5/8	2				

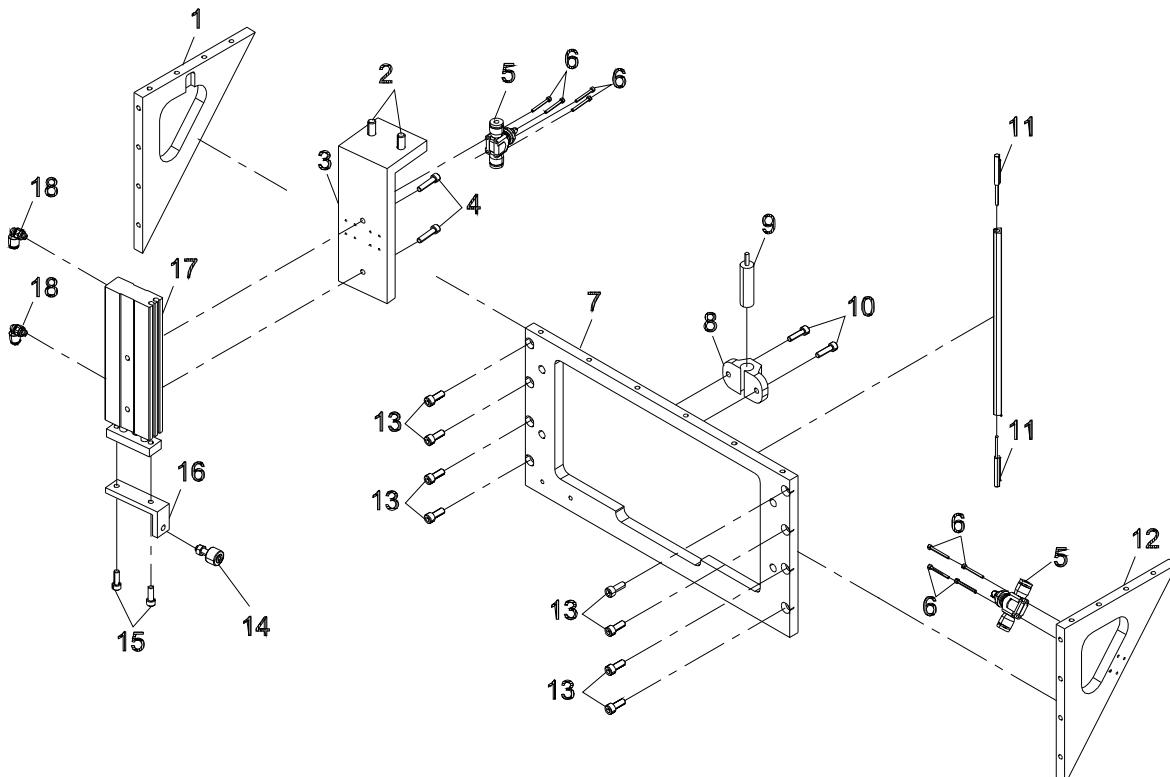


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

Brake Assembly

68-26384

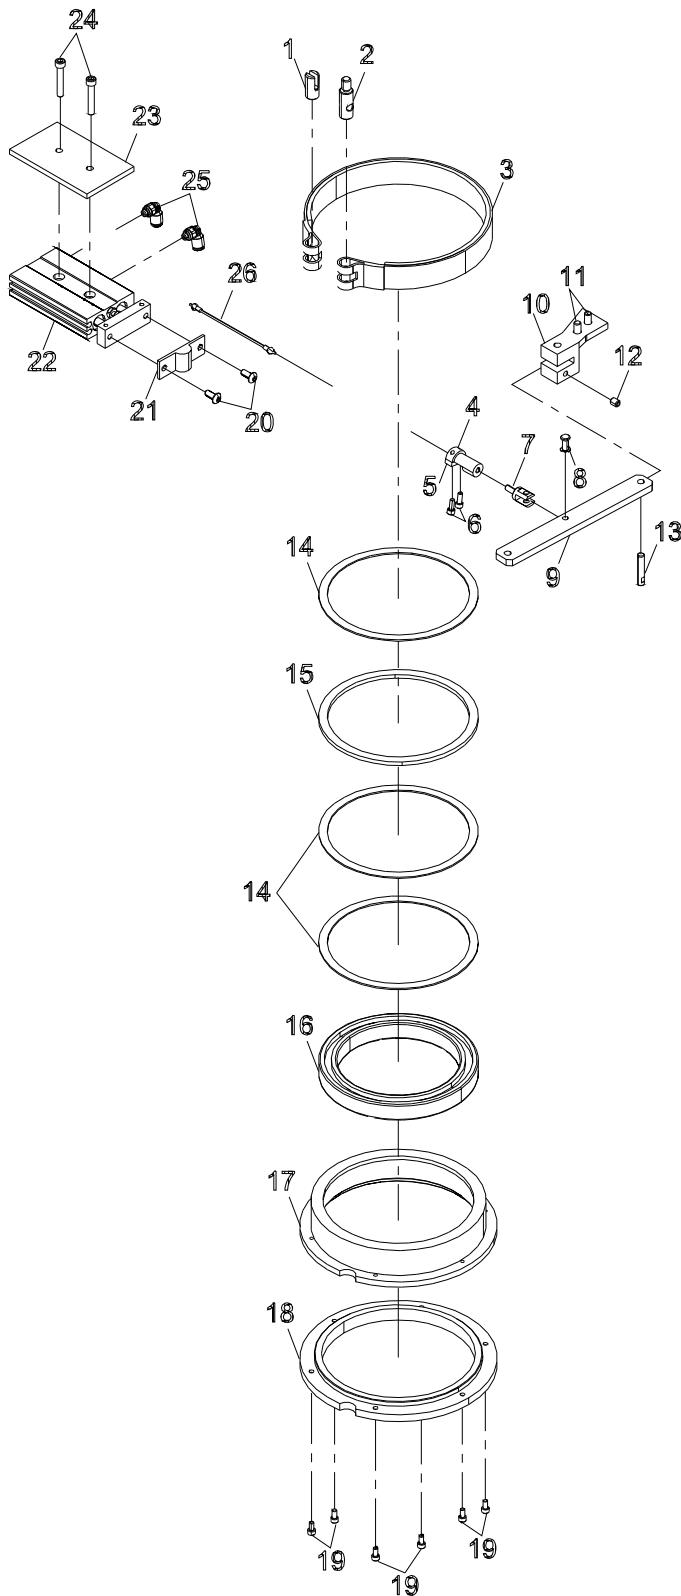


ITEM	PART NO.	DESCRIPTION	QTY
1	54-27617	Pin With Groove	1
2	54-27613	Pin For Band Brake	1
3	54-27622	Band Brake	1
4	54-27615	Cable Holder	1
5	54-27616	Clamp	1
6	335-84-5	Shcs #5-40 x 5/16	2
7	67-26785	Link Bar	1
8	67-26783	Flange Pin	1
9	54-27614	Link	1
10	54-27618	Pivot Base	1
11	335-102-8	Scr. Skt. Hd.Cap #10-32 x 1/2	2
12	342-102-4	Scr.Hx.Skt.Set,#10-32 x 1/4" Lg 2	
13	67-26784	Hinge Pin	1
14	67-26786	Shim Ring	3
15	67-26787	Preload Spring	1
16	67-26698	Bearing	1
17	54-27625	Housing For Break Bearing	1
18	54-27624	Internal Gear	1
19	335-84-4	Scr. Skt. Hd.Cap #5-40 x 1/4	6
20	333-93-6	#8-32 x 3/8" Button Head Cap Screw	2
21	54-27620	Cam	1
22	67-26694	Bimba Cylinder	1
23	54-27626	Spacer	1
24	335-93-16	Scr. Skt. Hd.Cap #8-32 x 1.00	2
25	100-13-13	Elbow Swivel, Tube 5/32, Pipe 10-32	2
26	67-26782	Cable Assy, Dia 1/16", 3.25"Ln	1

Item numbers are for reference only.
Please Specify PART NUMBER when ordering replacement parts.

Blower Frame Assembly

68-26357-MS

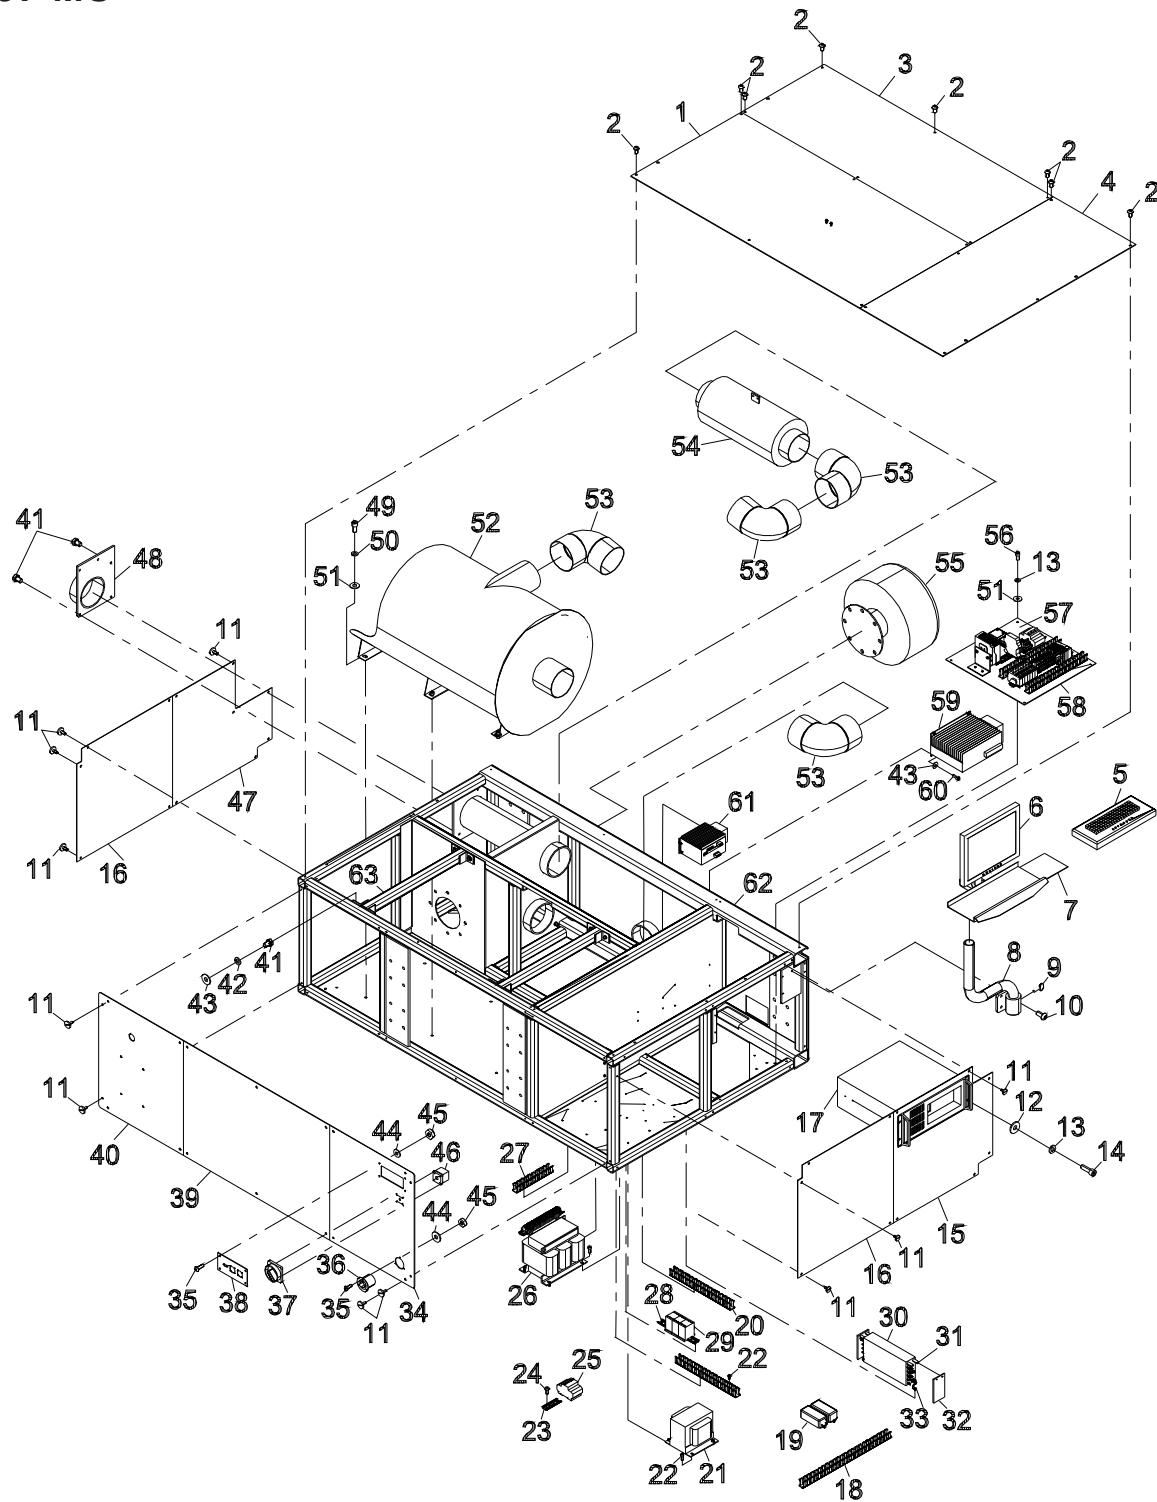

Eastman®

Over a Century of Cutting Expertise

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	54-27502	Blower Top Cover	1	32	54-26558	Filter Cover	2
2	333-M6-10	Scr. Sbhcs, Metric M6 x 10	18	33	67-26383	Fan Mounting Angle	4
3	54-27503	Blower box Cover	1	34	54-27507	Electronics End Cover	1
4	54-27504	Electronics Cover	1	35	333-93-8	Scr. Hex. Skt. Btn #8-32 x 1/2	7
5	11-00868-03	Key Board	1	36	31-26300-440	4 Wire 3 Phase Flanged Connector	1
6	10-26065-2	19" Flat Panel Monitor	1	37	31-26297	Legend Plate	2
7	67-26726	Computer Monitor & Key Board	1	38	54-27413	Bulk Head Plate	1
8	54-27469	Computer Stand Bracket	1	39	54-27501	Blower End Cover Large	1
9	387-34-12	Scr. Thumb. No Shldr.		40	54-27500	Blower End Cover Small	1
		1/4-20 x 3/4	1	41	331-38-8	Scr. Hex. Hd. Cap 3/8-16 x 1/2	13
10	333-38-12	Bttn. Hd. Sckt. 3/8-16 x 3/4	3	42	402-38	Washer Lock 3/8	8
11	67-26736	Pan Head Screw M6 x 16	40	43	410-34	Washer Flt 1/4	8
12	410-010	Washer, Flt. #10	4	44	410-38	Washer Flt 3/8	8
13	402-34	Washer, Lock 1/4	8	45	202-93	Nut, Mach. Scr. Hex #8-32	7
14	335-34-12	Scr.Hex.Skt.Btn. #6-32 x 3/8	4	46	31-26296	Disconnect Switch	1
15	54-27505	Electronics Cover For Computer	1	47	54-27498	Filter Cover Plate	1
16	54-27499	Blower Side Cover	2	48	54-27508	Silencer Stack Interface Plate	1
17	10-26083	Computer Ce Complaint/		49	335-43-16	Scr.Skt.Hd.Cap 1/2-13 x 1	10
		Industrial	1	50	402-44	Washer Lock 1/2	10
18	70-26001	Duct, Wiring, 1" Wide x 1.5" High x 24" Lg	1	51	410-44	Washer Flat 1/2	10
19	31-26501	Single Phase Line Filter		52	42-26062	Spencer Blower	1
		25 Amp, 250Vac	1	53	42-26065	Gasketed Elbow, 90 Deg., 6" Sewer	4
20	70-26001	Duct, Wiring, 1" Wide x 1.5" High x 16.5" Lg	2	54	42-26064	Spencer Silincer	1
21	31-26500	Transformer, Hpi-35 3.5 Kva	1	55	42-26063	Spencer Inlet Air Filter	1
22	335-36-12	Scr. Skt. Hd. Cap 5/16-18 x 3/4	8	56	335-34-8	Scr. Skt. Hd. Cap 1/4-20 x 1/2	4
23	31-00739-4	Din Rail, 4" Lg	1	57	65-26041-29	Hex spacer	1
24	333-93-6	Button Head Cap Screw #8-32 x 3/8"	14	58	31-26592	Electronics Tray Assembly, Mpc	1
25	31-26383	30A 3 Phase Circuit Breaker	2	59	31-26464	Conveyor Amp Synqnet-230 Vac1	
26	31-26390	Transformer, 3 Ph, Universal	1	60	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	4
27	70-26001	Duct, Wiring, 1" Wide x 1.5" High x 10" Lg	1	61	31-26377	X Axis Stand Alone Amp-220Vac1	
28	31-00739-10	10" Terminal Mount Ns-35 2Mtr	1	62	54-27398	Multiply Blower Frame	1
29	31-26298	24 Volt Contactor	3	63	54-27511	Blower Frame Cross Member	2
30	31-26299	Corcom filter, Conveyor	1				
31	54-26557	Filter Cover Spacer	4				


Item numbers are for reference only.
Please Specify PART NUMBER when ordering replacement parts.

Electronic Tray Assembly

31-26592

ITEM	PART No.	DESCRIPTION	QTY
1	31-26381	Safety Monitoring R P	1
2	31-26405	Ground Terminal Block; Din Mount	5
3	31-26384	Terminal Blocks Din Rail Mount	1
4	31-26476	Custom Control 1/10 Block	1
5	31-00739-12	12" Terminal Mount Ns-35 2 Mtr	1
6	333-93-6	#8-32 x 3/8" Button Head Cap Screw	12
7	31-26399	12 Amp 3Ph Din Mount Circuit Breaker	1
8	31-26414	Terminal End Clamps; Din Mount	4
9	31-26373	Db9 Interface terminal Block	1
10	31-26379	Slice Tsio-5001 Contact Output	1
11	31-26369	Slice Analog Output (4-20MA)	1
12	31-26502	Tsio-6006 Analog Input Card	1

ITEM	PART No.	DESCRIPTION	QTY
13	31-26380	Db15 Interface Terminal Block	2
14	31-26226	Fuse Block, Single Pole,30Amp	7
15	31-00739-16	16" Terminal Mount Ns-35 2Mtr	1
16	70-26001	Duct, Wiring, 1"Wide x 1.5"High	1
17	54-27506	Electronics Mount Tray	1
18	54-27510	Din Rail Bracket	1
19	31-00739-4	Din Rail 4"LG	1
20	31-26370	Phoenix 24 Vdc 5A Din Mount Pwr	1
21	31-26503	Pressure TX Mtr, 0-20 in H2O	1
22	335-93-20	Scr. Skt.Hd. Cap 8-32 x 1.25	4
23	31-26504	Pressure TX Mtr, 0-100 in H2O	1
24	410-080	Washer Flt #8	2
25	402-080	Washer Lock #8	2
26	202-93	Nut, Mach.Scr. Hex #8-32	2

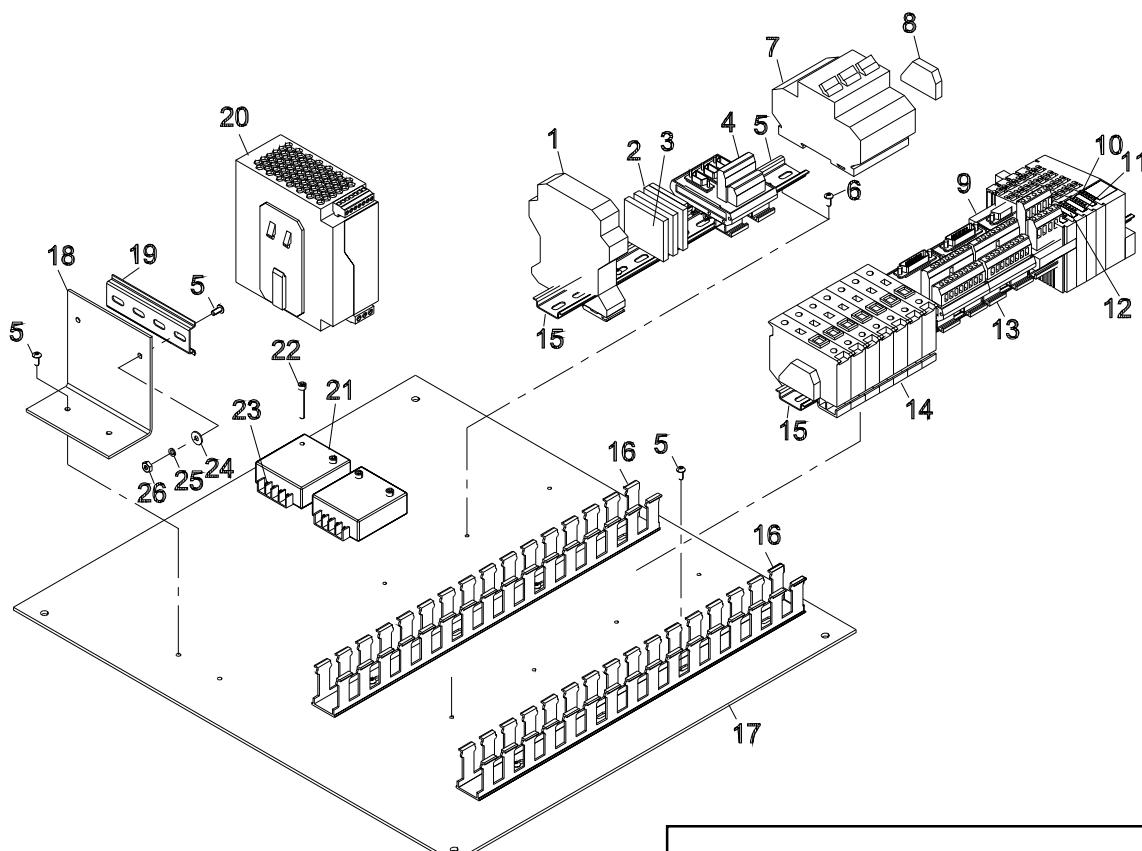

Item numbers are for reference only.
Please Specify PART NUMBER when ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

Drill, Left, Pneumatic Assembly


68-26372

ITEM	PART No.	DESCRIPTION	QTY
1	100-11-8	Male Conn 3/8" Tube 1/4" Npt	1
2	67-26756	Desoutter Straight Grip Drill	1
3	31-26509	Bimba Sensor	2
4	67-26757	Twin Bore Cylinder 20 x 75 mm	1
5	335-34-16	Scr. Skt. Hd. Cap 1/4-20 x 1	5
6	151C1-9	One Touch Air Fitting 10-32	2
7	335-93-5	Scr. Skt. Hd. Cap #8-32 x 5/16	4
8	54-27560	Drill Guide Cap	2
9	335-93-16	Scr. Skt. Hd. Cap #8-32 x 1	4
10	67-26758	Flanged Bushing	2
11	54-27563	Drill Mount Plate	1
12	67-26759	Precision Linear Shaft	2

ITEM	PART No.	DESCRIPTION	QTY
13	67-26760	Lee Compression Spring	2
14	54-27564	Drill Presser Foot	1
15	342-34-4	Scr. Hex. Skt. Set 1/4-20 x 1/4	1
16	See Chart	Guide Bushing	1
17	See Chart	1/8" Open End Awl 3-1/2" Act. Length	1
18	202-93	Nut, Mach. Scr. Hex #8-32	4
19	402-080	Washer Lock #8	4
20	410-080	Washer Flt #8	4
21	333-102-16	Scr. Hex. Skt. Btn #10-32 x 1	2
22	54-27562	Left Drill Bracket	1
23	410-34	Washer Flt 1/4	3
24	402-34	Washer Lock 1/4	3

*See Chart

Hole Dia 1/8"	Guide Bushing 21C13-59	Drill 231C3-50
------------------	---------------------------	-------------------

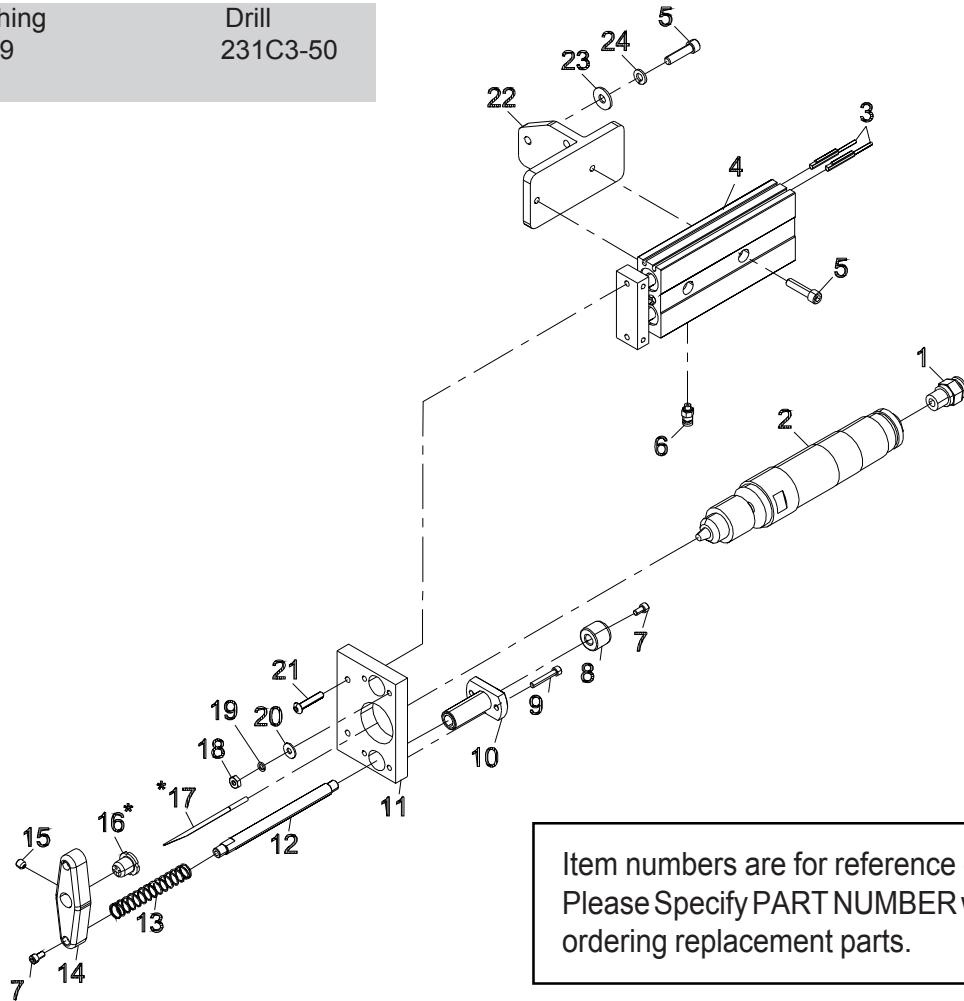

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


Drill, Right, Pneumatic Assembly

68-26373

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	100-11-8	Male Conn 3/8" Tube 1/4" Npt	1	13	67-26760	Lee Compression Spring	2
2	67-26756	Desoutter Straight Grip Drill	1	14	54-27564	Drill Presser Foot	1
3	31-26509	Bimba Sensor	2	15	342-34-4	Scr. Hex. Skt. Set 1/4-20 x 1/4	1
4	67-26757	Twin Bore Cylinder	1	16	See Chart	Guide Bushing	1
5	335-34-16	Scr.Skt.Hd.Cap 1/4-20 x 1	5	17	See Chart	1/8" Open End Awl 3-1/2" Act.	
6	151C1-9	One Touch Air Fitting 10-32	2			Length	1
7	335-93-5	Scr.Skt.Hd.Cap #8-32 x 5/16	4	18	202-93	Nut, Mach. Scr. Hex. #8-32	4
8	54-27560	Drill Guide Cap	2	19	402-080	Washer Lock #8	4
9	335-93-16	Scr.Skt.Hd.Cap #8-32 x 1	4	20	410-080	Washer Flt #8	4
10	67-26758	Flanged Bushing	2	21	333-102-16	Scr. Hex. Skt. Btn. #10-32 x 1	2
11	54-27563	Drill Mount Plate	1	22	54-27561	Right Drill Bracket	1
12	67-26759	Precision Linear Shaft	2	23	410-34	Washer Flt 1/4	3
				24	402-34	Washer Lock 1/4	3

*See Chart

Hole Dia 1/8"	Guide Bushing 21C13-59	Drill 231C3-50
------------------	---------------------------	-------------------

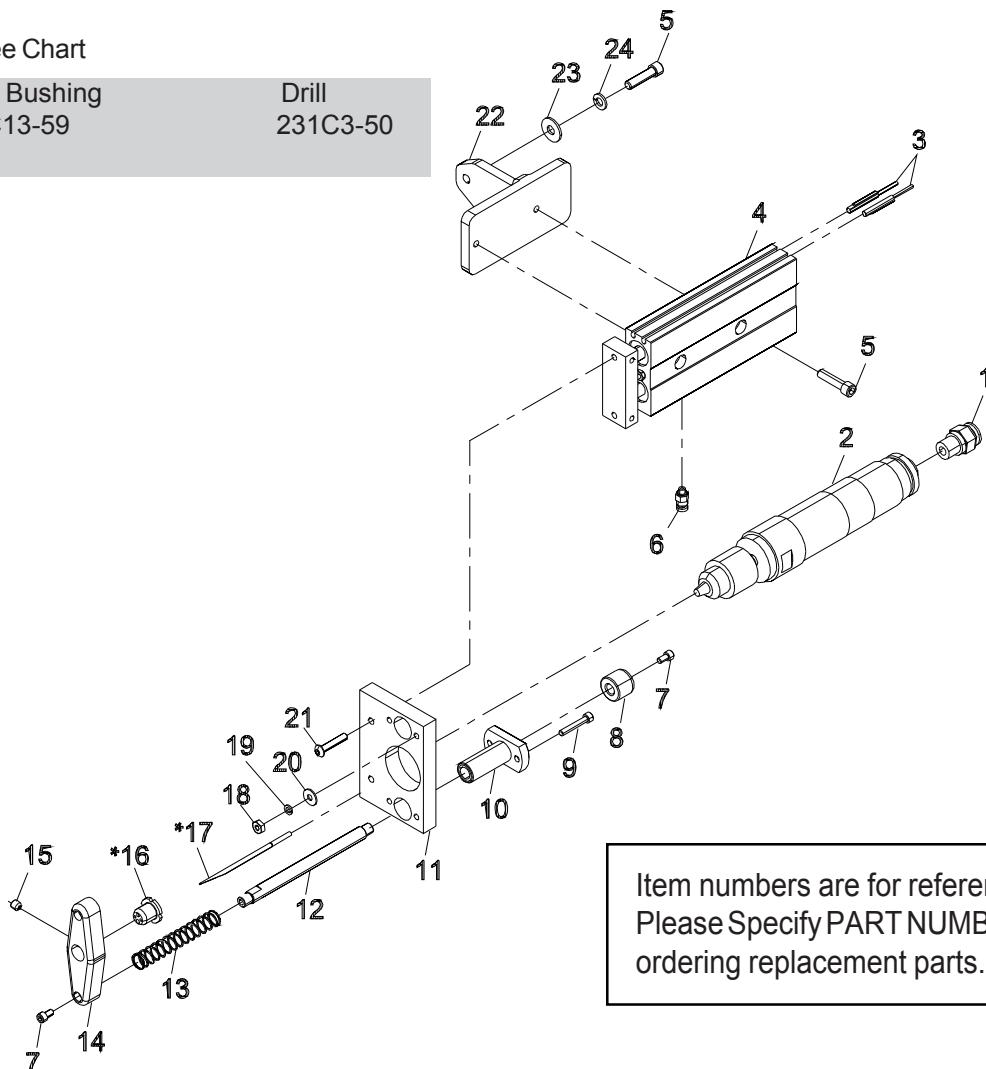

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise


Overlay Resealer, Multi-Ply

68-26368-MS

ITEM	PART No.	DESCRIPTION	QTY
1	54-27547	Roller Stud, Resealer	2
2	CH-2003-1	Bearing Cap, Resealer	2
3	9020-0202	Bearing	2
4	54-27546	Mounting Plate, Resealer	2
5	335-102-6	Scr. Skt. Hd. Cap #10-32 x 3/8	8
6	332-34-8	Scr. Skt. Flt. Hd. Cap	
		1/4-20 x 1/2	4
7	68-26369-MS	Resealer Tube assembly	2
8	335-102-10	Scr. Skt. Hd. Cap #10-32 x 5/166	
9	331-34-16	Scr. Hex. Hd. Cap 1/4-20 x 1	2

ITEM	PART No.	DESCRIPTION	QTY
10	402-34	Washer Lock 1/4	6
11	344-102-5	#10-32 x 5/16 Shss Cup Tip	2
12	410-34	Flat Washer 1/4	6
13	54-27545	Roller Arm, Resealer	2
14	335-102-8	Scr. Skt. Hd. Cap #10-32 x 1/2	8
15	331-34-8	Scr. Hex. Hd. Cap 1/4-20 x 1/2	4
16	54-27544-1	Side Frame, Left Resealer	1
17	54-27543	Roller Link, Resealer	2
18	54-27544-2	Side Frame, Right Resealer	1

MS-Machine Size

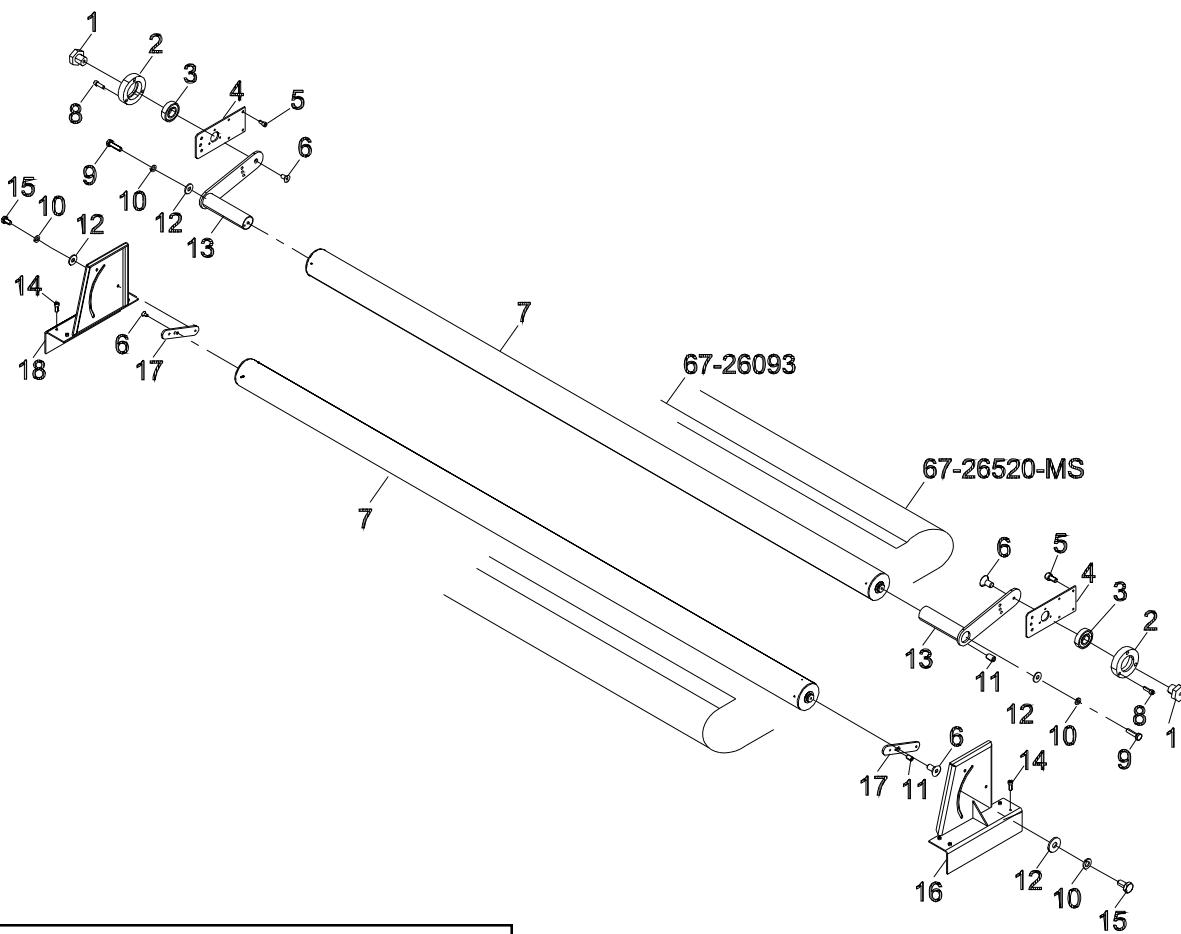


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Resealer Tube Assembly, Multi-Ply

68-26369-MS

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	PM-12968-3	Roller Hub, Resealer	2	7	402-34	Washer Lock 1/4	2
2	503-4-8	Groove Pin 0.125 Dia x 0.5 Lg	6	8	203-34	Nut, Fin Hex 1/4-20	2
3	54-27541-MS	3" Roller Tube, Resealer	1	9	54-27542	Bar, Twisting Lock, Resealer	1
4	SY-12022-1	Stud, Bearing Mount	2	10	331-34-48	Scr. Hex. Hd. Cap 1/4-20 x 3"	1
5	M-52	Bearing	4	11	50C11-50	3/8" Hose Clamp, Atf-iip	2
6	410-34	Washer Flat 1/4	3	12	70-26046-1	Bungee Cord 5/16, Polyester	A/R
				13	65-26046	Eye Bolt 1/4-20	1

A/R-As Required
MS- Machine Size

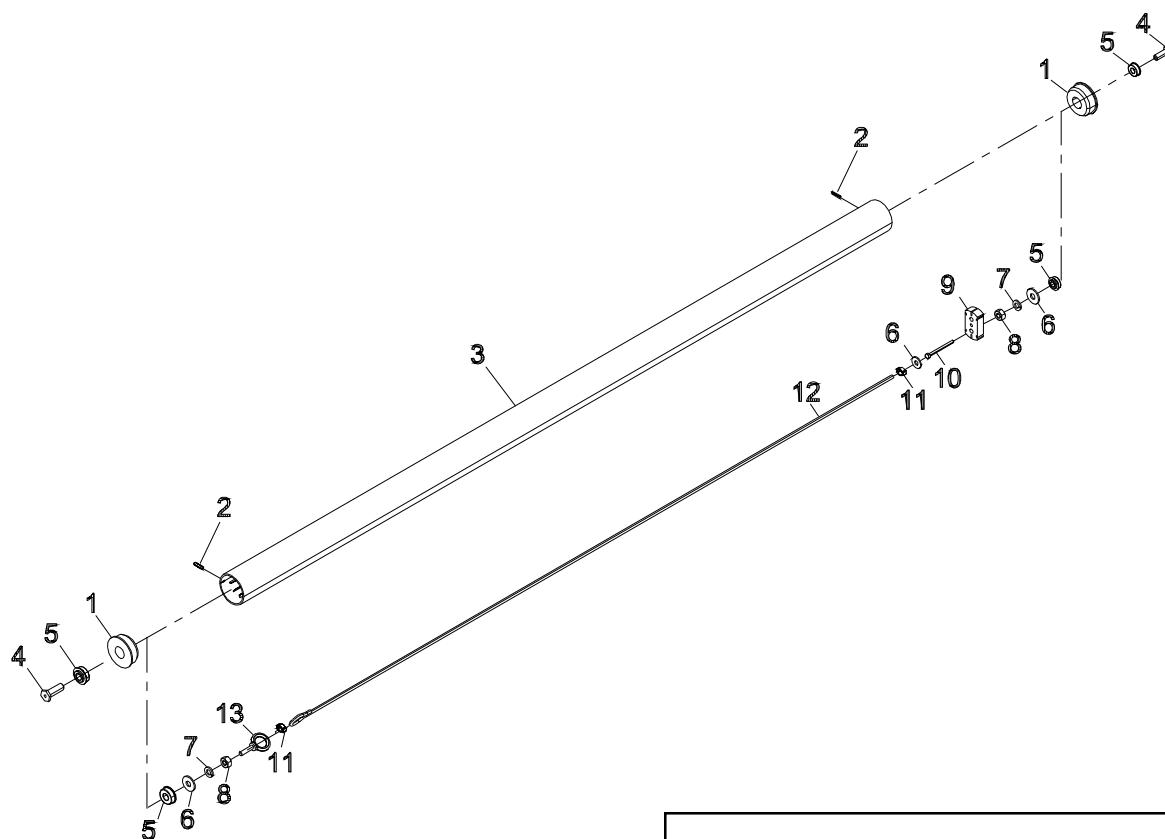


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

78" Conveyor Frame Assembly, MPC

68-26356-78

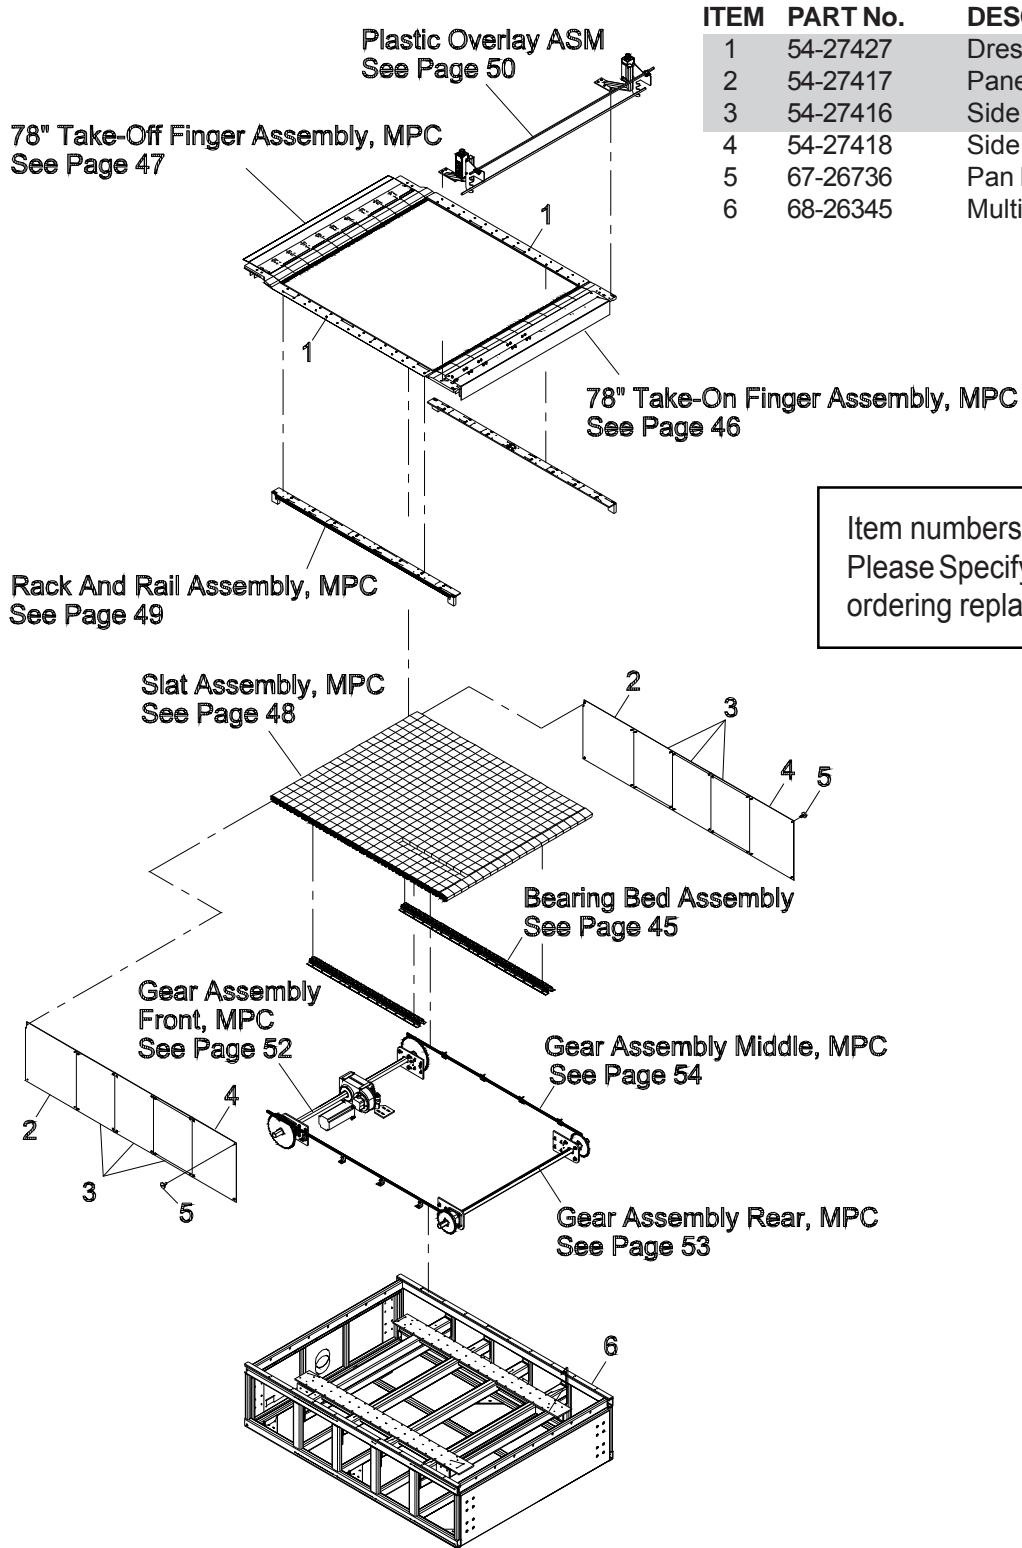


ITEM	PART NO.	DESCRIPTION	QTY
1	54-27427	Dress Plate	2
2	54-27417	Panel Cover B, Multiply Frame	2
3	54-27416	Side Panel C, Multiply Frame	6
4	54-27418	Side Panel A, Multiply Frame	2
5	67-26736	Pan Head Screw M6 X 16	40
6	68-26345	Multi-Ply Frame Assy	1

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Bearing Bed Assembly

68-26342

ITEM	PART No.	DESCRIPTION	QTY
1	203-M8	Nut, Fin. Hex M8-1.25	18
2	402-M8	Spring Lock Washer, M8	18
3	410-M10	Flat Washer M10	54
4	54-27382	Roller Bed Bracket	2
5	67-26663	Bearing, Bed Roller	18
6	54-27383	Roller Spacer 10mm x 55mm	18
7	67-26664	Shoulder Bolt 10mm x 55mm	18
8	335-102-8	Scr. Skt. Hd. Cap #10 3/8 x 1/2	8
9	410-010	Washer, Flt. #10	8

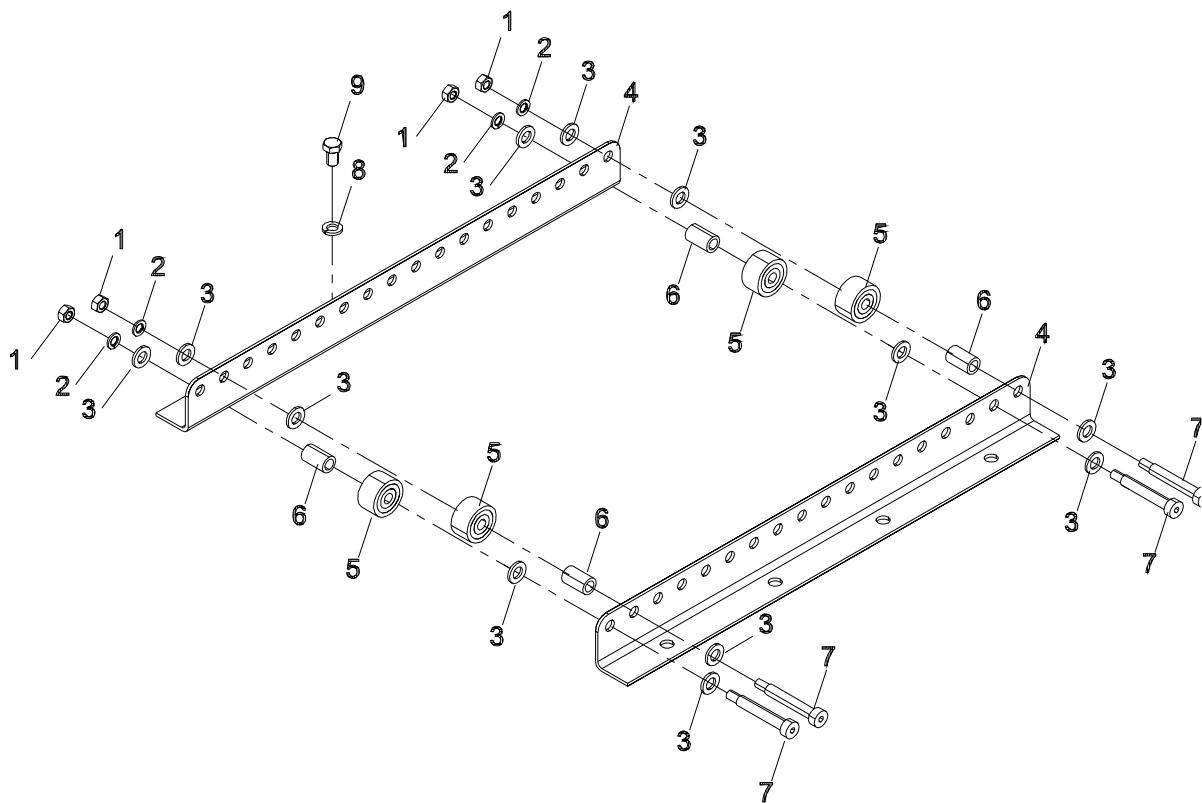

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


Eastman®

Over a Century of Cutting Expertise

78" Take-On Finger Assembly, MPC

68-26343

ITEM	PART No.	DESCRIPTION	QTY
1	333-86-12	Scr. Hex. Skt. Btn #6-32 x 3/4	4
2	335-38-8	Scr. Skt. Hd. Cap 3/8-16 x 1/2	42
3	54-27386	Take-On Finger Cap, Non -Op	
		Side	1
4	54-27388	Take-On Finger Mount Frame	1
5	331-38-52	Scr. Cap. Hex. Hd 3/8 x 3-1/4	7
6	402-38	Washer, Lock 3/8	7
7	410-38	Washer, Flt. 3/8	7
8	54-27385	Take-On Finger Cap, Op Side	1
9	54-27384	Finger Plates	10
10	54-27387	Take-On Transfer Plate	1

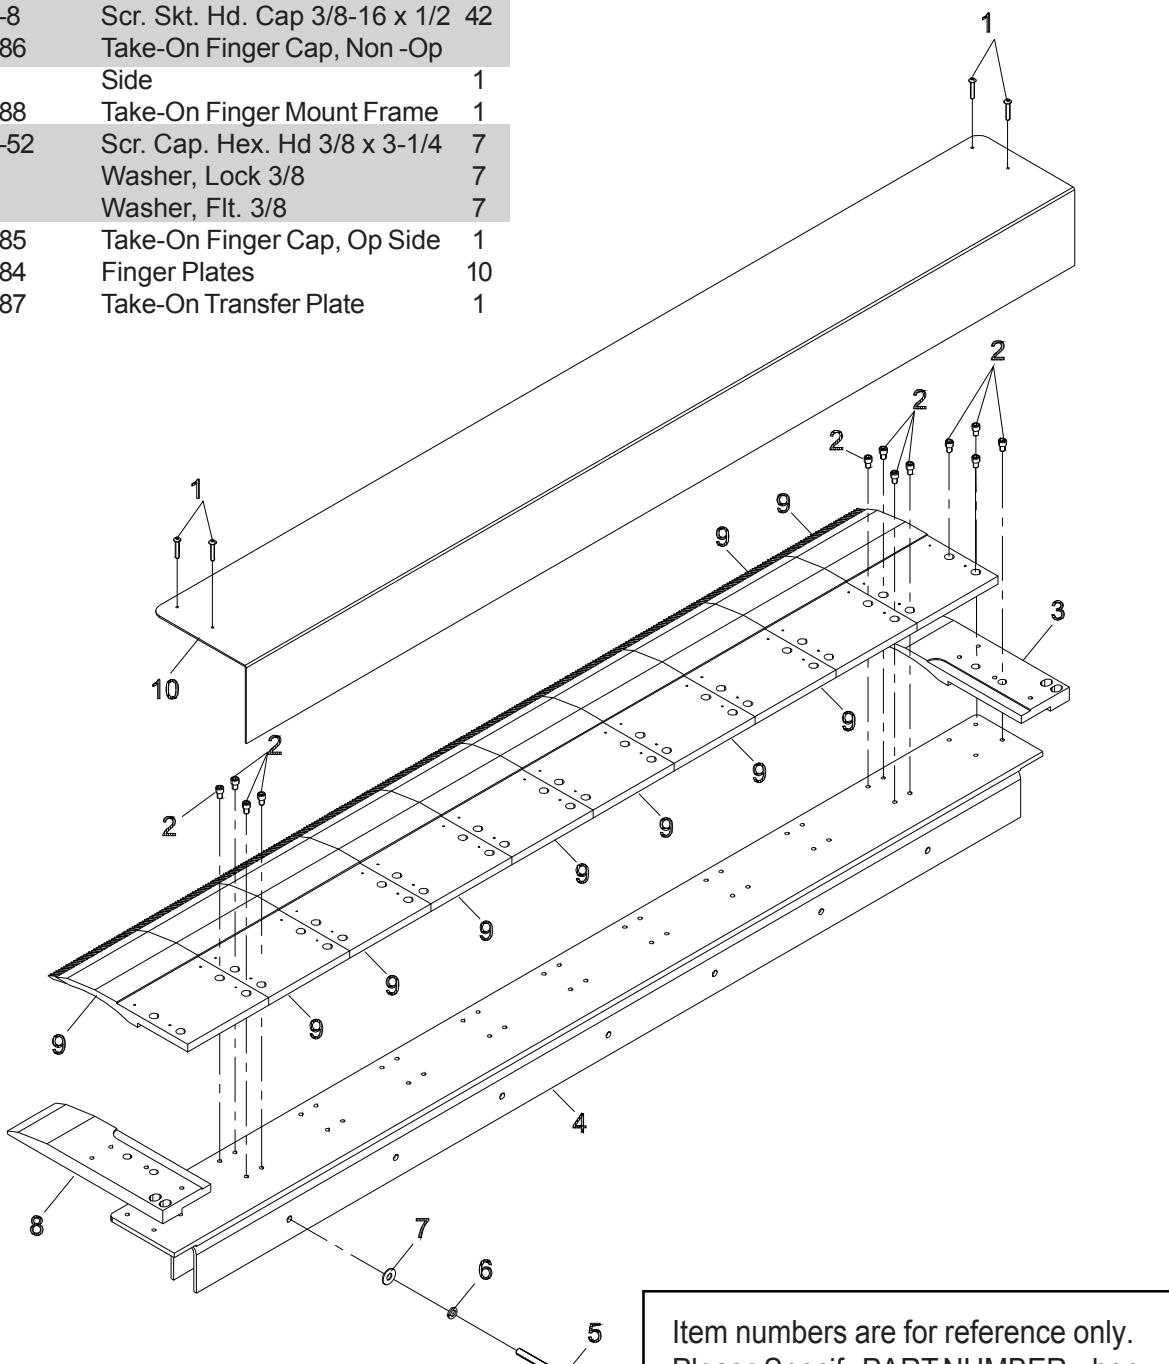


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

78" Take-Off Finger Assembly, MPC

68-26344

ITEM	PART No.	DESCRIPTION	QTY
1	54-27391	Take-Off Transfer Plate	1
2	335-38-8	Scr. Skt. Hd. Cap 3/8-16 x 1/2	44
3	54-27384	Finger plates	10
4	54-27389	Take-Off Finger Cap, Op Side	1
5	54-27401	Take-Off Finger Mount Plate	1
6	54-27390	Take-Off Finger Cap, Non-Op Side	1
7	331-38-52	Scr. Cap. Hex. Hd 3/8 x 3-1/4	7
8	402-38	Washer, Lock 3/8	7
9	410-38	Washer, Flt. 3/8	7

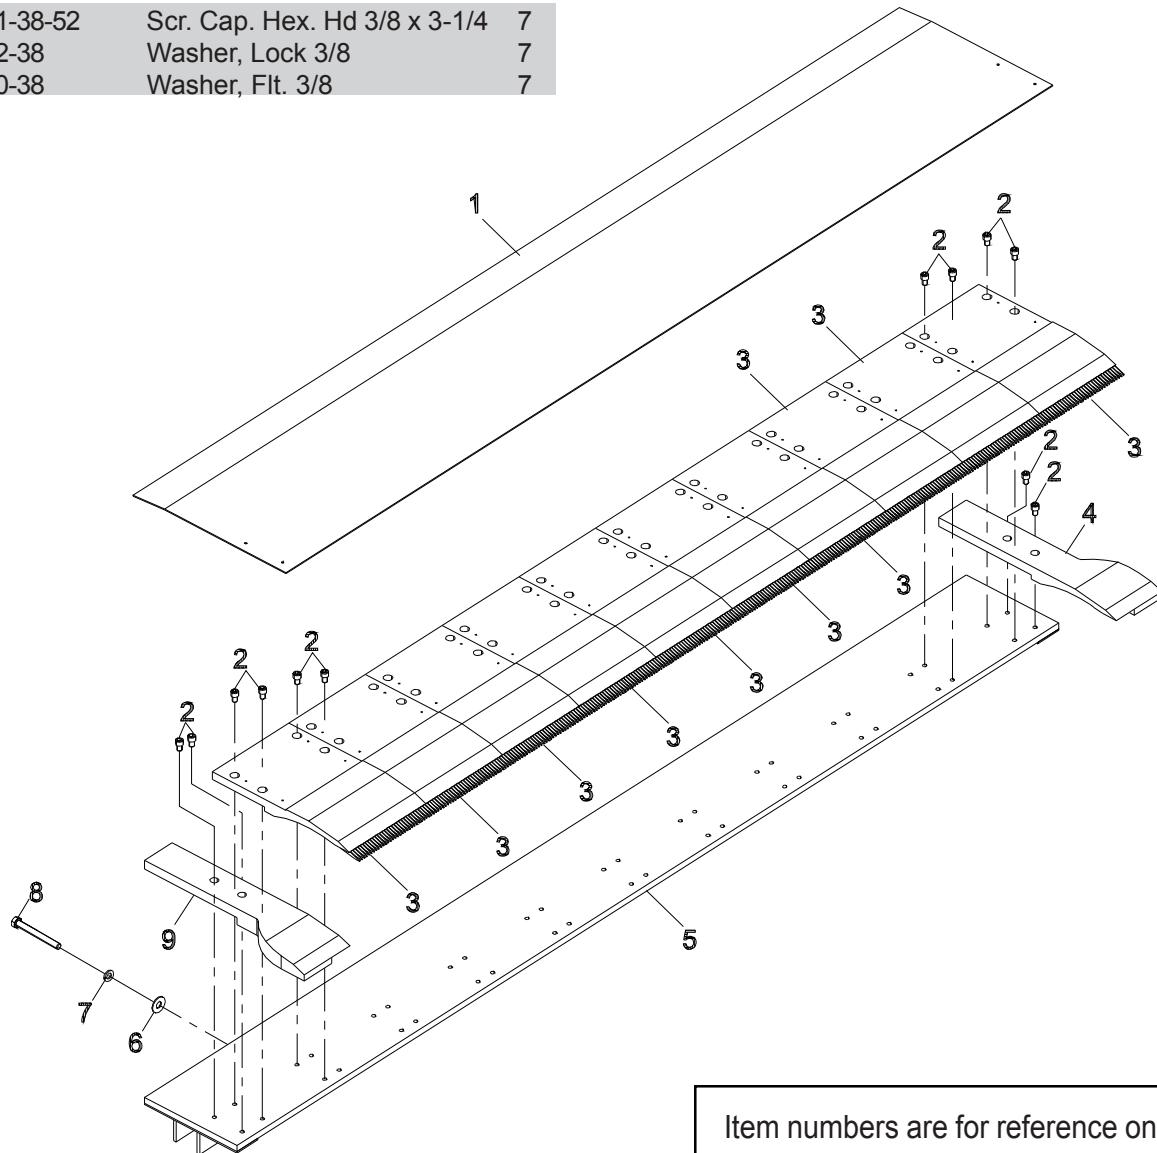

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®


Over a Century of Cutting Expertise

Slat Assembly, MPC**68-26358-1****68-26358-1**

ITEM	PART No.	DESCRIPTION	QTY
1	335-102-24	Scr. Skt. Hd. Cap #10 3/8 x 1 & 1/2	2
2	54-27463	Bristle End Clamp	2
3	203-102	#10-32 Hex Nut	2
4	54-27308-78	Multiply Extrusion-78"	1
5	335-93-20	Scr. Skt. Hd.Cap. #8-32 x 1-1/4 4	
6	54-27118	Bristle Clamp	40
7	67-26561-Blue	Bristle, 4" x 4" Square	20

68-26358-2

ITEM	PART No.	DESCRIPTION	QTY
1	335-102-24	Scr. Skt. Hd. Cap #10 3/8 x 1 & 1/2	2
2	54-27463	Bristle End Clamp	2
3	203-102	#10-32 Hex Nut	2
4	54-27308-78	Multiply Extrusion-78"	1
5	335-93-20	Scr. Skt. Hd.Cap. #8-32 x 1-1/4 4	
6	54-27118	Bristle Clamp	40
7	67-26561-Blue	Bristle, 4" x 4" Square	18
8	67-26561-White	Bristle, 4" x 4" Square	2

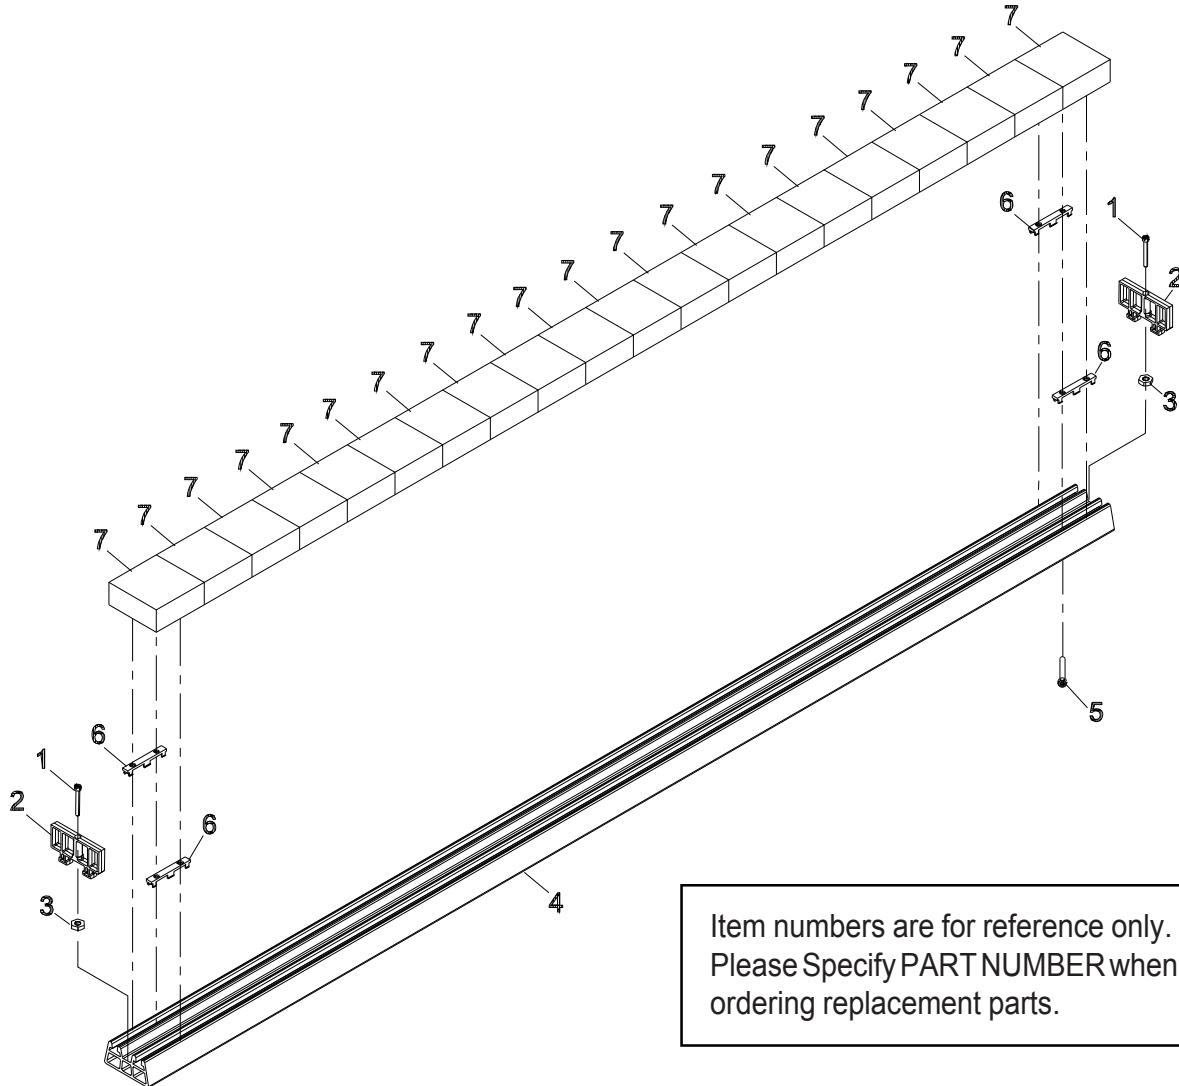


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Rack And Rail Assembly, MPC

68-26256-MS


ITEM	PART No.	DESCRIPTION	QTY
1	335-102-8	Scr. Skt. Hd. Cap #10 3/8 x 1/2 2	
2	410-010	Washer, Flt. #10	8
3	54-27082-78	Rack Plate, Mpc	1
4	54-27081-48	Gear Rack, 47.87", Eagle	2
5	332-M4-40	M8 x 1.25 x 20mm,Shcs	41
6	67-26679-604	Rail, Thk Shs, 604mm Length	
		Right Side	1
7	67-26679-	Rail,Thk Shs, (Length-1216.9)	1
8	67-26679-604L	Thk Rail, Length-604 Left Side	1
9	54-27494	Sq. Nut Plate-M4-10 Hole	4

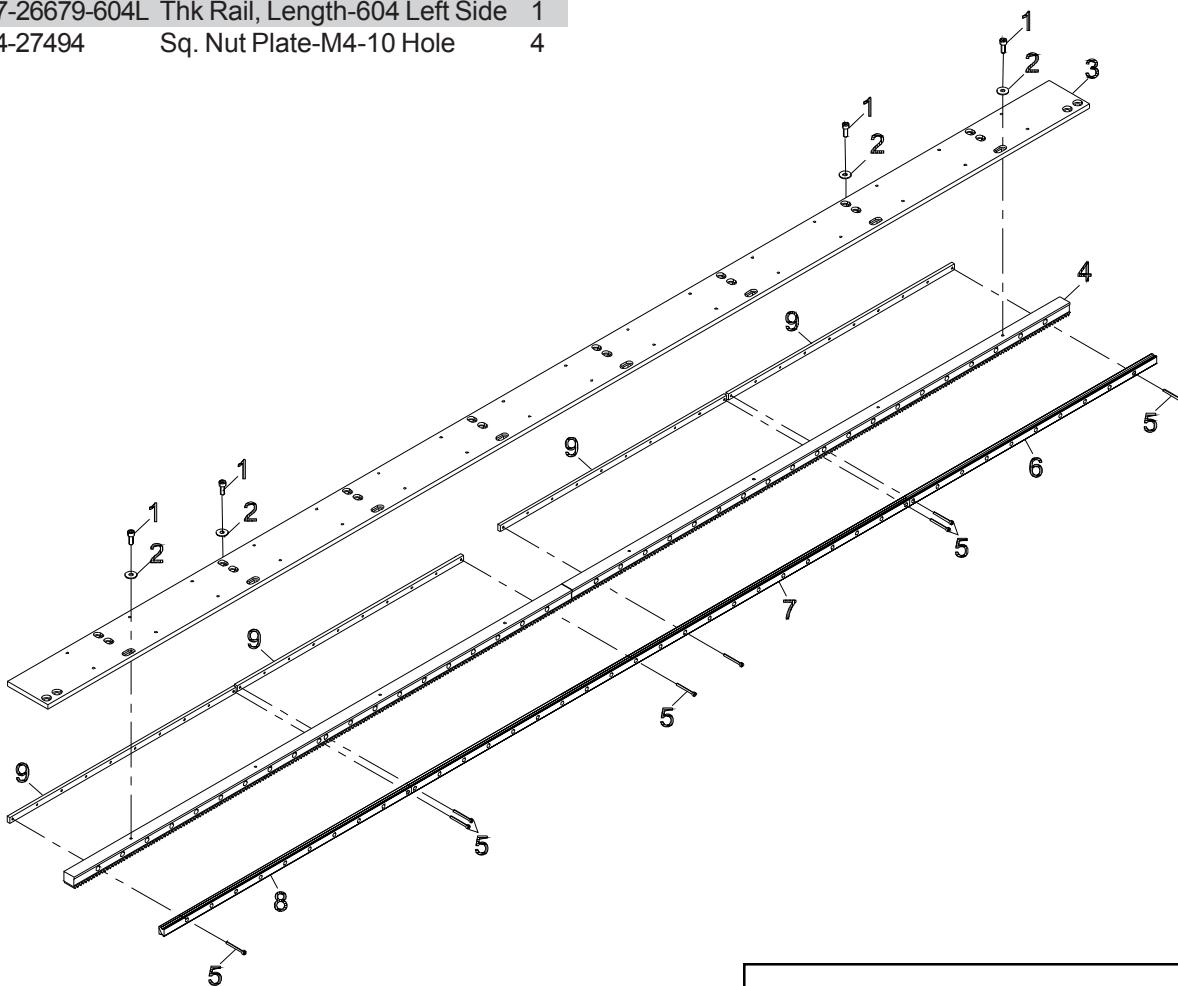

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

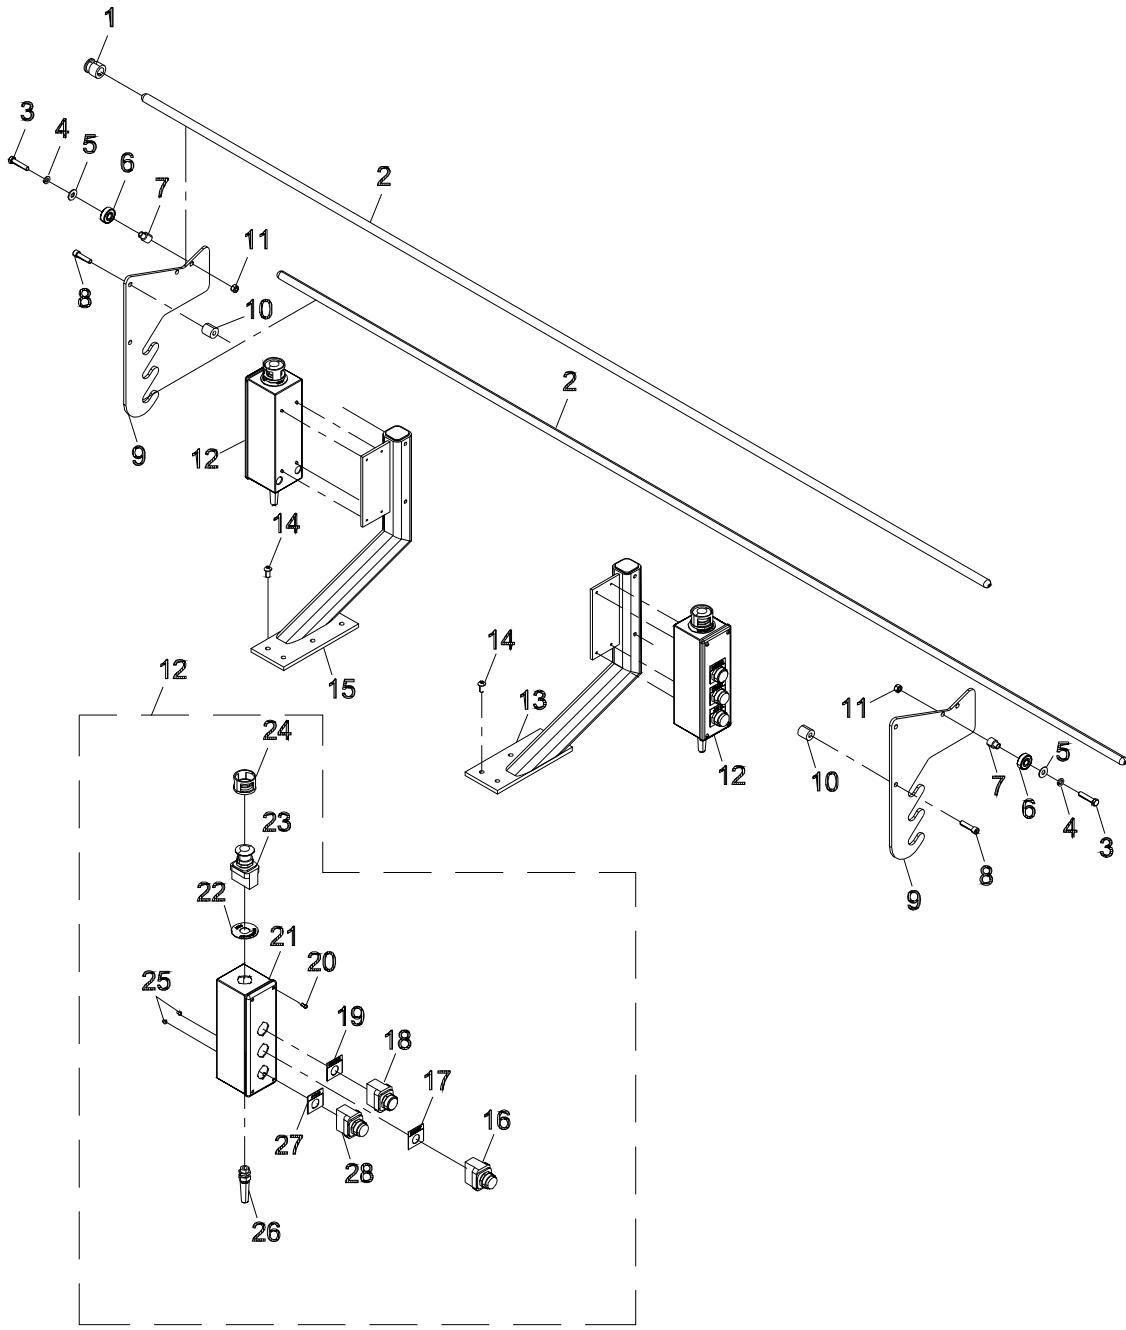Plastic Overlay ASM
68-26360-MS**E-Stop/Jog Box Assembly; Take-On End**

ITEM	PART No.	DESCRIPTION	QTY
1	Sy-11611	Shifter F-191-3 W/.44 Brg Grv.	1
2	Ch-86A-78	Bar, Rayon 3/4 Dia.-101.5"	2
3	331-38-28	Scr.Hex.Hd.Cap	
		3/8-16 x 1 & 3/4	4
4	402-38	Washer, Lock 3/8	4
5	410-38	Washer, Flt. 3/8	4
6	9020-0203	Bbdblsheild ID. 5 OD 1.375 W .4375	4
7	Sy-10208	Bushing, Bearing	4
8	335-38-24	Scr.Hex.Hd.Cap 3/8-16 x 1-1/2	4
9	54-27512	Plastic Overlay Roll	2
10	54-27514	1.0 OD x .390 Id X 1.0 LgSpace	4
11	203-38	Nut, Fin. Hex 3/8-16	4
12	31-26488	E-Stop/Jog Box Assy, Take On	2
13	54-27513-L	Plastic Overlay Stand Left	1
14	333-38-12	Bttn. Hd. Sckt. 3/8-16 x 3/4	8
15	54-27513-R	Plastic Overlay Tower Right	1
16	31-26012-5	Switch Green	2
17	79-00010	Nameplate, Start, Metal	1
18	31-26482	Yellow Pb Switch N/C Flush Mt	2
19	79-26000	Nameplate Pause (Metal)	2
20	333-102-8	Scr. Hex. Skt.Btn #10-32 x 1/2	4
21	31-26479	Enclosure, Pushbutton, Deep	2
22	91-26011	Decal, Emergency Stop,30mm	2
23	31-26489	E-Stop Red Mushroom Pb-24Vdc	2
24	31-26357	E-Stop Guard, Protective Ring	2
25	313-102-4	Screw, Rd. Hd. #10-32 x 1/4	8
26	31-26037	Strain Relief Skintop #Pg11	2
27	79-00011	Nameplate, Jog, Metal	2
28	31-26012-2	Switch Black	2

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


Eastman®

Over a Century of Cutting Expertise

Gear Assembly Front, MPC

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	67-26665-45	No. 80-1 Sprocket, 45 Teeth	2	13	203-43	Nut, Fin.Hex. 1/2-13	16
2	67-26678-2	2" Bore Taper Bushing	4	14	54-27084-78	Conveyor Shaft	2
3	603-16-16-42	Key Sq 1/2 x 1/2 x 2-5/8 Lg.	4	15	206-51	Nut, Fin. Jam Hex 3/4-10	1
4	331-43-32	Scr. Hex. Hd. Cap 1/2-13 x 2	24	16	402-51	Washer, Lock 3/4	2
5	67-26685	2" Dia.4 Bolt Flg.Bearing	4	17	401-51	Washer, 3/4 Plain Flat Steel	2
6	335-38-12	Scr.Skt.Hd.Cap 3/8-16 x 3/4	16	18	67-26677	In-Line Reducer	1
7	54-26669	Drive End Adjustable Tension	8	19	54-27443	Reducer Mount Spacer	1
8	335-38-24	Scr.Skt.Hd.Cap 3/8-16 x 1-1/2	4	20	54-27495	Reducer Mount Plate	1
9	331-43-20	Scr.Hex Hd.Cap 1/2-13 x 1 1/4	24	21	331-51-112	Scr.Hex Hd.Cap 3/4-10 x 7"	1
10	402-44	Washer, Lock 1/2	32	22	331-M10-40	Scr.Hex Hd.Cap M10 x 40 1.5mm	4
11	410-44	Washer, Flt. 1/2	32	23	31-26125	Medium Duty Servo Motor	1
12	54-27440	Bearing Mount Plate	4	24	603-16-16-101	Key Sq 1/2 x 1/2 x 6-5/16 Lg.	1


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

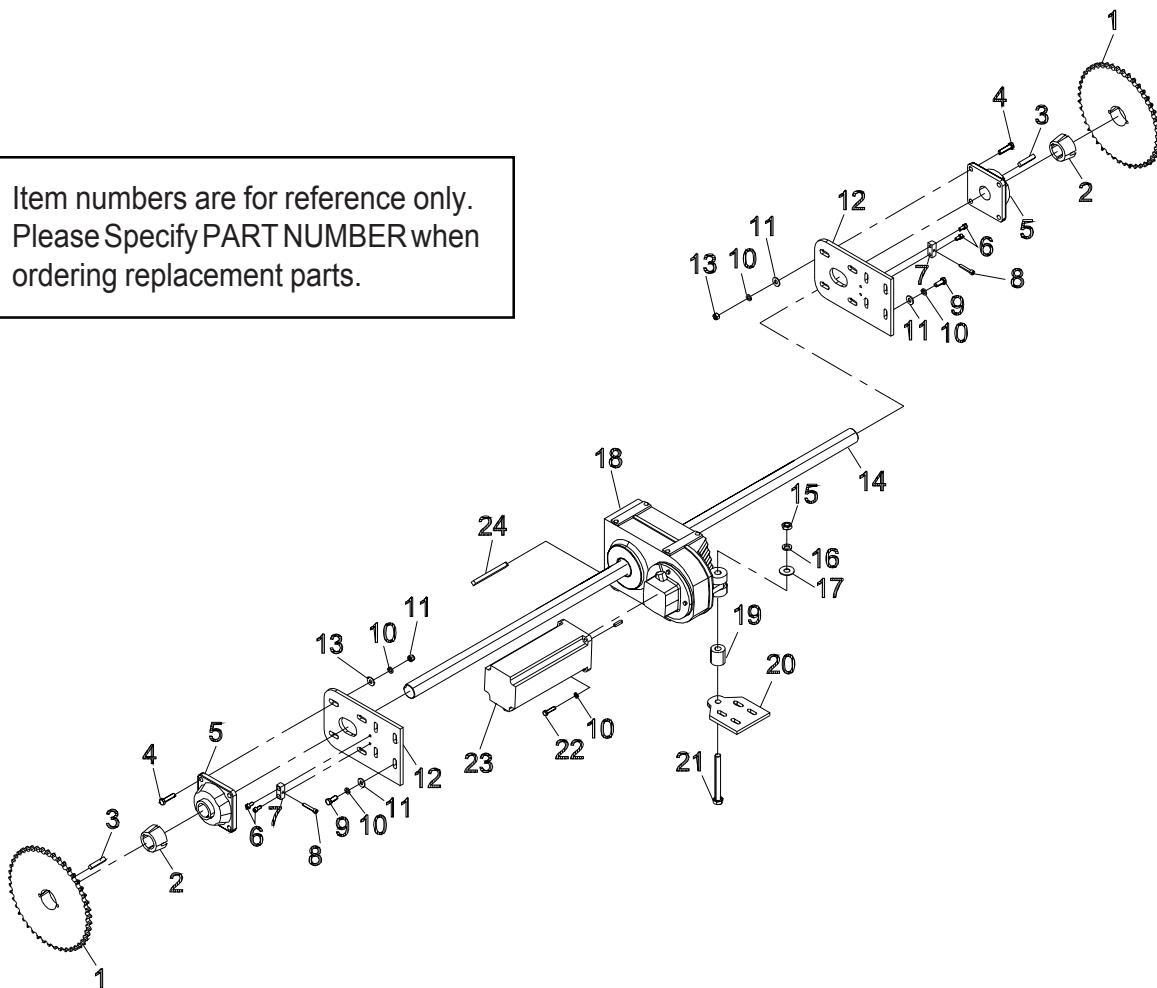

Gear Assembly Rear, MPC

ITEM	PART No.	DESCRIPTION	QTY
1	67-26665-45	No. 80-1 Sprocket, 45 Teeth	2
2	67-26678-2	2" Bore Taper Bushing	4
3	331-43-32	Scr. Hex.Hd. Cap 1/2-13 x 2	24
4	67-26685	2" Dia. 4 Bolt Flg. Bearing	4
5	410-44	Washer, Flt. 1/2	32
6	402-44	Washer, Lock 1/2	32
7	203-43	Nut, Fin. Hex. 1/2-13	16
8	54-27440	Bearing Mount Plate	4
9	603-16-16-42	Key Sq 1/2 x 1/2 x 2-5/8 Lg.	4
10	54-27084-78	Conveyor Shaft	2
11	331-43-20	Scr.Hex. Hd.Cap1/2-13 x 1-1/4 24	
12	335-38-24	Scr.Skt.Hd.Cap 3/8-16 x 1-1/2 4	

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

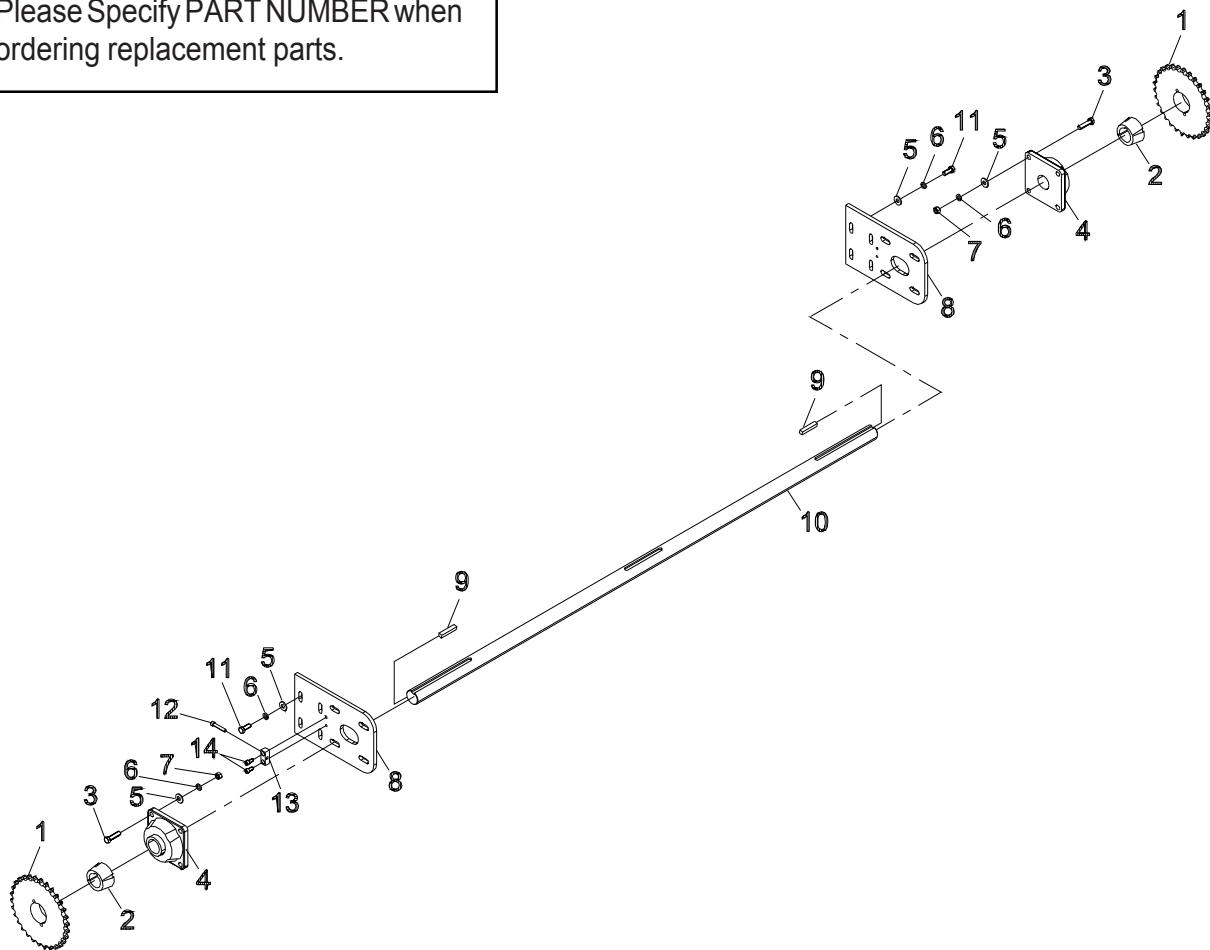


Eastman®

Over a Century of Cutting Expertise

Gear Assembly Middle, MPC

ITEM	PART No.	DESCRIPTION	QTY
1	67-26706	Uhmw Guide Rail	2
2	67-26707	Guide Rail Clamp	8
3	54-27412	Guide Angle Bracket	8
4	410-38	Washer, Flt. 3/8	8
5	402-38	Washer, Lock 3/8	8
6	335-38-10	Scr.Skt.Hd.Cap 3/8-16 x 5/8	8

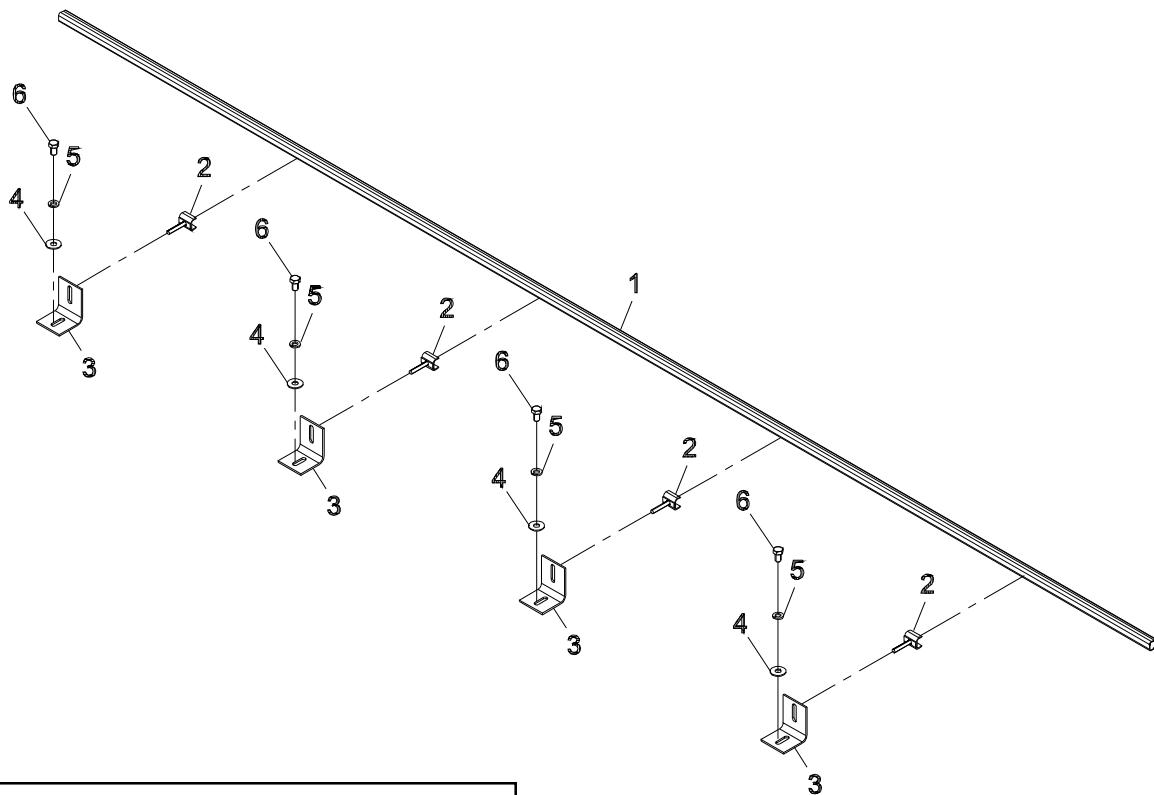


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Rotating Tool Head Assembly

68-26336

ITEM	PART No.	DESCRIPTION	QTY
1	67-26731	Clamp Lever	1
2	54-27331	Tool Head Housing	1
3	67-26772	Spring Anchor	1
4	335-102-9	Shcs #10-32 x 9/16	4
5	54-27362	MPC Knife Blade	1
6	335-99-10	Scr. Skt. Hd. Cap #10-24 x 5/8	3
7	54-27358	Pressure Foot	1
8	54-27472	Bearing Cover	1
9	335-93-5	Scr. Skt. Hd. Cap #8-32 x 5/16	6
10	67-26713	Hex Nylon-Insert Lock Nut M10 x 1	1
11	67-26701	Spur Gear	1
12	67-26727	Misumi Spacer	1

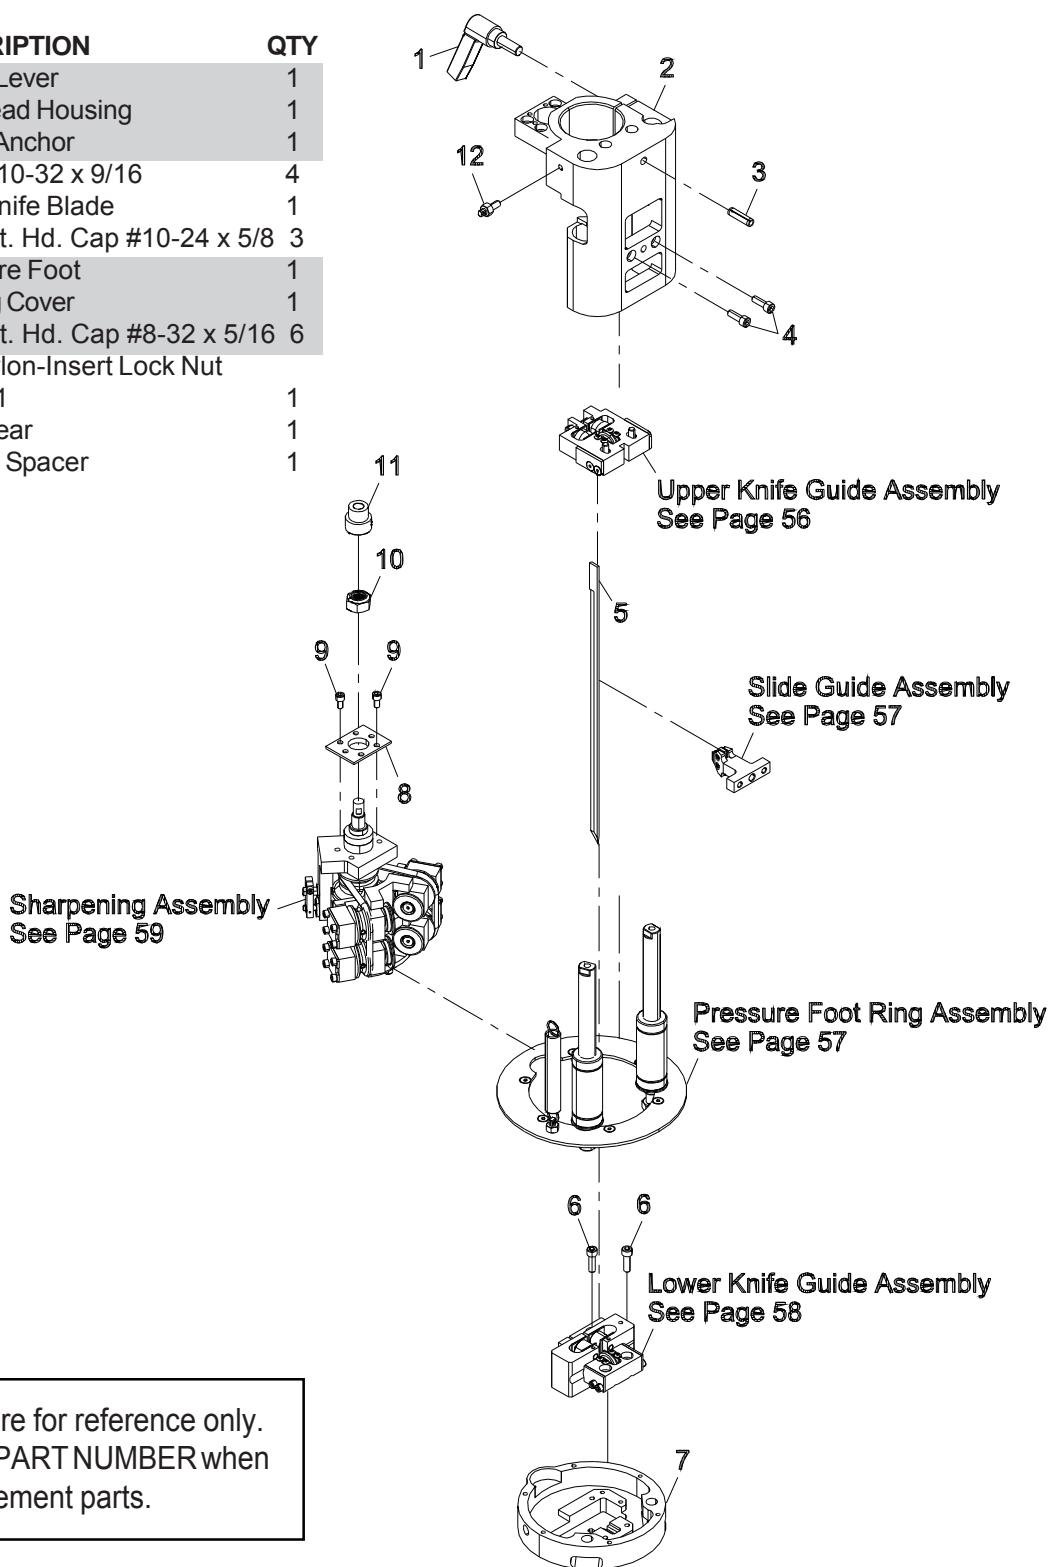

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.


Eastman®

Over a Century of Cutting Expertise


Upper Knife Guide Assembly

68-26352

ITEM	PART No.	DESCRIPTION	QTY
1	54-27446	Back Shim	4
2	67-26730	Needle Roller Bearing	6
3	54-27380	Slide Roller, Smooth	2
4	67-26721	Precision Linear Shaft	2
5	54-27444	Upper Knife Guide Housing	1
6	342-86-2-2	Scr. Hex. Skt. Set #6-32 x 1/8	2
8	67-26742	Bearing Spacer	2

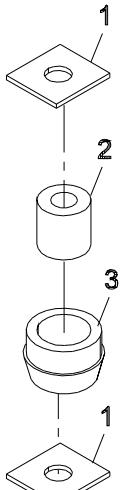

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

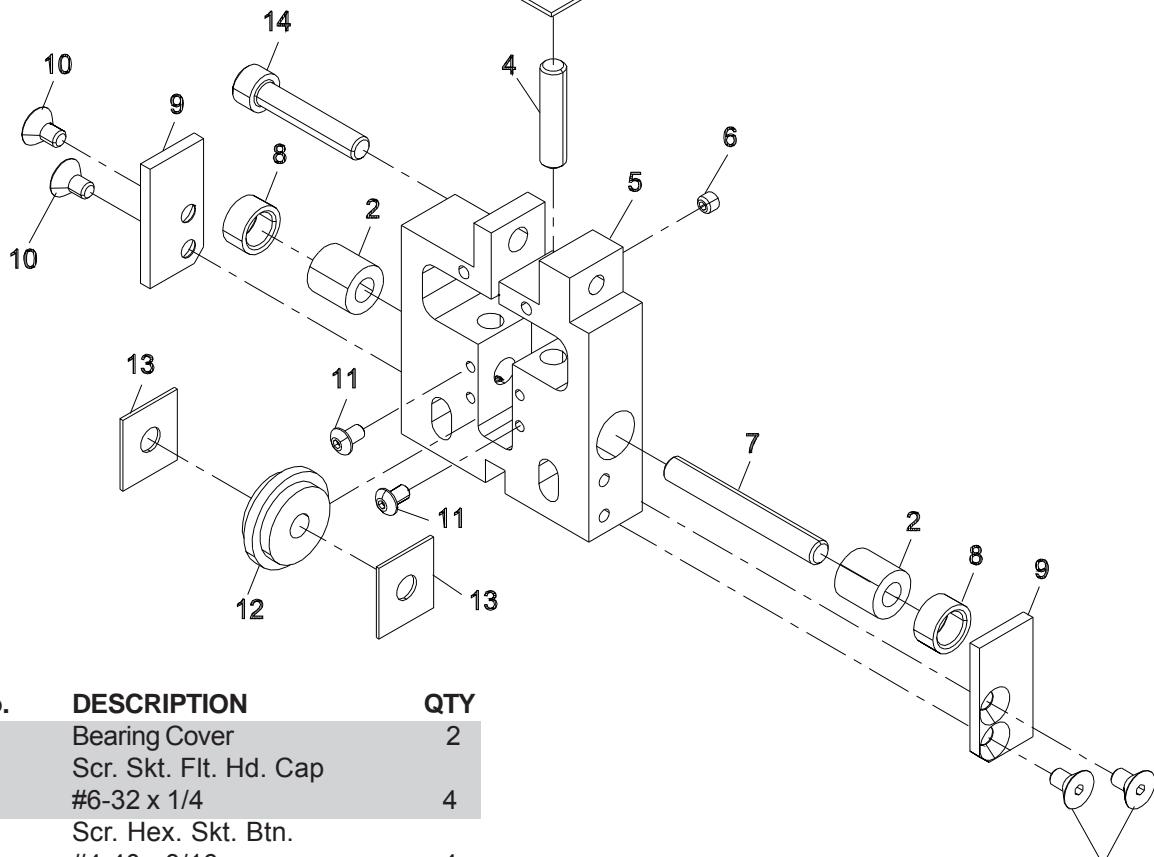


ITEM	PART No.	DESCRIPTION	QTY
9	54-27448	Bearing Cover	2
10	332-86-4	Scr. Skt. Flt. Hd. Cap #6-32 x 1/4	4
11	333-81-3	Scr. Hex. Skt. Btn. #4-40 x 3/16	4
12	54-27381	Back Roller	1
13	54-27402	Back Shim	2
14	335-102-16	Scr. Skt. Hd. Cap #10-32 x 1	1

Slide Guide Assembly

68-26359


ITEM	PART No.	DESCRIPTION	QTY
1	54-27430	Knife Slide	2
2	342-102-16-2	Scr. Hex. Skt. Set #10-32 x 1	1
3	54-27429	Slide Guide Housing	1
4	333-81-4	Scr. Hex. Skt. Btn. #4-40 x 1/4	2
5	54-27434	Side Filler	1

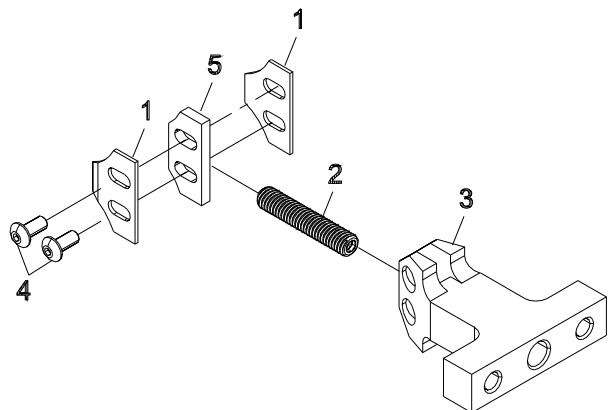

Pressure Foot Ring Assembly

ITEM	PART No.	DESCRIPTION	QTY
1	67-26638	Linear Double Bushing	2
2	67-26641	Ring, Rtn, Internal, Smalley	2
3	67-26636	Precision Linear Shaft	2
4	341-4-8		
5	54-27378	Pressure Foot Ring	1
6	211-M8X1	Lock Nut, Hex, Nylon Insert M8	2
7	67-26728	Misumi, Spacer	1
8	67-26774	Comp. Spring, 5/8 Lgs, 0.24 OD, .02	1

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

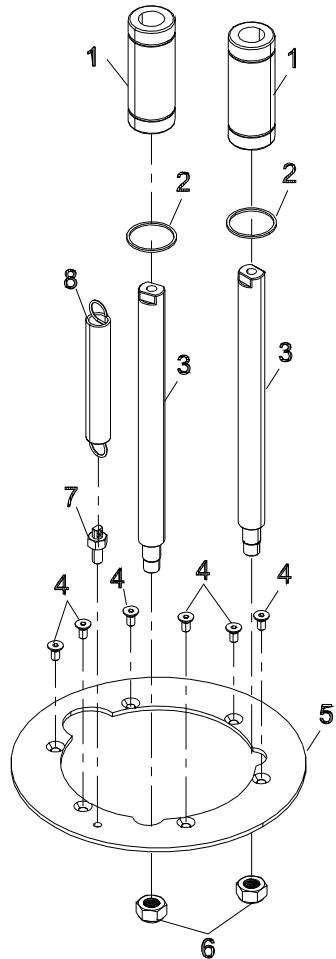


Eastman®

Over a Century of Cutting Expertise

Lower Knife Guide Assembly

68-26351


ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	54-27400	Front Shim	2	8	67-26722	Precision Linear Shaft	1
2	67-26730	Needle Roller Bearing	6	9	54-27379	Lower Guide Housing	1
3	54-27380	Slide Roller, Smooth	4	10	332-86-4	Scr. Skt. Flt. Hd. Cap	
4	54-27399	Back Shim	2			#6-32 x 1/4	4
5	342-86-2-2	Scr. Hex. Skt. Set		11	54-27381	Back Roller	1
		#6-32 x 1/8, Fp	2	12	54-27402	Back Shim	2
6	335-86-4	#6-32 x 1/4" Socket Head Cap	4	13	335-34-12	Scr. Skt. Hd.Cap #1/4-20 x 3/4	4
7	54-27451	Bearing Cover	2	14	67-26721	Precision Linear Shaft	4

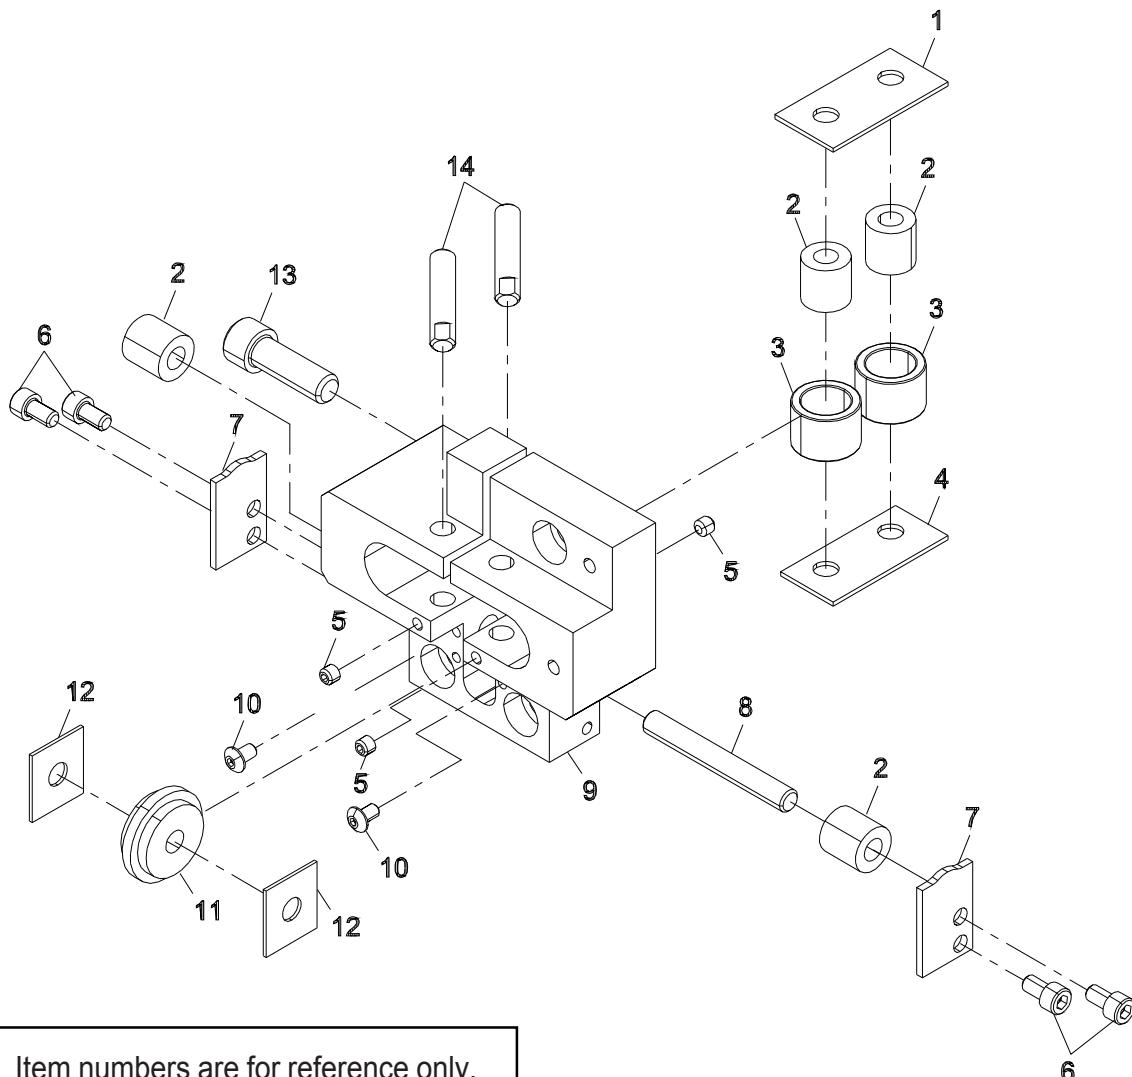

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Sharpening Assembly

68-26377

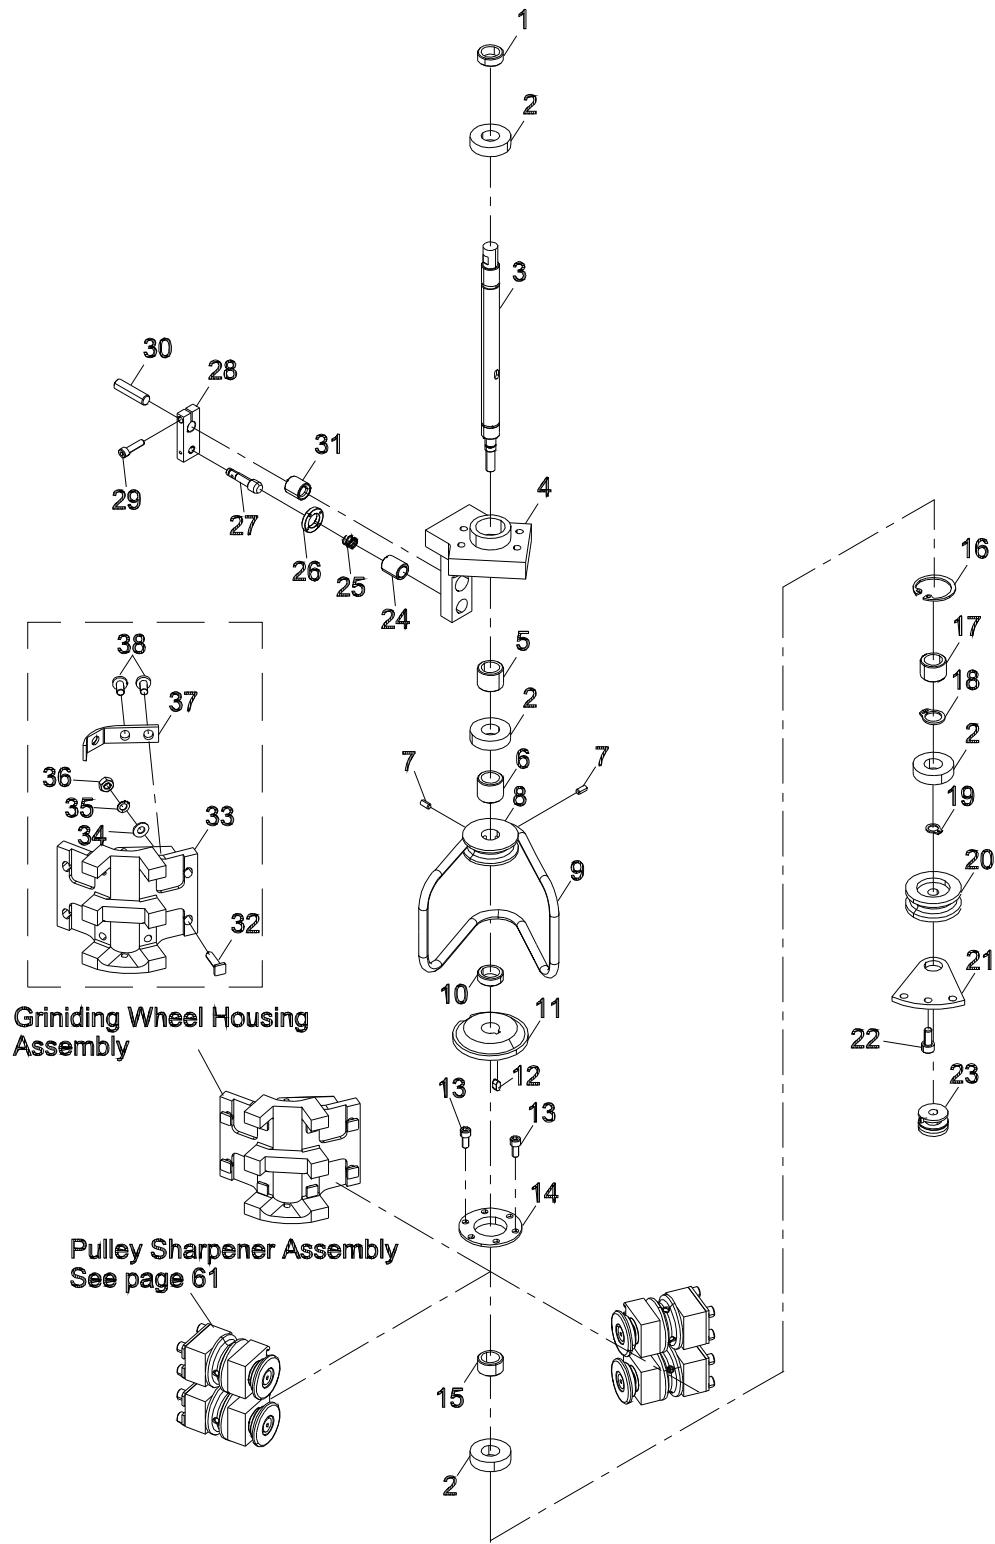

Eastman®

Over a Century of Cutting Expertise

ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	67-26631	Bearing Spacer	1	25	67-26774	Comp. Spring 5/8 Lgs, 0.24 OD, .02	1
2	67-26708	Bearing	4	26	54-27426	Round Nut	1
3	54-27423	Rotary Shaft	1	27	54-27377	Spindle	1
4	54-27332	Centering Mechanism Housing	1	28	54-27422	Connection Plate	1
5	67-26632	Bearing Spacer	1	29	335-84-8	Scr. Skt. Hd. Cap #5-40 x 1/2	1
6	67-26727	Misumi Spacer	1	30	67-26662	Precision Linear Shaft	1
7	342-M3-6-2	Skr, Hex, Skt, Set, M3, 6mm Lg, Flat	2	31	67-26661	Oil Free Bushing	1
8	67-26702	Pulley For Round Belt	1	32	54-27492	T-Slot Bolt	8
9	67-26743	Round Belt Dia 5mm, 323mm Lg 1	1	33	54-27329	Grinding Wheel Housing	1
10	67-26728	Misumi Spacer	1	34	67-26720	Plain Washer	8
11	54-27627	Cam	1	35	67-26719	Conical Spring Washer	8
12	602M-3-3-6	Key Metric, Flt, Rnd, 3mm x 3mm x 6mm	1	36	202-M4	Nut, Mach. Scr. Hex. M4	8
13	335-86-5	#6-32 Unc x 5/16" Lg. Shcs	6	37	54-27450	Guide	1
14	54-27471	Bearing Cover	1	38	67-26717	Hex. Skt. Extra Low Head Cap	2
15	67-26634	Bearing Spacer	1				
16	631-22	Ring, Rtn Internal 22mm x 1mm	1				
17	67-26635	Bearing Spacer	1				
18	67-26715	Retaining Ring	1				
19	67-26729	Retaining Ring For Shaft Dia 6	1				
20	67-26710	Idler For Round Belt	1				
21	54-27330	Bottom Support	1				
22	335-93-6	Scr. Skt. Hd. Cap #8-32 x 3/8	1				
23	67-26711	Miniature Slip Clutch	1				
24	54-27424	Housing For Spindle	1				

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Pulley Sharpener Assembly


ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY
1	54-27328	Bushing	2	10	67-26717	Hex Socket Extra	
2	67-26718	Shaft Seal	2			Low Head Cap	2
3	54-27458	Seal Housing	1	11	54-27326-GS*	Sharpening Wheel, 25mm Dia	1
4	54-27337	Front Brg Hsg W/ Bottom Groove	1	12	67-26709	Pulley For Round Belt	1
5	67-26725	Self Aligning Ball Bearing	2	13	342-M3-6-2	Skr, Hex, Skt, Set, M3, 6mm Lg, Flat	2
6	67-26716	Shaft Seal	1	14	67-26724	Bearing Preload Spring	1
7	54-27325	Grinding Wheel Shaft	1	15	54-27334	Bearing Housing Rear	1
8	67-26720	Plain Washer	2	16	54-27464	Bearing Cover	1
9	67-26719	Conical Spring Washer	2	17	335-86-4	#6-32 x 1/4" Socket Head Cap Screw	4

* See Table

54-27326-GS* Table

PART No.	Grit Size
54-27326-60	60
54-27326-80	80
54-27326-100	100
54-27326-180	180
54-27326-220	220
54-27326-400	400

*GS - Grit Size

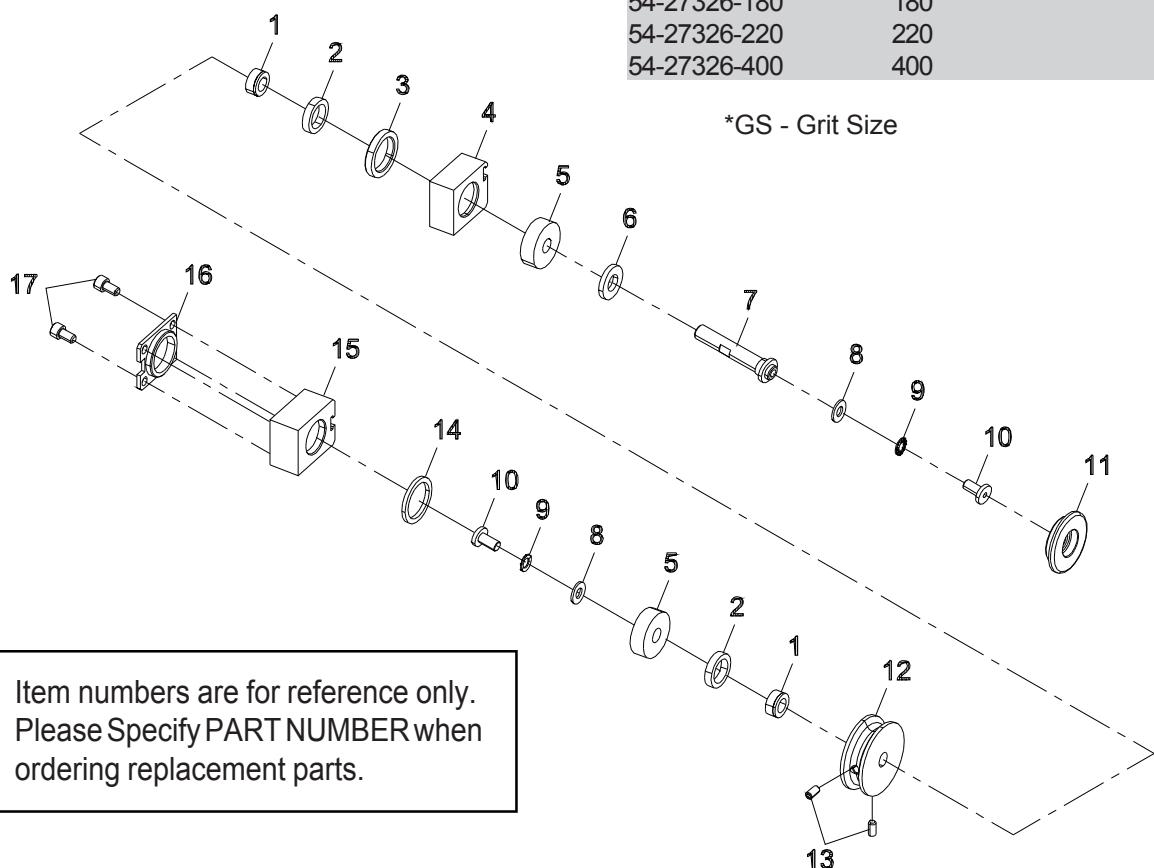


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

Rotating Tool Assembly Intellicut

96-26122

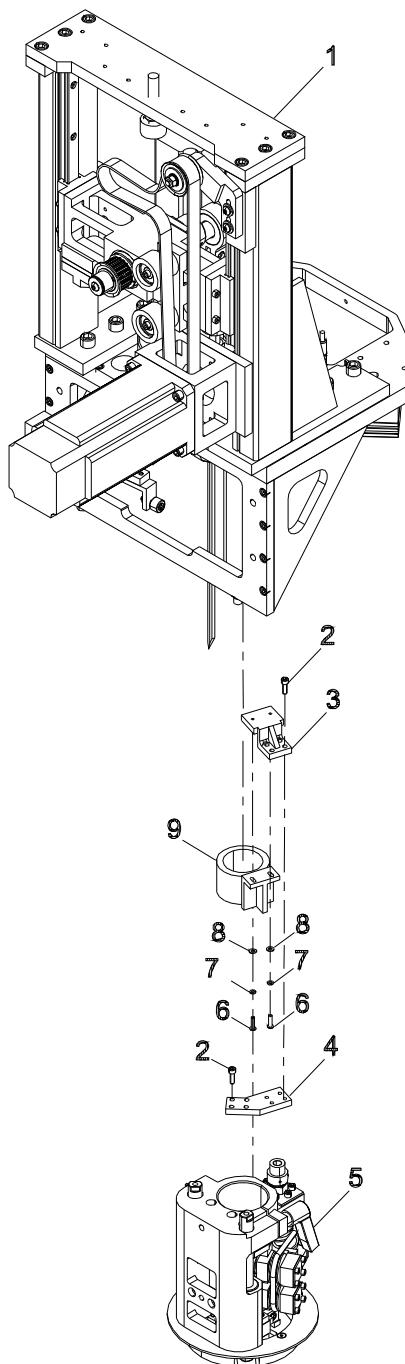


ITEM	PART NO.	DESCRIPTION	QTY
1	68-26337	Tool Head Assy	1
2	335-93-8	Scr. Skt. Hd. Cap #8-32 x 1/2	8
3	54-27569	Terminal Bracket	1
4	54-27580	Plate	1
5	68-26336-INT	Rotating Tool Assy, Intellicut	1
6	333-83-8	Scr. Hex. Sct. Btn #5-40 x 1/2	2
7	402-050	Washer, Lock #5	2
8	401-050	Flat Washer Narrow #5	2
9	67-26765	Slip Ring Assy, 1.502 Bore	1

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Rotating Tool Assembly, Intellicut

68-26336-INT

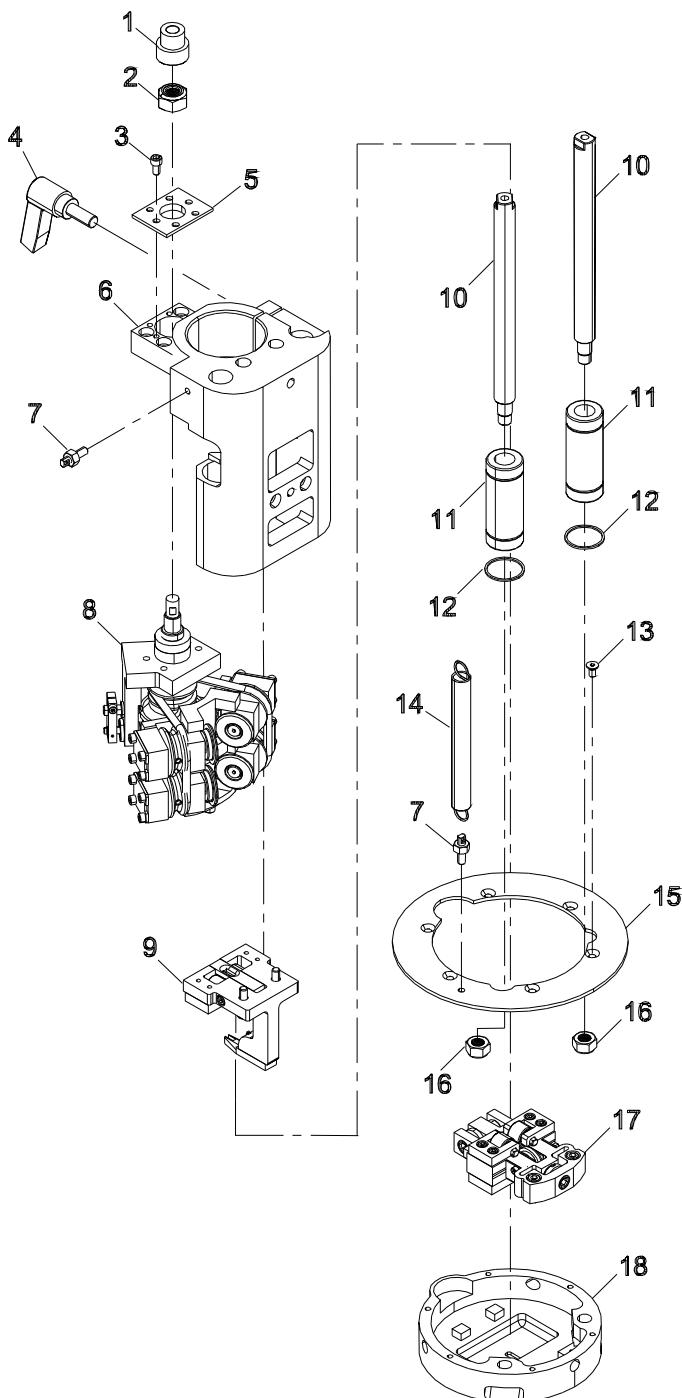

ITEM	PART No.	DESCRIPTION	QTY
1	67-26701	Spur Gear	1
2	67-26713	Hex Nylon-Insert Lock Nut M10 x 1	1
3	335-93-5	Scr. Skt. Hd. Cap #8-32 x 5/16	6
4	67-26731	Clamp Lever	1
5	54-27472	Bearing Cover	1
6	54-27331	Tool Head Housing	1
7	67-26772	Spring Anchor	2
8	68-26377	Sharpening Assy	1
9	68-26376	Upper Knife Guide Assembly	1
10	67-26636	Precision Linear Shaft	2
11	67-26638	Linear Double Bushing	2
12	67-26641	Ring, Rtn, Internal, Smalley	2
13	341-4-8	B18.35M-4 x 0.7 x 8 Socket	6
14	67-26773	Extension Spring Od 7/16, Dia0.048, 2.5Lgs	1
15	54-27358-1	Pressure Foot Modified for Intellicut	1
16	211-M8x1	Lock Nut, Hex, Nylon Insert M8	2
17	68-26375	Lower Knife Guide Assy, Intellicut	2
18	54-27358	Pressure Foot Ring	1


Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

Lower Knife Guide Assembly, Intellicut

68-26375

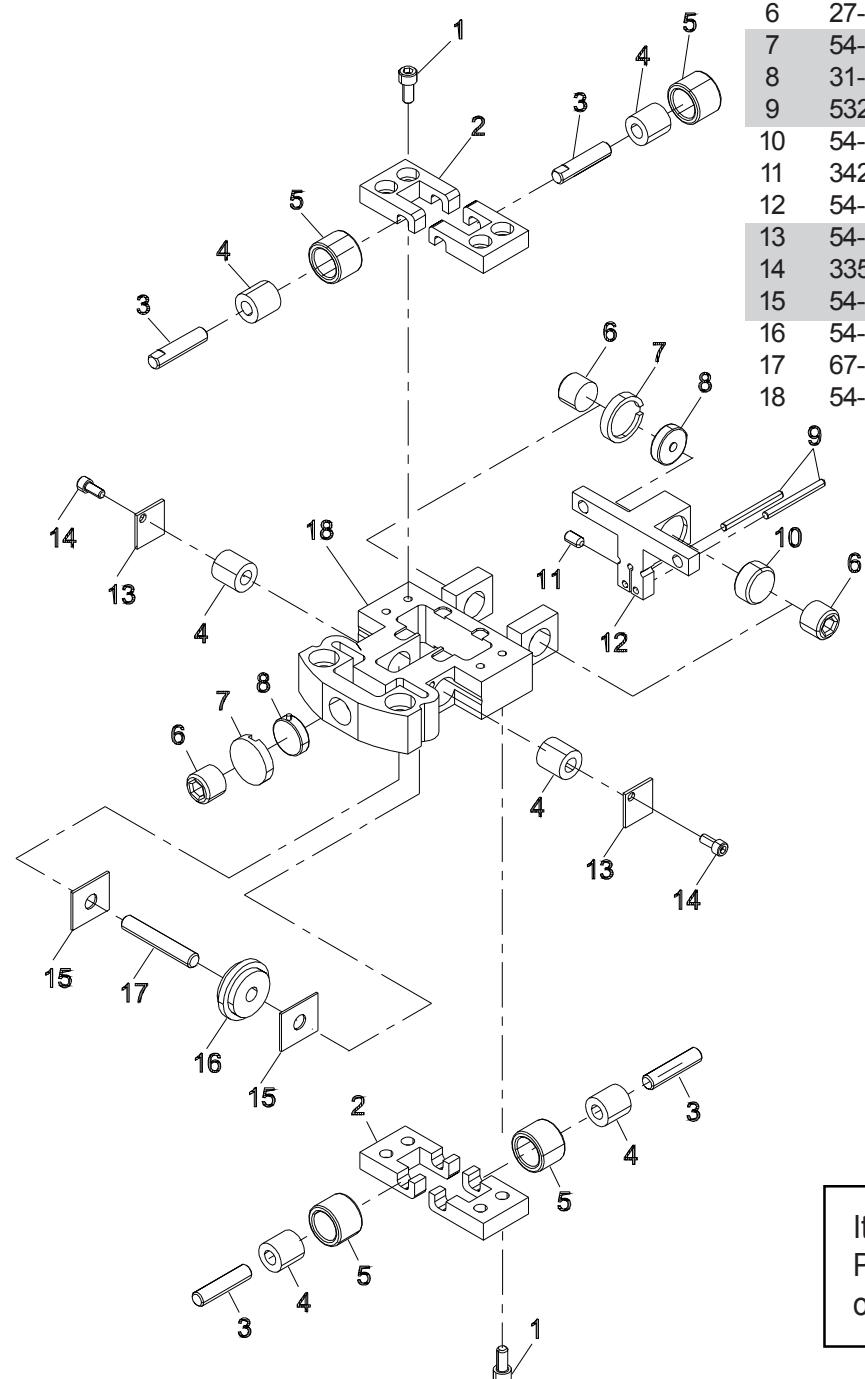


ITEM	PART NO.	DESCRIPTION	QTY
1	335-86-5	Shcs #6-32 x 0.3125	8
2	54-27573	Guide Lock, Intellicut Sensor	4
3	67-26721	Precision Linear Shaft	4
4	67-26730	Needle Roller Bearing	6
5	54-27380-1	Slide Roller, Smooth	4
6	27-h0409	Plug, Socket Head, 1/8" Npt	3
7	54-27571	Sensor Cap, Intellicut Guide	2
8	31-26606	Load Cell, Model13(100lbs)	2
9	532-3-16	Pin, Dowel(3/32 x 1)	2
10	54-27574	Guide Stop, Intellicut Sensor	1
11	342-86-4	Scr. Hex. Skt. Set 6-32 x 1/4	1
12	54-27572	Knife Pressure Slide, Intellicut	1
13	54-27570	Bearing Cap, Intellicut Guide	2
14	335-81-4	Scr. Skt. Hd. Cap #4-40 x 1/4	2
15	54-27402	Back shim	2
16	54-27381	Back Roller	1
17	67-26722-1	Precision Linear Shaft, 30mm	1
18	54-27379-1	Lower Guide, Intellicut Sensor	1

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Upper Knife Guide Assembly, Multi-Ply

68-26376

ITEM	PART No.	DESCRIPTION	QTY
1	335-86-5	#6-32 Unc x 5/16 Lg. Shcs	4
2	67-26721	Precision Linear Shaft	2
3	54-27458	Seal Housing	1
4	54-27337	Front Brg Hsg W/ Bottom Groove	1
5	67-26725	Self Aligning Ball Bearing	2
6	67-26716	Shaft Seal	1
7	54-27325	Grinding Wheel Shaft	1
8	67-26720	Plain Washer	2
9	67-26719	Conical Spring Washer	2

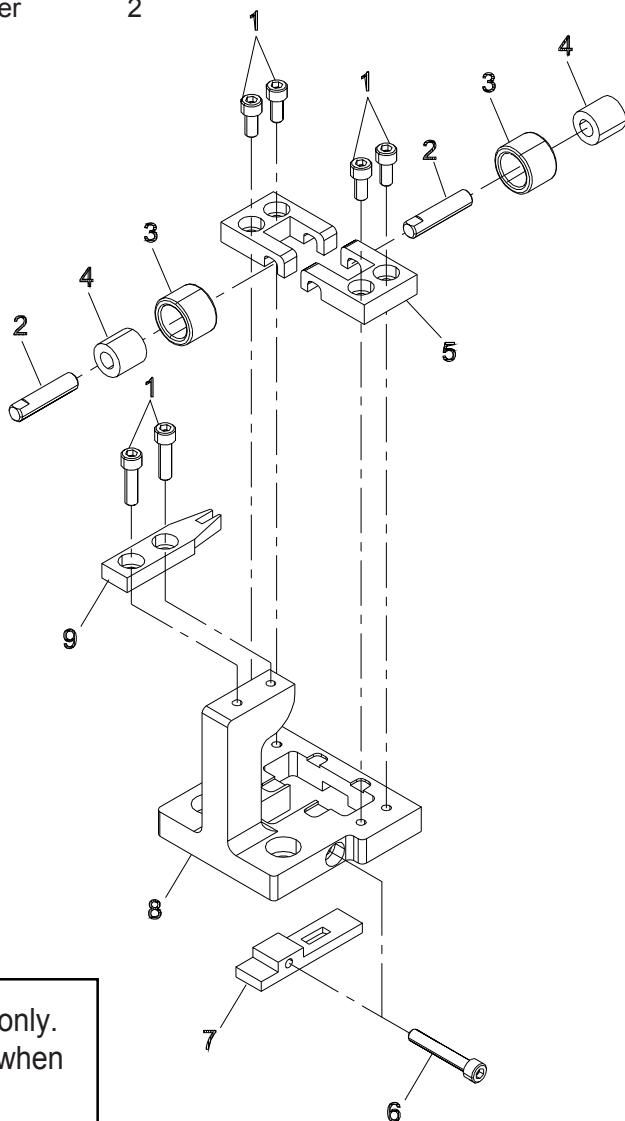

Item numbers are for reference only.
Please Specify PART NUMBER when
ordering replacement parts.

Eastman®

Over a Century of Cutting Expertise

Eastman®

Service Record

Machine Serial No.:

Machine Voltage:

Date of Purchase: _____

Date	Type of Service Performed

Eastman®

Over a Century of Cutting Expertise

Technical Data

EASTMAN® Multi-Ply Cutter

Multi-Ply Cutter

Maximum Gantry Speed*
Medium Speed Conveyor Speed*
High Speed Conveyor Speed*
Maximum Table Length
Cut Accuracy*
Eagle Gantry Weight
Eagle Gantry Operating Voltage
Blower Operating Voltage
Power Requirement (Eagle Gantry)
(Blowers)
Minimum Operating Pressure
Volume of Air Service

Machine Size	Working Width	Conveyor Width	Overall Machine Width

Limited Warranty. Eastman warrants to the buyer that the equipment shall be free from defects in materials or workmanship for a period of 180 days commencing on the date of invoice. Any goods or parts claimed by the buyer to be defective must be returned to Eastman, freight charges prepaid, within the 180-day warranty period. If Eastman determines that the goods or parts are defective in materials or workmanship, Eastman's sole obligation under this warranty shall be, at Eastman's sole option, to repair or replace the defective goods or parts or to provide the buyer a credit equal to the portion of the purchase price allocable to the defective goods or parts. This warranty shall not apply if defects are caused by product misuse or neglect, if the machine has been altered or modified by the buyer, or if other than genuine Eastman belts, emery wheels, knives or parts are used in the machine. THIS WARRANTY IS THE ONLY WARRANTY APPLICABLE TO THIS PURCHASE. SELLER DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Limitation of Liability. Eastman's liability to the buyer, and the buyer's remedies from Eastman, whether in contract, negligence, tort, under any warranty or otherwise, shall be limited to the remedies provided in the foregoing Limited Warranty. In no event shall Eastman have any responsibility or liability to the buyer for (a) any special, indirect, incidental, or consequential damages, including, but not limited to, loss of use, revenue, or profit, even if Eastman has been advised of the possibility of such damages, or (b) any claim against the buyer by any third party. The price stated for the product sold is a consideration for limiting Eastman's liability.